


HONDA **INSTALLATION** **INSTRUCTIONS**

Accessory
ALUMINUM A-ARM GUARD
(FRONT)
P/N 08P72-HL3-600

Application
SXS700M2/M2D/M4/M4D

Publication No.
MII 15753
 Issue Date
August 2016

PARTS LIST

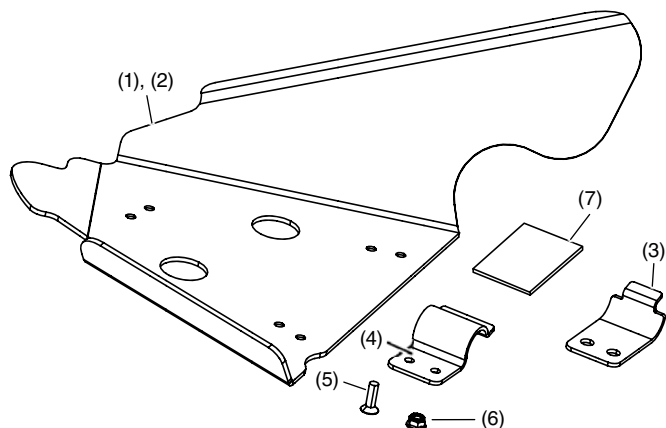

No.	Description	Qty
(1)	Front right A-arm guard	1
(2)	Front left A-arm guard	1
(3)	Bracket A	6
(4)	Bracket B	6
(5)	6 x 20 mm screw	12
(6)	6 mm nut	12
(7)	Rubber strip	2
(8)	Installation Instruction URL (not shown)	1

TOOLS AND SUPPLIES REQUIRED

Torque Wrench
 10 mm Socket
 Phillips Screwdriver
 Ratchet

TORQUE CHART

Tighten all screws, bolts and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
6 mm nut	10	1	7


USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.


INSTALLATION

1. Wrap the rubber strip around the A-arm cross member as shown.

<LEFT A-ARM, TOP VIEW>

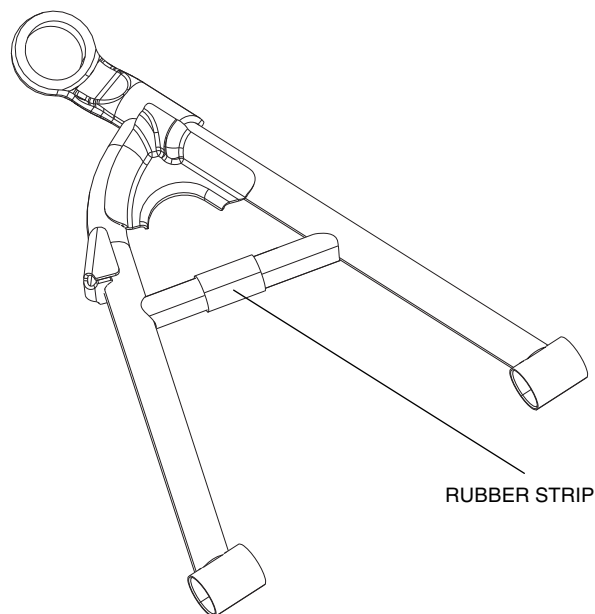


2. Assemble the bracket over the rubber strip by inserting the tab of bracket B through the slot in bracket A. Place the assembled bracket around the left A-arm cross member as shown.

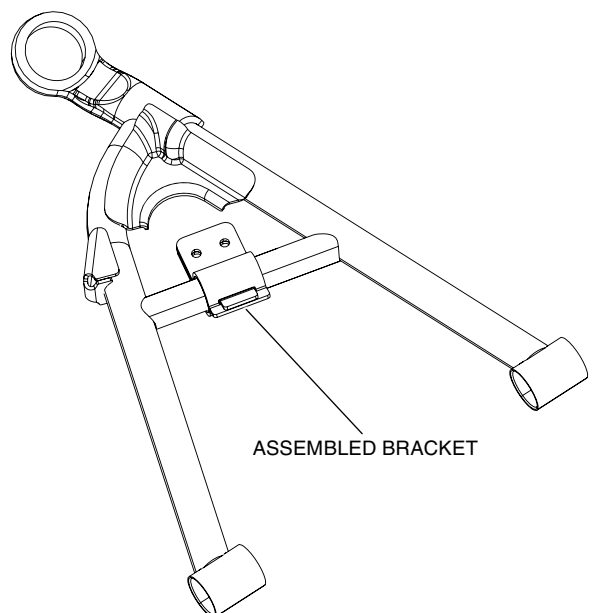


3. Place the A-arm guard along the front left A-arm as shown.


< VIEW FROM BOTTOM >

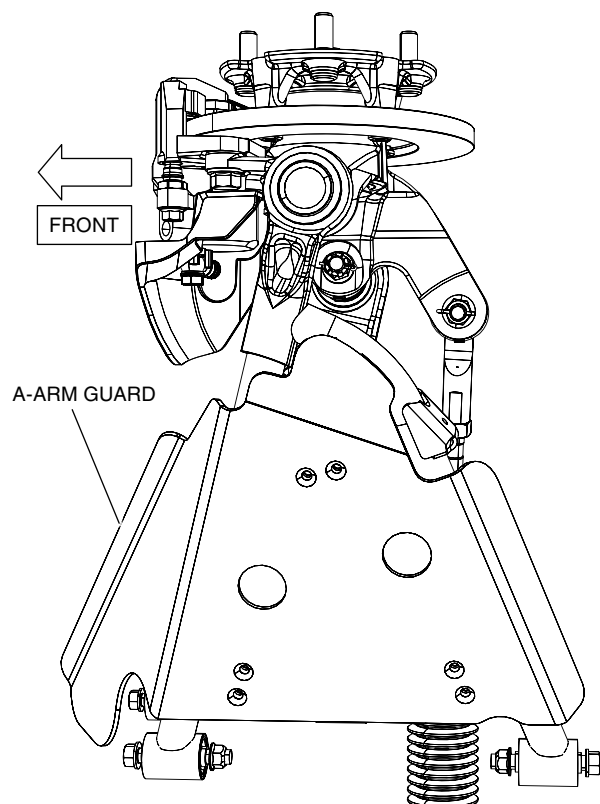


< TOP VIEW >

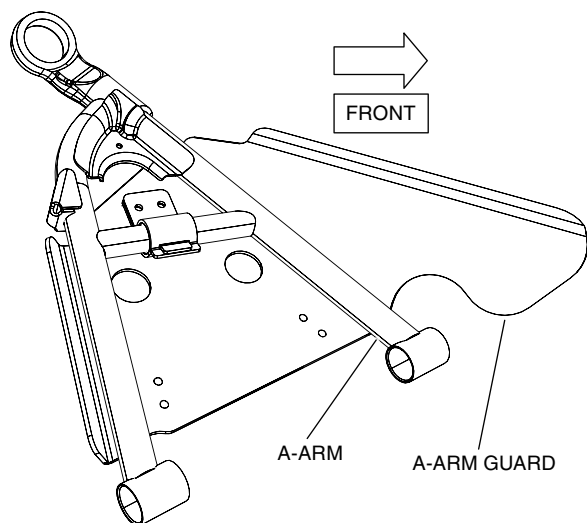


4. Pass two 6 x 20 mm screws through the countersunk holes in the A-arm guard and the assembled bracket as shown.

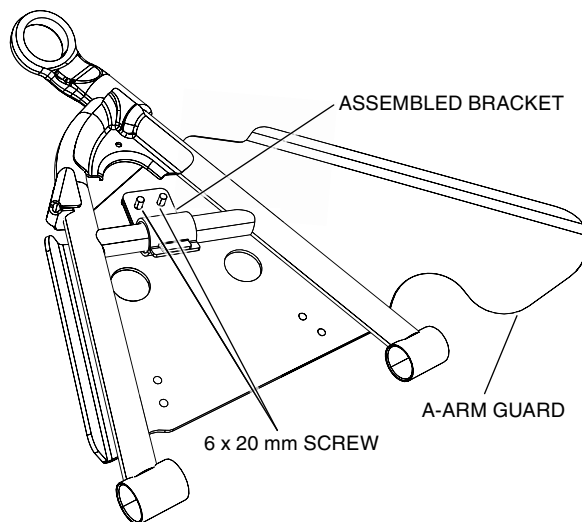


5. Install a 6 mm nut onto each screw and tighten until the bracket loosely contacts the A-arm guard.

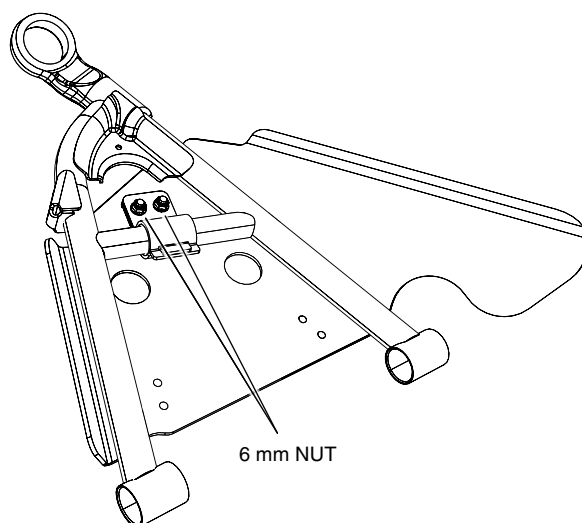

6. Assemble the remaining two brackets as shown.

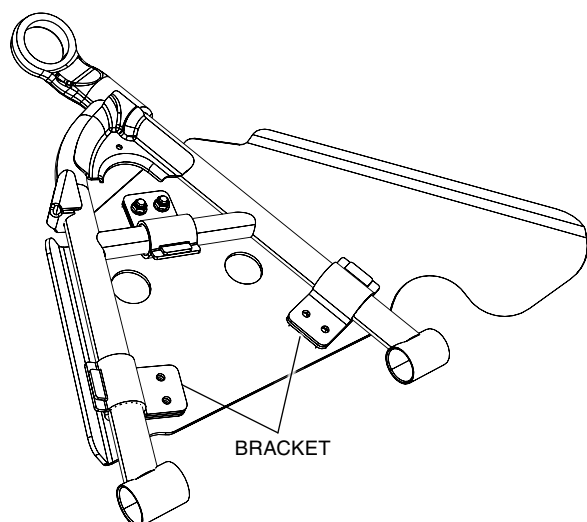

7. Repeat Steps 4 and 5 for the two remaining brackets.

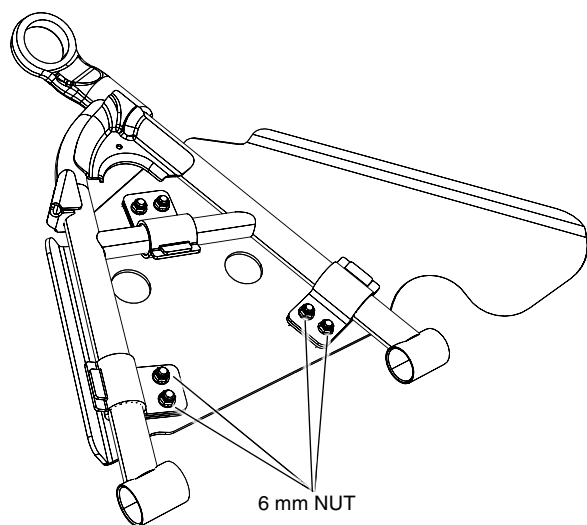

8. Once all brackets are loosely attached, tighten all hardware to the value specified in the Torque Chart.
9. Repeat Steps 1 thru 8 to install the guard on the right A-arm.