


INSTALLATION INSTRUCTIONS	Accessory	Application	Publication No.
	A-ARM GUARD (FRONT) P/N 08P73-HL3-A00	SXS700M4/M2	MII 14607
			Issue Date August 2013

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

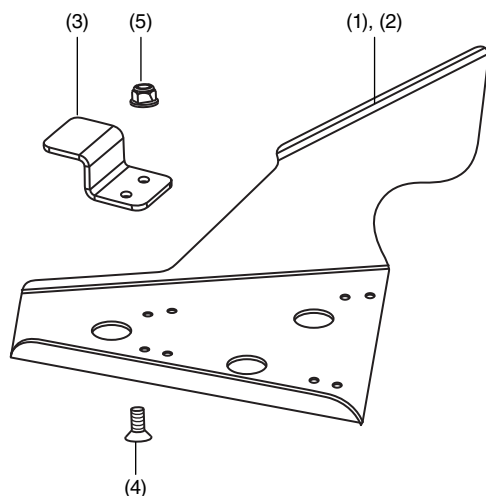

No.	Description	Qty
(1)	Front right arm guard	1
(2)	Front left arm guard	1
(3)	Front guard bracket	8
(4)	6 x 20 mm flat screw	16
(5)	6 mm U-nut	16

TOOLS AND SUPPLIES REQUIRED

Torque Wrench
10 mm Socket
Phillips Screwdriver
Ratchet

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
6 mm U-nut	10	1	7


USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.


INSTALLATION

- Place the left guard along the front left A-Arm as shown.


< BOTTOM VIEW >

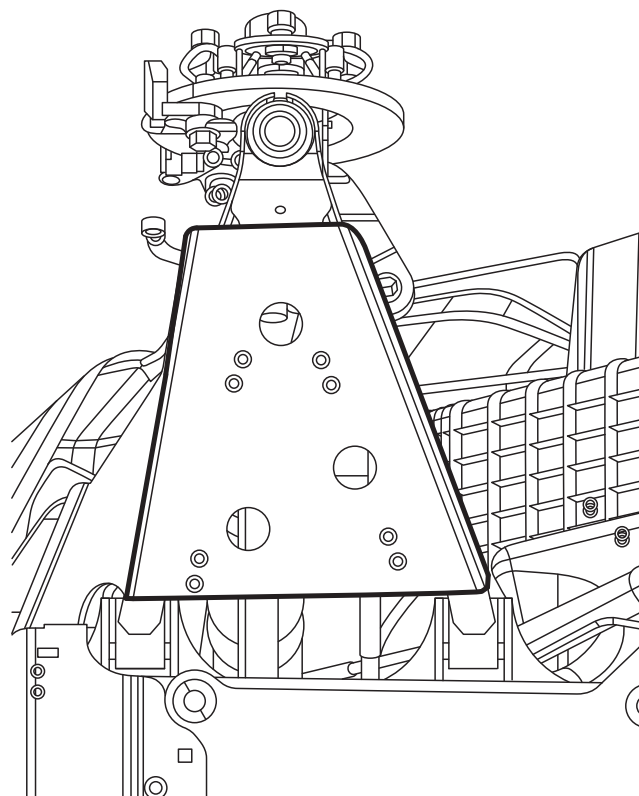


< TOP VIEW >

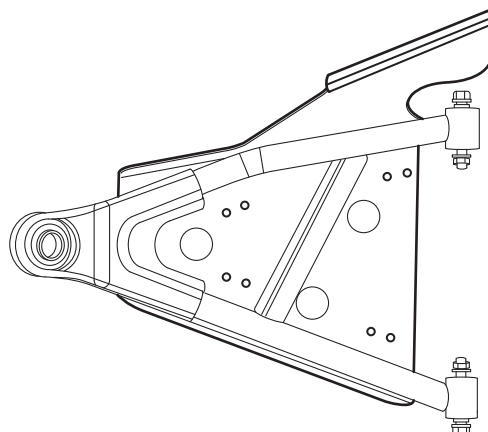


2. Insert two screws into two of the countersunk holes as shown.

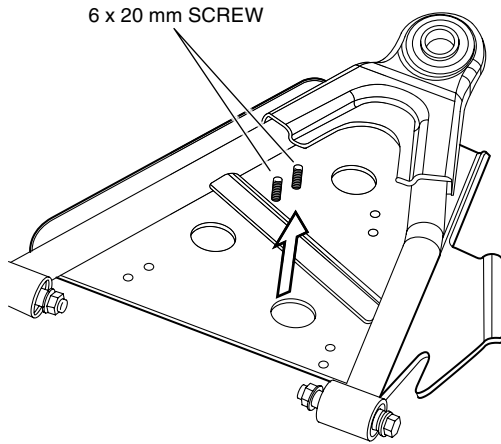


3. Position a bracket over the two screws and over the A-arm as shown.

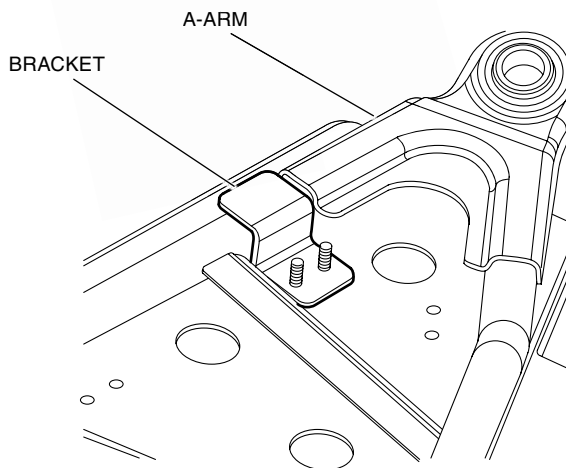

4. Thread a U-nut onto each screw and tighten them until the bracket loosely contacts the A-arm.

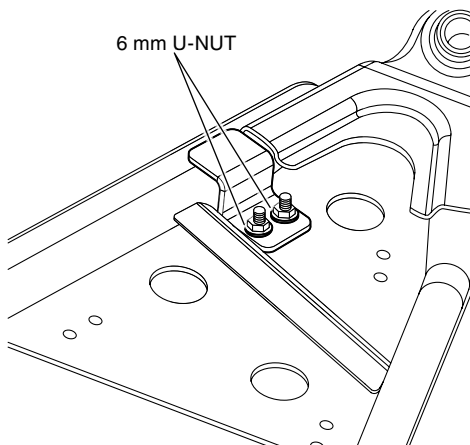

5. Repeat steps 2 through 4 for the three remaining brackets.
6. Once all of the brackets are hand-tight, align the position of the guard as shown. Tighten the nuts to the torque specified in the torque chart.

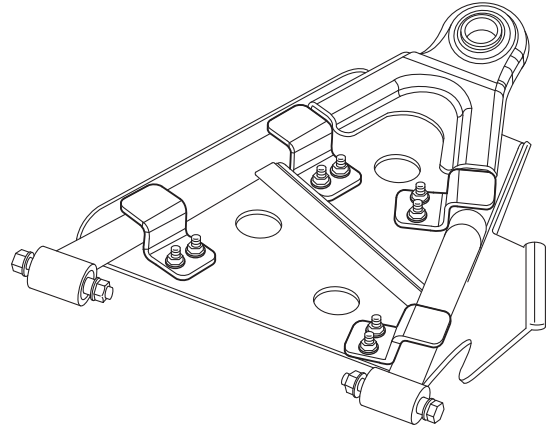

7. Repeat steps 1 through 6 for installing the guard on the right A-arm.