


INSTALLATION INSTRUCTIONS	Accessory	Application	Publication No.
	A-ARM GUARD (REAR) P/N 08P74-HL3-A00	SXS700M4/M2	MII 14607
			Issue Date August 2013

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

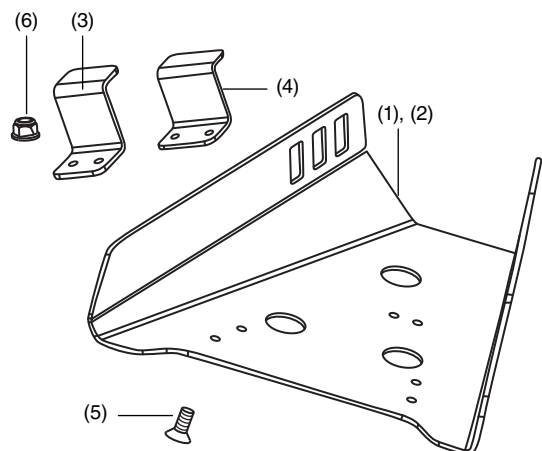

No.	Description	Qty
(1)	Rear right arm guard	1
(2)	Rear left arm guard	1
(3)	Rear guard bracket A (wide)	4
(4)	Rear guard bracket B (narrow)	2
(5)	6 x 20 mm flat screw	12
(6)	6 mm U-nut	12

TOOLS AND SUPPLIES REQUIRED

Torque Wrench
10 mm Socket
Phillips Screwdriver
Ratchet

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
6 mm U-nut	10	1	7


USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.


INSTALLATION

NOTE:

- There are two different brackets in the Rear A-Arm Guard kit. Bracket B is narrower and taller than bracket A. Each bracket has a specific bolt hole width to prevent incorrect installation.

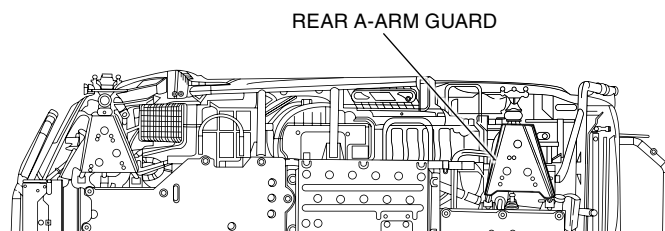


- Place the left guard along the rear left A-Arm as shown.

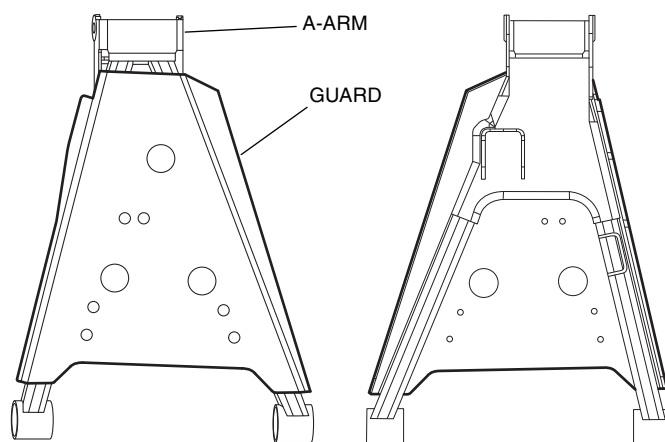


- Insert two screws through the holes closest to the wheel.


<TOP VIEW>

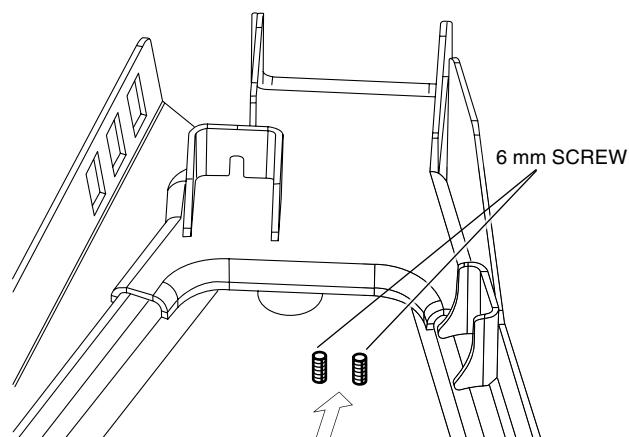


3. Position bracket B over the two inserted screws.

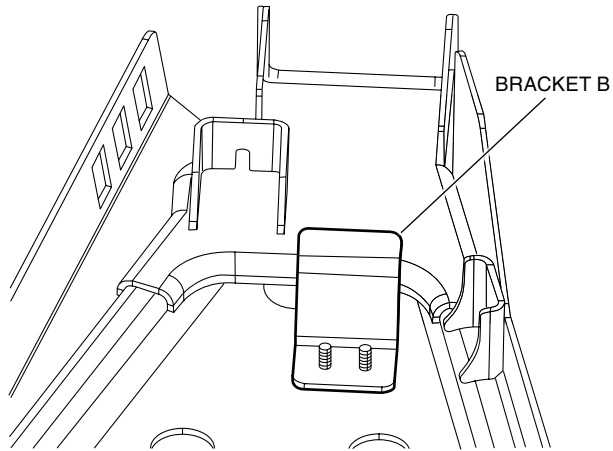

4. Thread U-nuts onto the screws and tighten them until the bracket loosely contacts the A-Arm.

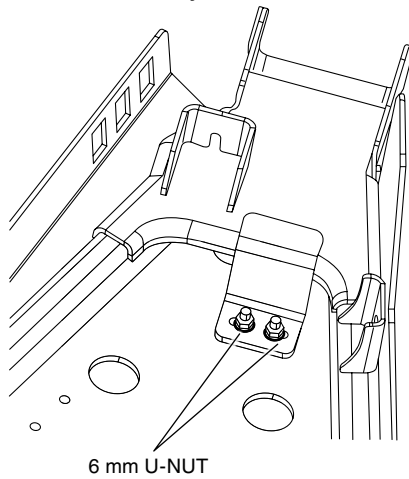

5. Repeat steps 2 through 4 for both remaining brackets A.
6. Align the guard as needed, then tighten all the nuts to the torque specified in the torque chart.

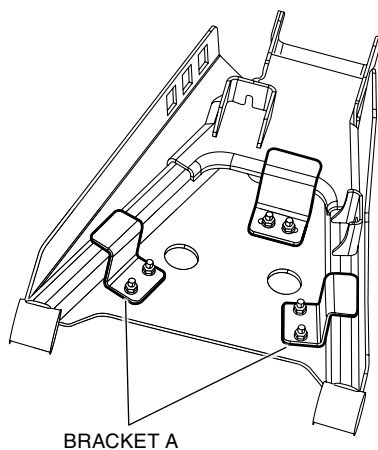

7. Repeat steps 1 through 6 for the right side.