



INSTALLATION INSTRUCTIONS

Accessory

**HARD ROOF
P/N 08R70-HL5-A01**

Application

SXS500M2

Publication No.


MII 14948

Issue Date

June 2014

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

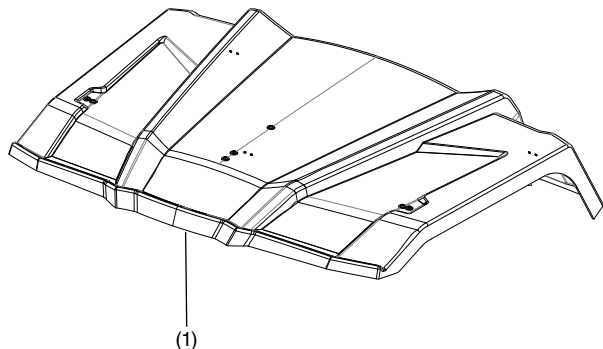

No.	Description	Qty
(1)	Roof	1
(2)	Clamp*	5
(3)	Washer*	13
(4)	6 mm screw*	13
(5)	Bracket*	1
(6)	6 mm nut*	3

* The roof will arrive fully assembled with these parts included.

TOOLS AND SUPPLIES REQUIRED

4 mm hex wrench

Torque wrench

10 mm open-end wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.


Item	N·m	kgf·m	lbf·ft
6 mm screw and nut	4.5	0.46	3.3

USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, and then wash with warm, soapy water and a clean cloth or sponge.
- Do not use a brush to clean this accessory as it may scratch the surface.
- Never use petroleum solvents such as gasoline, thinner, or benzene to clean this accessory. Also do not use acid or alkaline cleaners.


NOTE

- If installing a complete cab, install the accessory rear panel and windscreen before installing the roof.
- If installing accessory fabric doors, install them after installing the roof.
- Remove and discard the rubber shipping spacer from the cam lock before installation of this accessory.

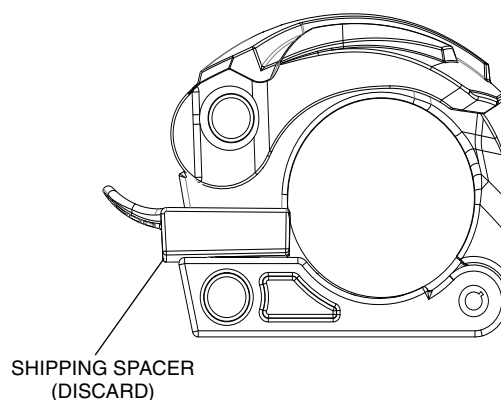


INSTALLATION

1. Open all five clamps on the underside of the roof.
2. Place the roof on the top of the cab frame and align the clamps around the the cab frame bars.

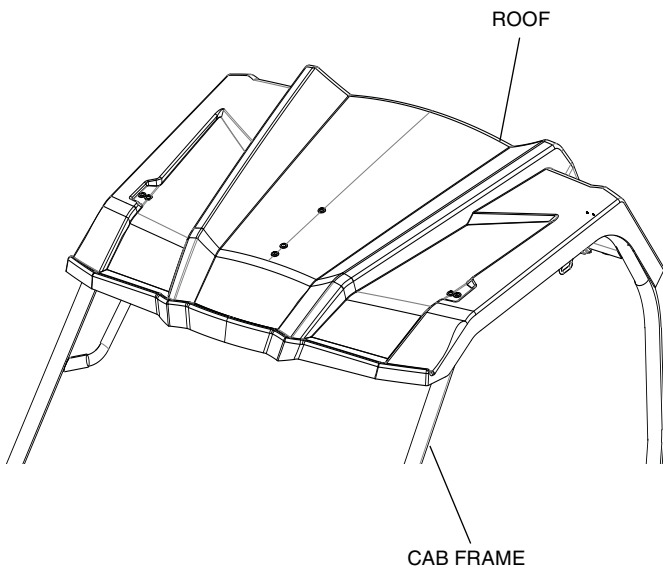


3. Check that the roof is centered over the cab frame:
 - There should be no bulging near the base of the clamps or along the edges of the roof panel.

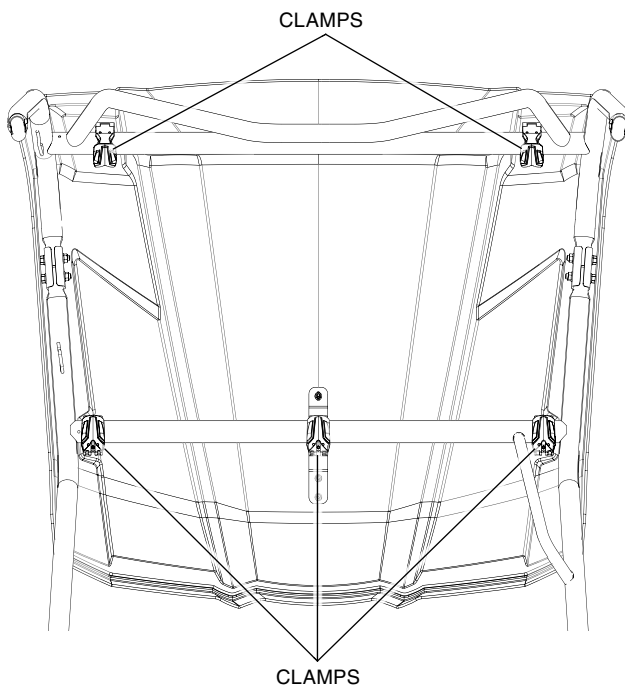

4. Adjust clamp tension by rotating the threaded arm clockwise to tighten, counter-clockwise to loosen.

THREADED ARM

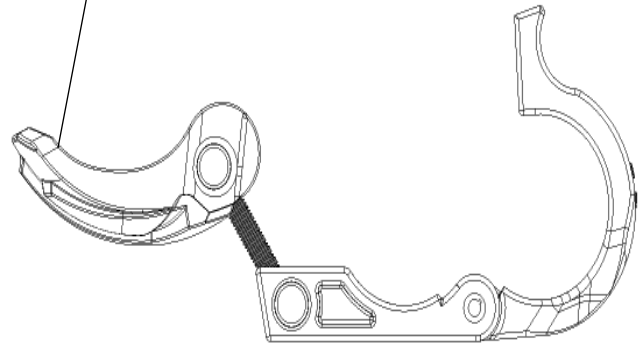

5. Swing the threaded arm over the top half of the clamp and snap the arm closed.

