



INSTALLATION INSTRUCTIONS

Accessory

FLAG WITH MOUNT
P/N 0SR95-HL4-F10

Application

SXS1000M3/M5/M6

Publication No.


MII 15262

Issue Date

Revised: August 2022

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

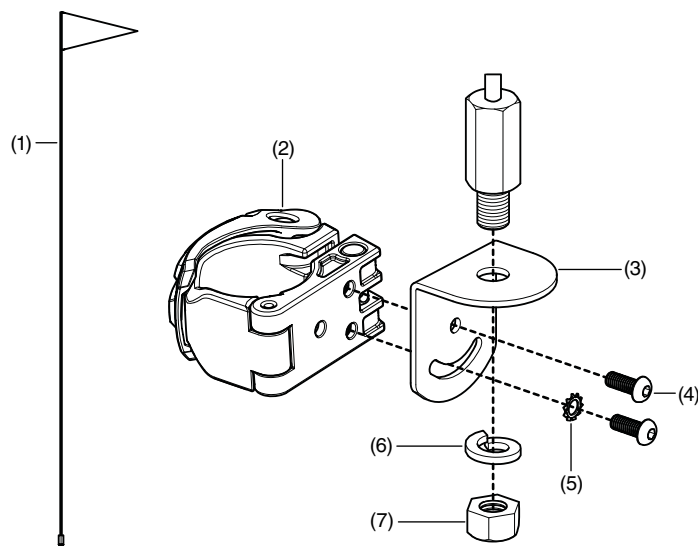

No.	Description	Qty
(1)	Flag	1
(2)	Clamp	1
(3)	Bracket	1
(4)	6 mm screw	2
(5)	6 mm serrated washer	1
(6)	Lock washer	1
(7)	Nut	1
(8)	Installation Instruction URL (not shown)	1

TOOLS AND SUPPLIES REQUIRED

Hex wrench (4 mm)

Open-end wrench (3/4 in)

Torque wrench

TORQUE CHARTS

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N•m	kgf•m	lbf•ft
Nut	47	4.84	35
6 mm screw	6.8	0.69	5

USE AND CARE INFORMATION


- Check the accessory mounts frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, and then wipe with a clean cloth or sponge.
- Do not use a brush to clean this accessory as it may scratch the surface.
- Never use petroleum solvents such as gasoline, thinner, benzene, acid, or alkaline cleaners.

NOTICE


- The flag can be damaged by high winds during transportation. Remove the flag before transporting or trailering the vehicle.
- Check local laws before installing this flag kit to ensure you are not exceeding any maximum height limits.

INSTALLATION

1. Remove the nut and lock washer that are threaded onto the flag rod.
2. Assemble the bracket onto the flag rod. Re-install the lock washer and nut onto the flag rod.

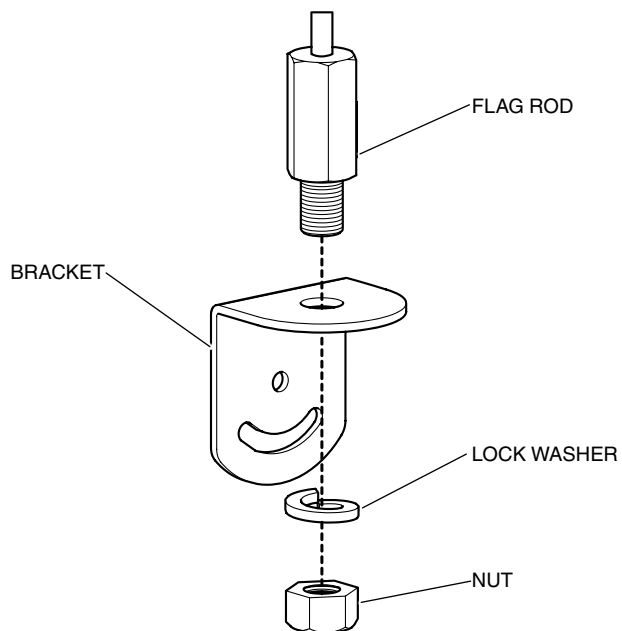

3. Install a screw through the hole in the bracket and into the clamp as shown.
4. Install a screw and serrated washer through the bracket slot and into the clamp as shown.
5. Note the clamp orientation to the bracket and tighten the screws when the correct flag angle is achieved.

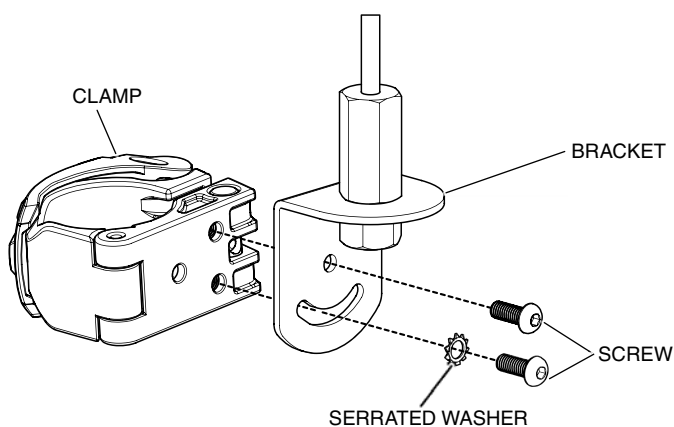

6. Clamp the assembled flag onto the rear frame bar in the desired location.

Adjust the clamp tension by rotating the treaded arm clockwise to tighten, conter-clockwise to loosen.

