

BACKREST

Accessory Name	Parts Number	Application Model	Issue Date	Publication No.
BACKREST	08F00-MJP-G50	SCL500	May 2023	MII 17974
TOP BOX	08L70-K1T-A10			

Introduction

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS, ATVS and SXS's.

Honda Dealer:







Please give a copy of these instructions to your customer.

Customer:

Because this accessory requires specialized knowledge, special tools and equipment, it is recommended to only install it at a dealer with qualified technicians.

How To Read These Symbols

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual.

-  **WARNING** You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
-  **CAUTION** You CAN be HURT if you don't follow instructions.
-  **NOTICE** The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.
-  **NOTE** Things you want to know, things that are useful to know.
-  Follow the instructions of the Service Manual.
-  Follow the other symbol instructions of the "Basic Shop Manual".

Other Instruction Symbols

The symbols used throughout these instructions show specific "Warnings and Notices". Refer to the "Basic Shop Manual" for the description of each symbol.

INFORMATION


⚠ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.


NOTE:

- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.

PARTS LIST

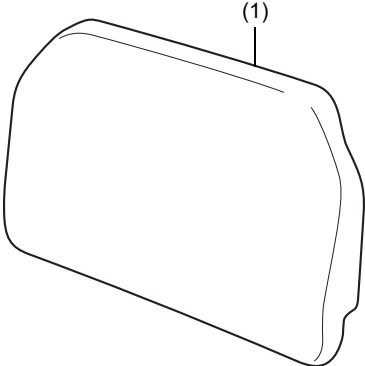
Component	No.	Parts Name	Qty	Parts No.
	(1)	Backrest	1	08F00-MJP-G50

<TOP BOX>

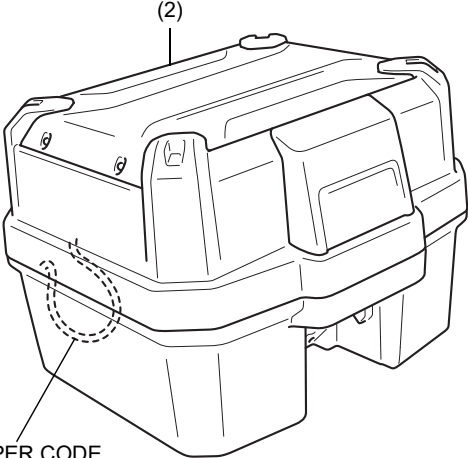
Component	No.	Parts Name	Qty	Parts No.
	(2)	Top box	1	08L70-K1T-A10
		Stopper code	1	08L01-HAC-D00

INSTALLATION


INSTALLATION IMAGE

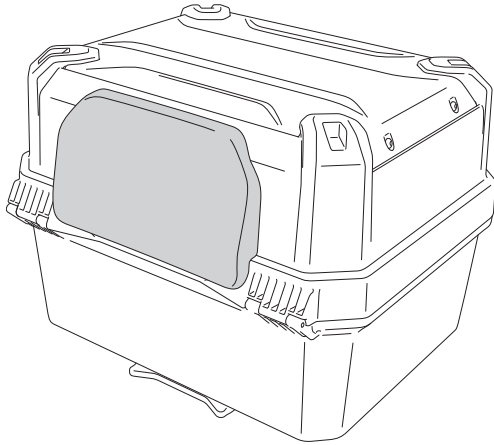


1. Clean the surface of the area shown using an isopropyl alcohol.

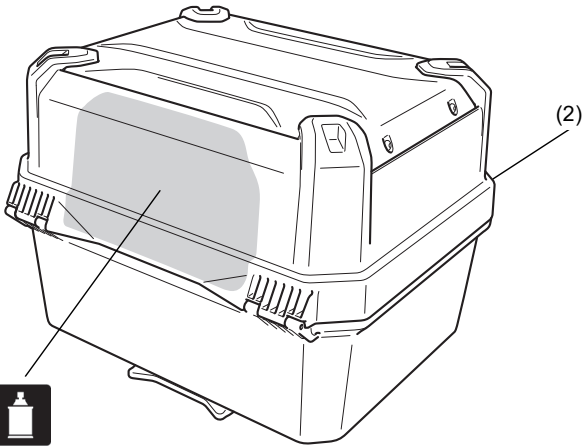


2. Remove the adhesive backing as shown.

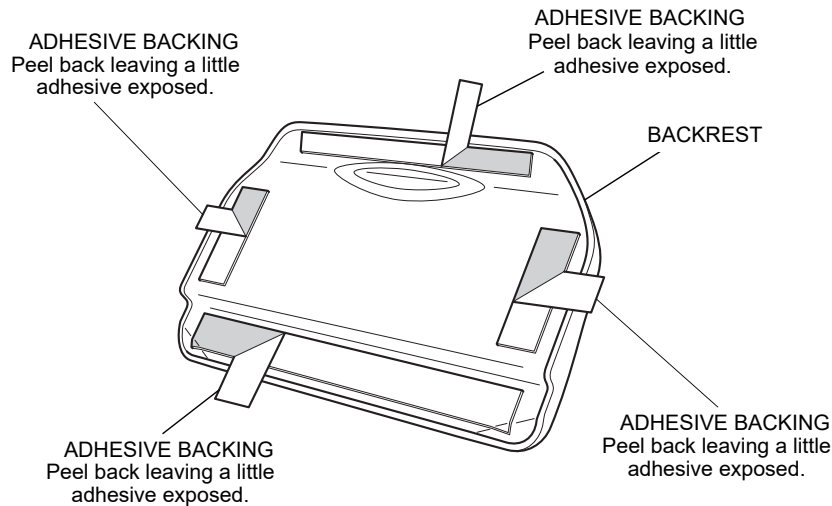

3. Attach the part as shown.
- Align the part with the shape of the top box and press securely.

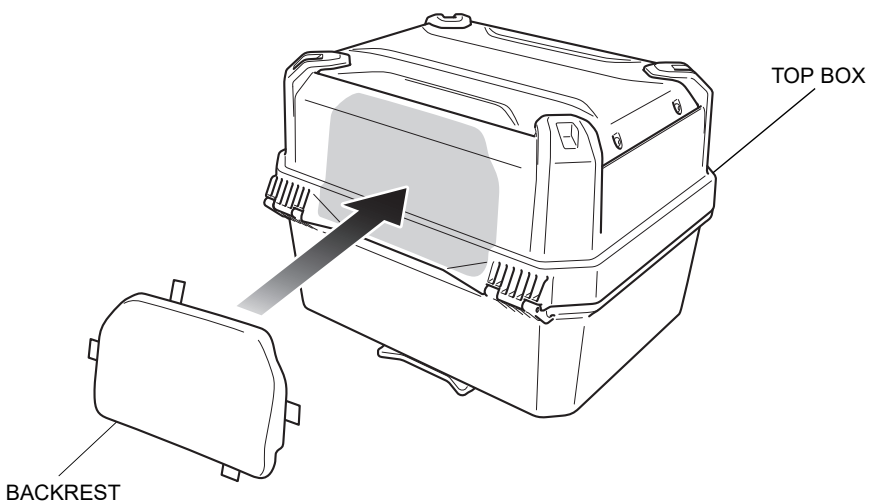

4. Pull out the backing as shown.

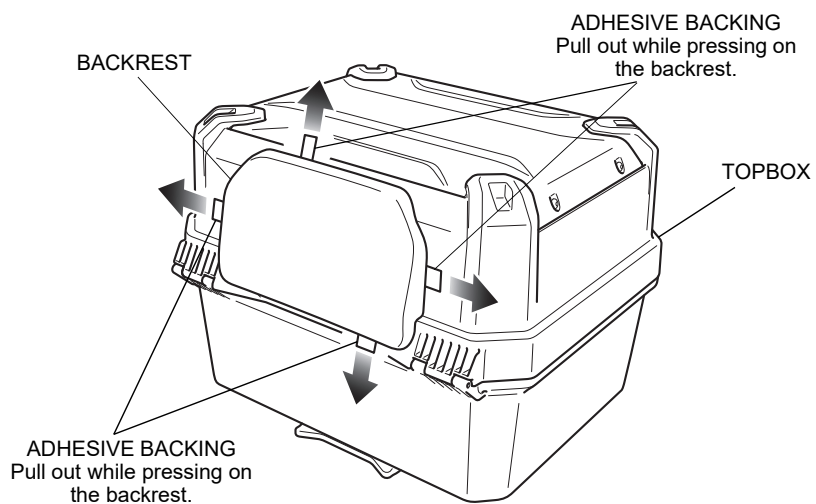

5. Apply adequate pressure to the attached part to ensure adhesion.