



INSTALLATION INSTRUCTIONS


Accessory
**UNIVERSAL CARGO
MOUNT SYSTEM**
P/N 08L09-HL1-100

Application
MUV700

Publications No.
MII 12455
Issue Date
July 2008

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

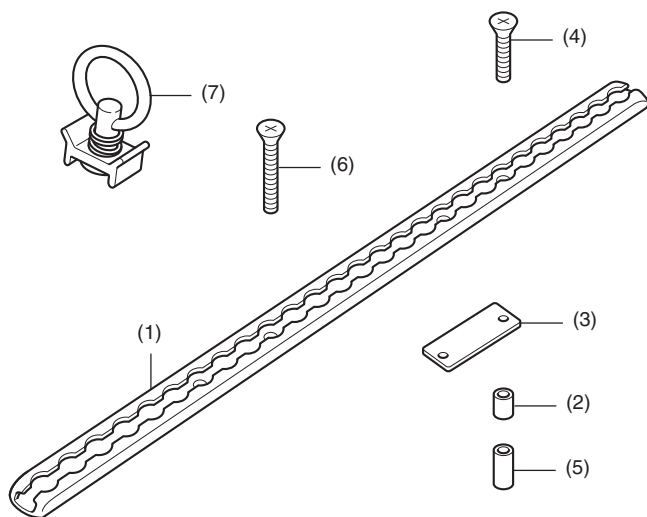

No.	Description	Qty
(1)	Cargo attachment rail	2
(2)	Collar (short)	4
(3)	Plate	4
(4)	6 mm screw (short)	8
(5)	Collar (long)	8
(6)	6 mm screw (long)	4
(7)	Stud fitting	4

TOOLS REQUIRED

Phillips ® screwdriver
Electric drill motor
Drill bit (12 mm)
Marker
Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
6 mm screw	9	0.9	6.5


USE AND CARE INFORMATION

- Always use the stud fitting enclosed with this accessory.
- The pulling load of this accessory is 588 N·m (60 kgf·m).
- The weight of this accessory is 4.4 lbs (2 kg). Always observe the maximum load capacity of the cargo bed, including the weight of this accessory.
- Installation together with the bed mat kit (P/N 08P42-HL1-100) is not possible.
- In case of installation together with the lockable tool box, move the lockable tool box out of the way and install within the installation range of this accessory.


INSTALLATION

NOTE:

- Position the accessory only where specified below.

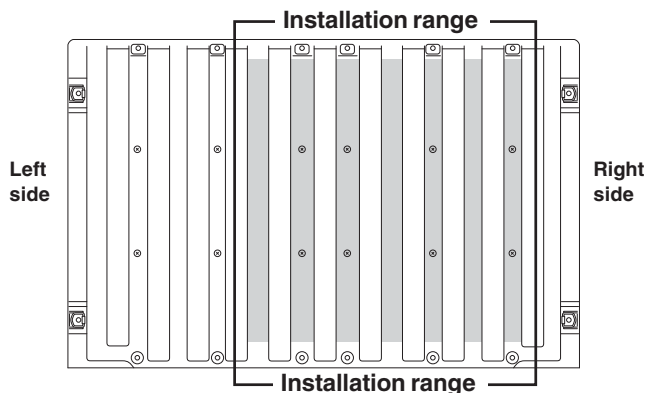

- Position the cargo attachment rail on the vehicle as shown.

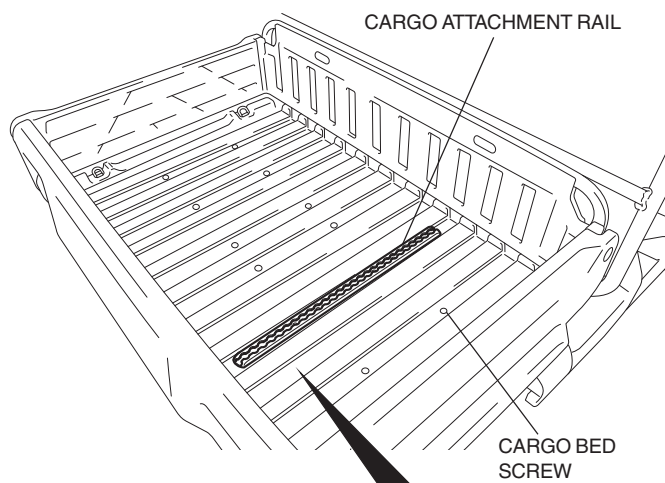

Align the concaves on the backside of the cargo attachment rail with the cargo bed screws.





CARGO ATTACHMENT RAIL


To install in a position without screws:

Position the rails on both sides of the installation place.

CARGO ATTACHMENT RAIL

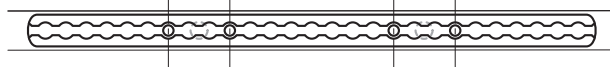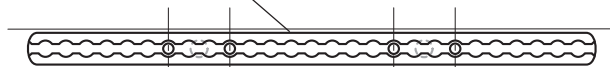


- Mark the bed in the positions shown.

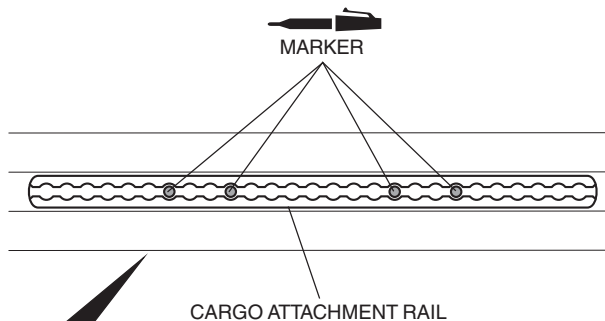


To install in a position without screws:

Align the holes in the rail with the marks as shown.

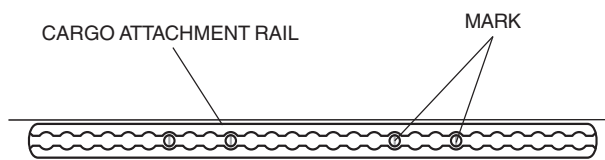


Wind the tape around the electric drill motor. Leave 18 mm from the tip of the drill motor untapped to prevent excessive drilling into the body.



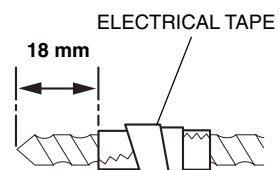


- Drill at the marked points of the bed as shown.
 - Remove any burrs from the edge of the hole.


ELECTRIC DRILL MOTOR
(12 mm BIT)

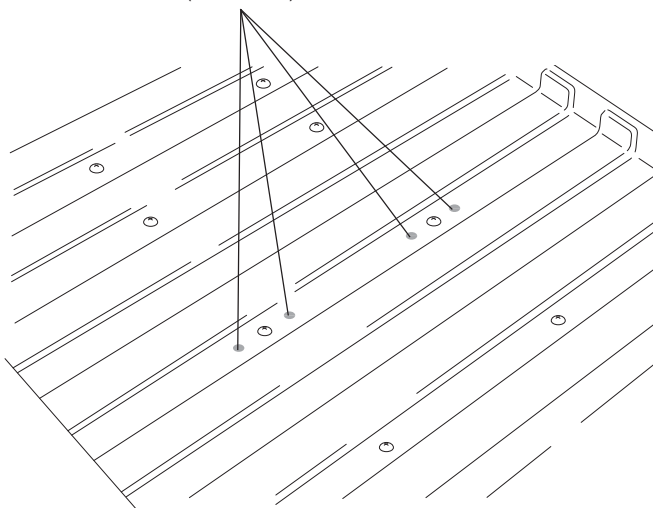

4. Install the cargo attachment rail as shown.
- **Install the cargo attachment rail by adjusting the length of the 6 mm screws and collars according to the installation position.**

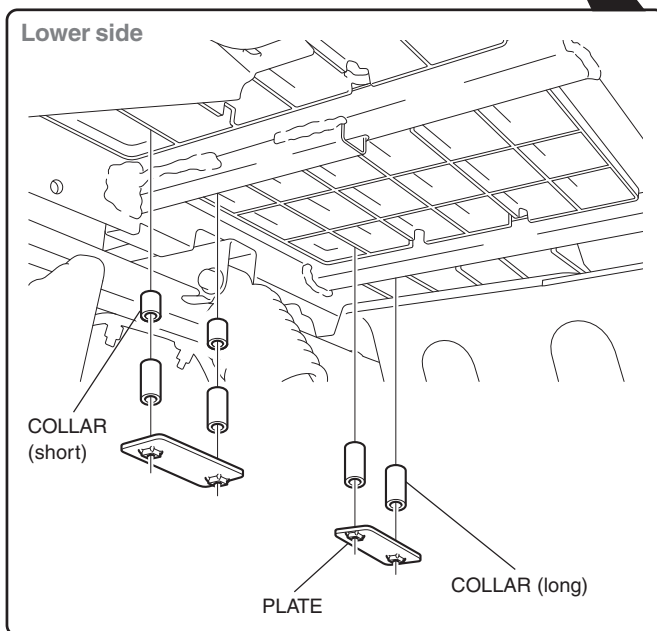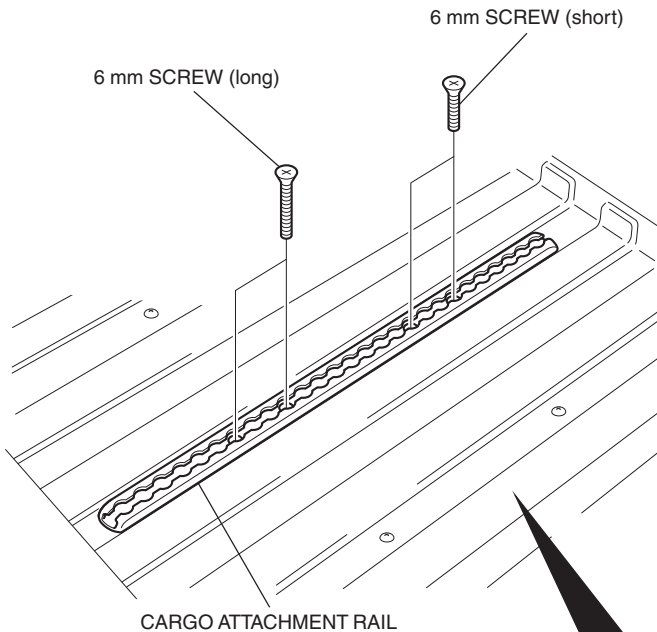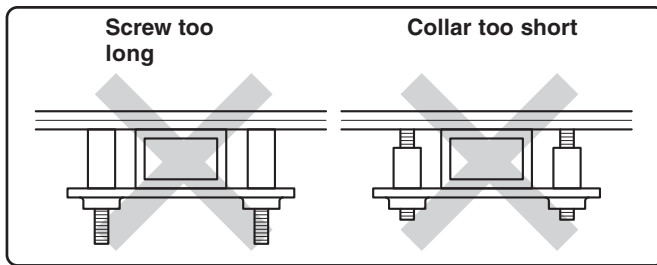

5. Install the stud fitting.

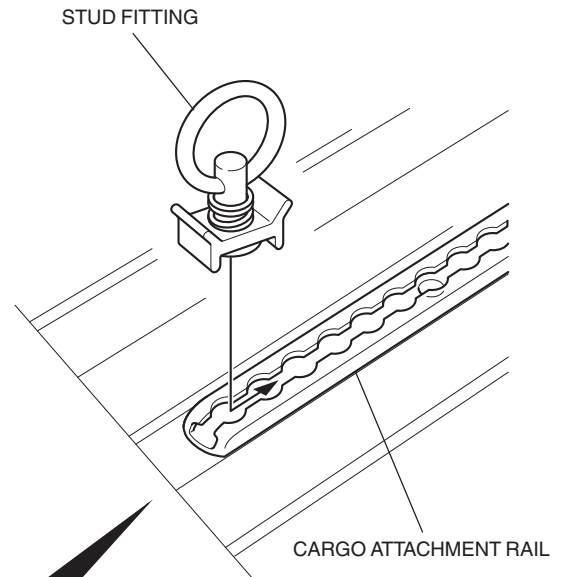

Install as shown. Be sure it is fixed securely.

