

HONDA **INSTALLATION** **INSTRUCTIONS**


Accessory
**UNDERHOOD
 STORAGE BOX (left side)**
 P/N 08L09-HL1-200B

Application
**“BIG RED”
 MUV700**

Publications No.
MII 12524
 Issue Date
August 2008

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST:

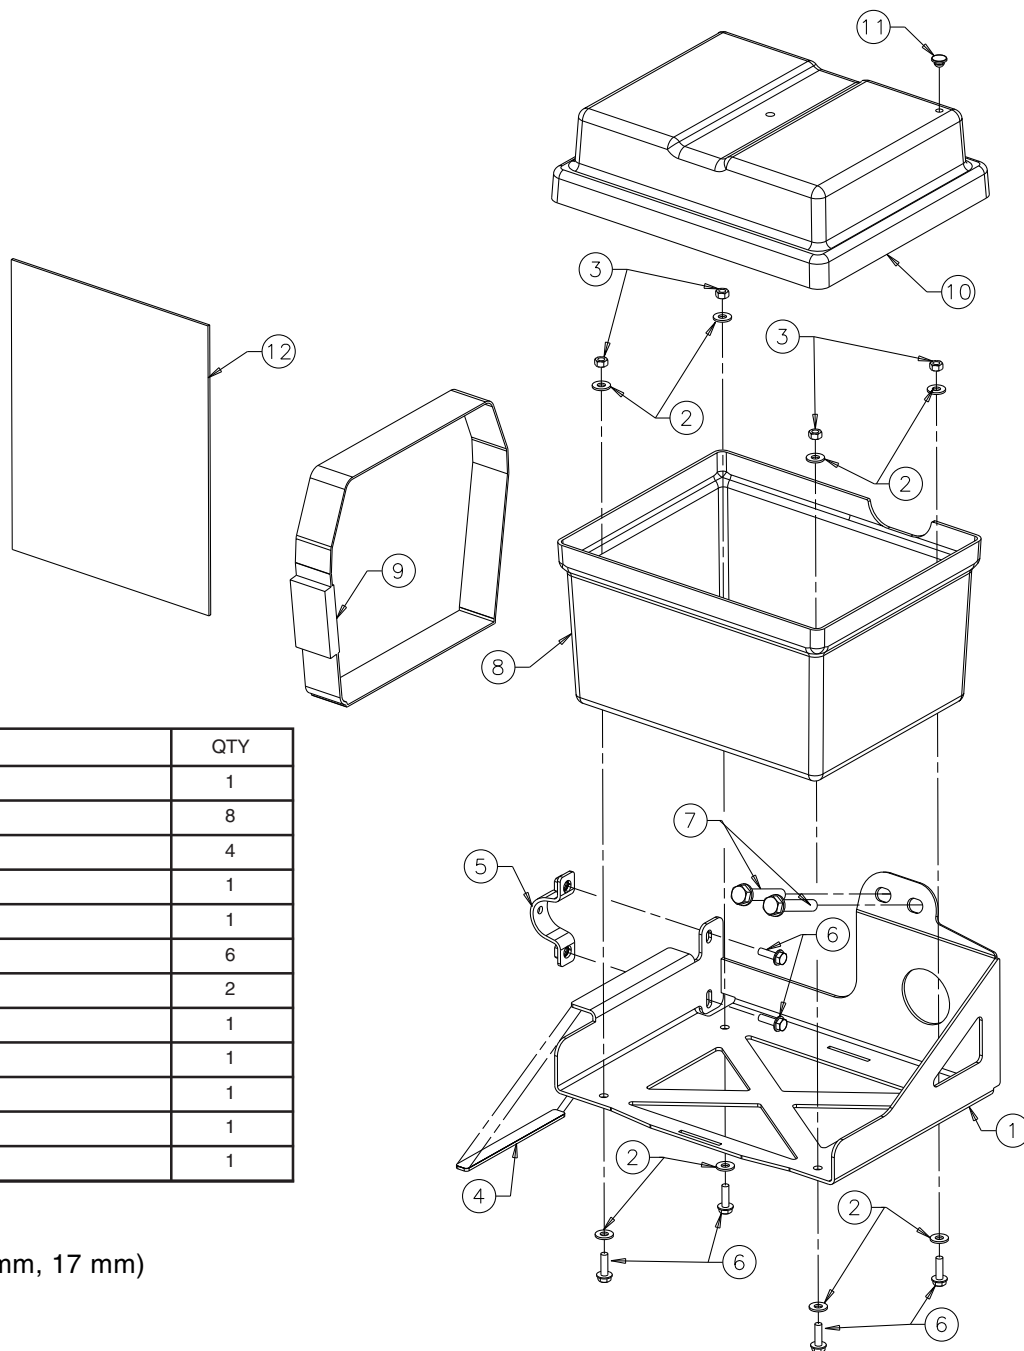

NO.	DESCRIPTION	QTY
(1)	Mounting bracket	1
(2)	6 mm flat washer	8
(3)	6 mm lock nut	4
(4)	Adhesive pad	1
(5)	Clamp	1
(6)	6 mm flange bolt	6
(7)	10 mm flange bolt	2
(8)	Box	1
(9)	Strap	1
(10)	Lid	1
(11)	Plug	1
(12)	Instructions	1

TOOLS REQUIRED

Box end wrench (10 mm, 14 mm, 17 mm)

Torque wrench


TORQUE CHART

Tighten all screws, bolts and nuts to their specified torque values. Unless otherwise noted, follow the Service Manual torque specifications for the removed parts.



Item	Nm	kgf·m	lbf·ft
6 mm bolt and nut	10	1.0	7
10 mm bolt	39	4.0	29

INSTALLATION - Underhood Storage Box Mounting Bracket Assembly


1. Locate the installation area under the left side of the hood.

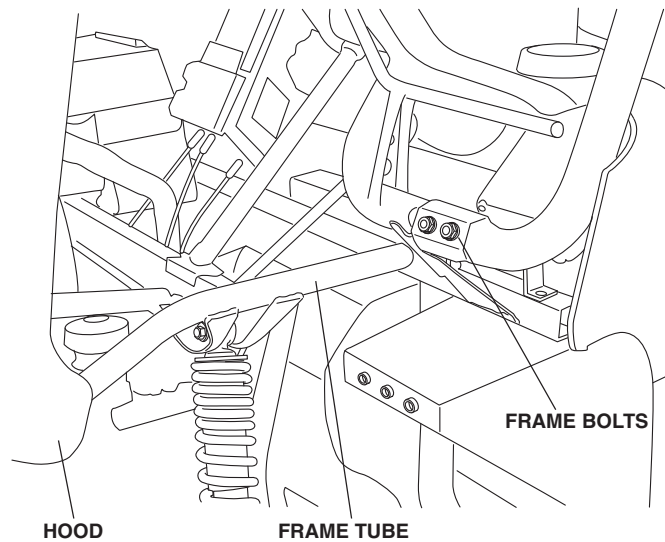


2. Remove the frame bolts and nuts (discard the bolts, save the nuts).

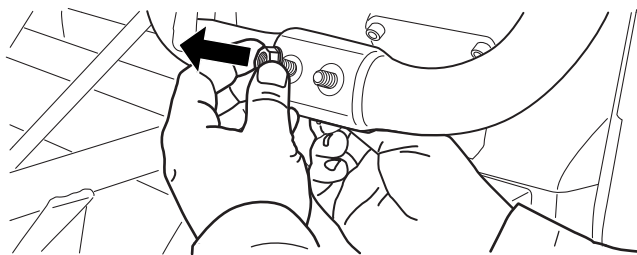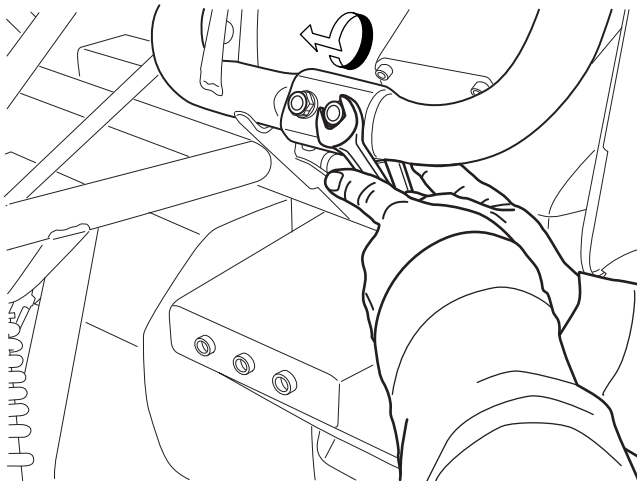

3. Peel the backing from the adhesive pad and install it on the mounting bracket.

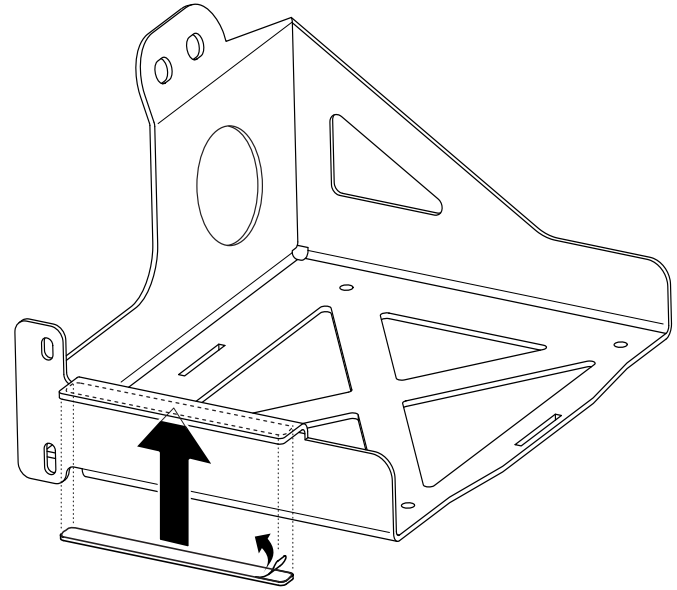


4. Temporarily install the mounting bracket with the two supplied bolts and the existing frame nuts.


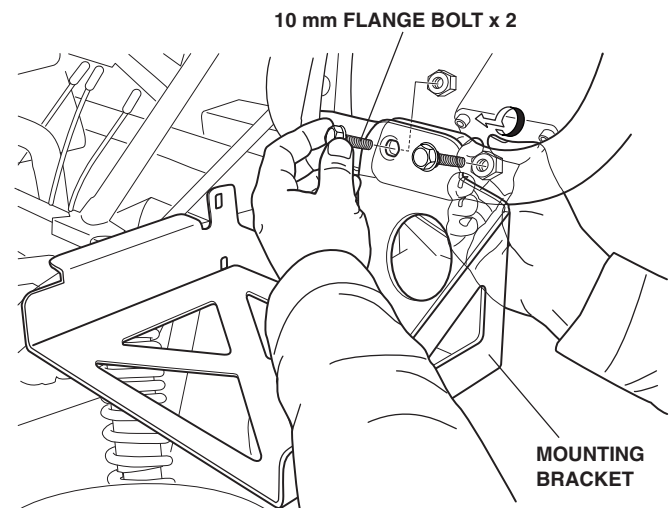


INSTALLATION - Underhood Storage Box Mounting Bracket Assembly (cont.)


5. Place the two bolts into the lower mounting bracket bolt holes.

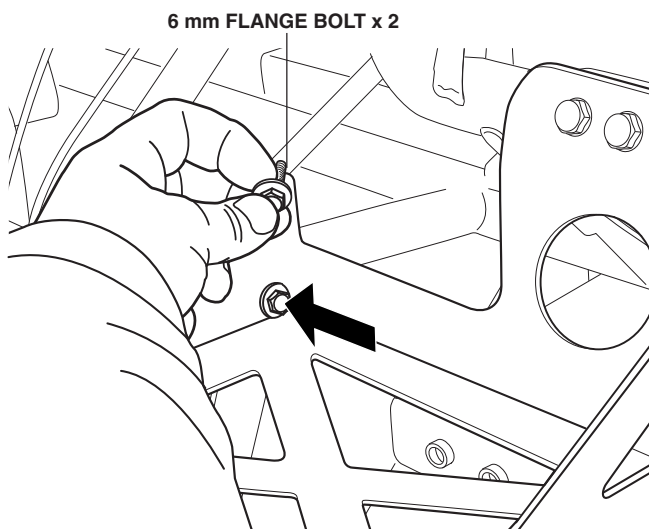

Slide the clamp underneath the mounting bracket and into position on the frame tube.

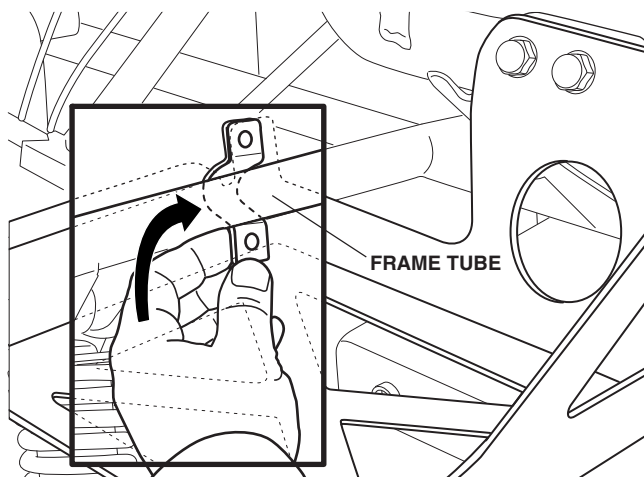
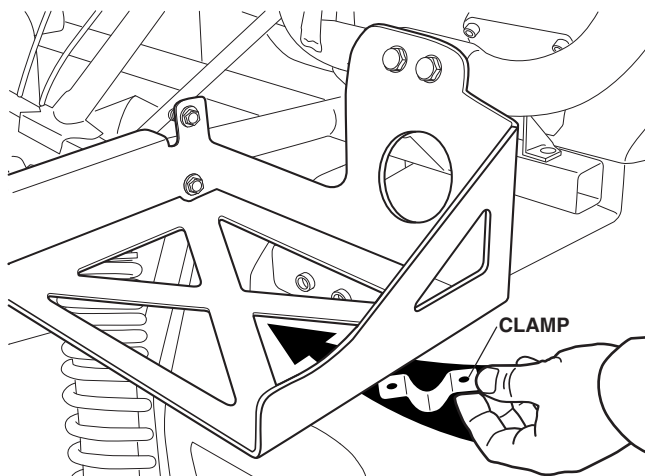


Install the clamp.

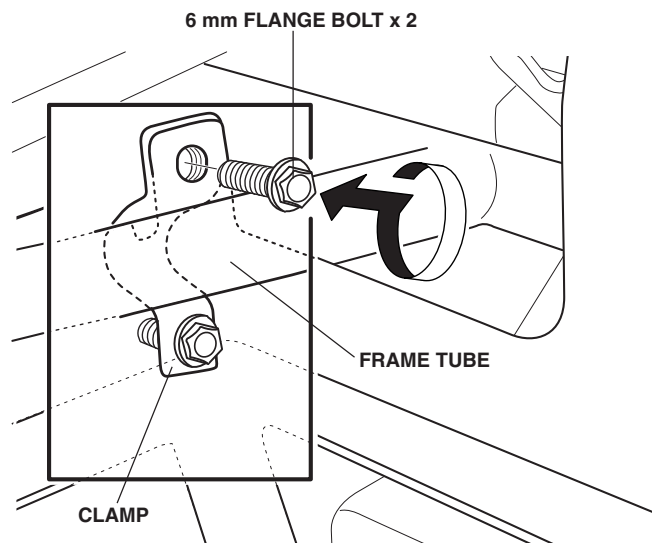

Storage Box Strap Assembly



6. Torque the clamp bolts and then the frame bolts. Refer to the torque chart on page 1.
7. Install the strap through the slots in the mounting bracket and then through the buckle.

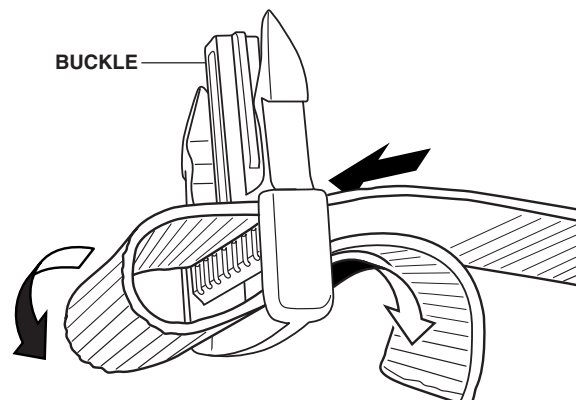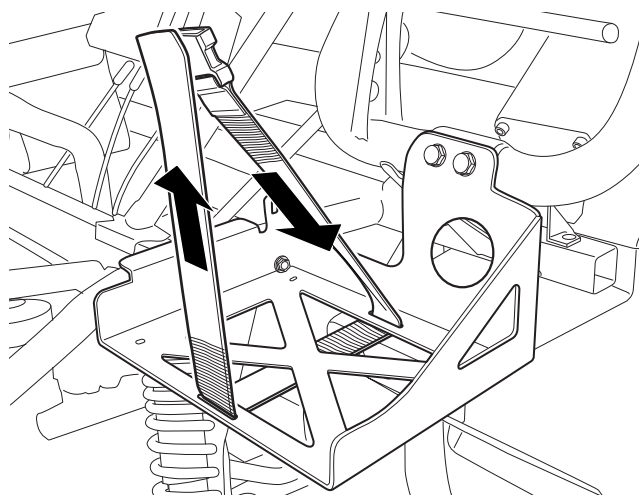

INSTALLATION - Underhood Storage Box


Storage Box Assembly

8. Position the box on the mounting bracket and install it using four bolts. Torque the bolts to the specified values listed in the torque chart on page 1.

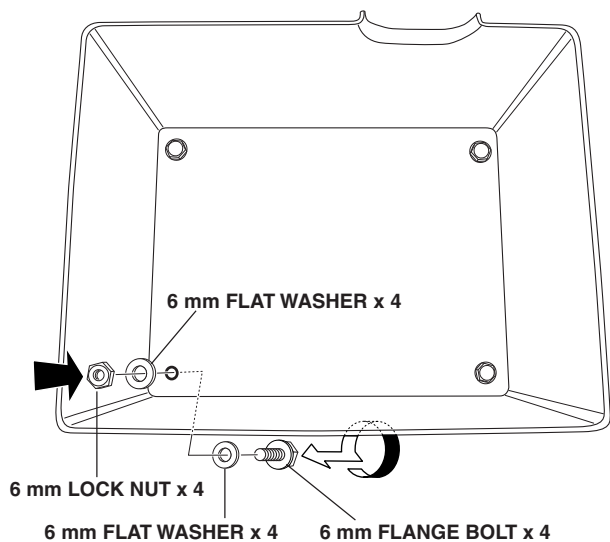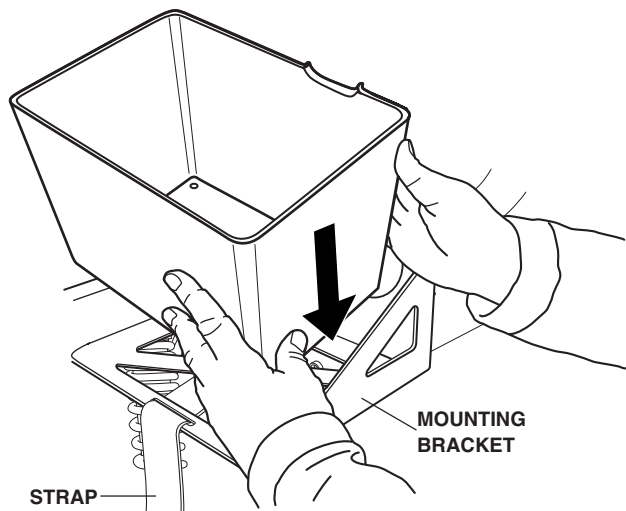


Storage Box Lid Assembly


9. Apply grease to the plug and insert it into the lid by pushing it down and twisting it.

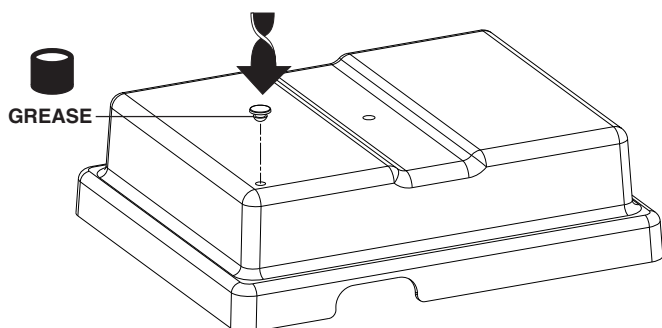

10. Position the lid on top of the box.

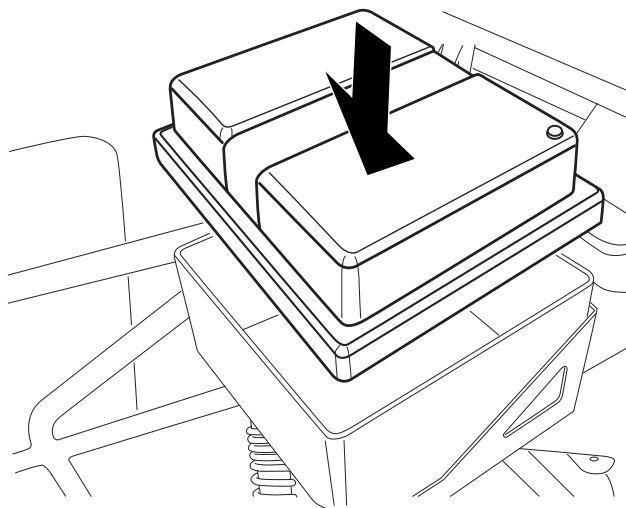

Place the strap over the box and connect the buckle.

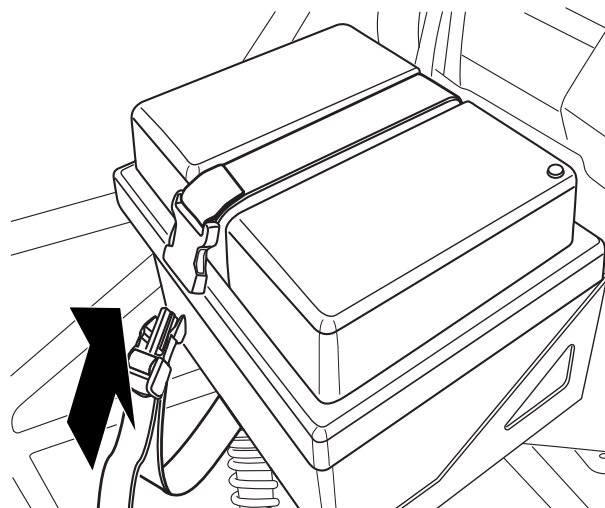

Tighten the strap.

