

HONDA

INSTALLATION INSTRUCTIONS


Accessory
PLOW MOUNT
P/N 08L70-HL3-A00

Application
SXS700M4/M2

Publication No.
MII 15249
Issue Date
REVISED June 2015

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

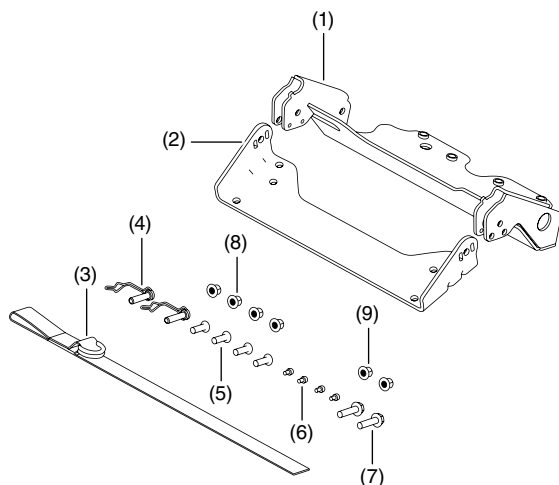

No.	Description	Qty
(1)	Mounting bracket	1
(2)	Flange bracket	1
(3)	Strap	1
(4)	Quick clamp pin	2
(5)	Pan head bolt, 10 x 1.5 x 30 mm	4
(6)	Screws, 6 x 10 mm	4
(7)	Flange bolt, 10 x 1.25 x 40 mm	2
(8)	Lock nut, 10 x 1.5 mm	4
(9)	Lock nut, 10 x 1.25 mm	2

TOOLS REQUIRED

14 mm socket
15 mm socket
14 mm wrench
15 mm wrench
5 mm hex wrench
8 mm hex wrench
Ratchet
Torque wrench
Rotary tool

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N-m	kgf-m	lbf-ft
6 mm bolt	12	1.2	8.9
10 mm bolt	39	40	28.8

USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged or discolored excessively.

NOTE


- The 10 mm hardware included in this kit has two different thread pitches.
- Match all bolts and nuts correctly before installation to avoid threading differently pitched hardware together.

INSTALLATION

- Complete Steps 1 through 4 for model year 2014 only.


- 2014 ONLY: Refer to the Service Manual for the vehicle and remove the following:
 - Front under guard
 Note that the hardware will be reused.

<2014 ONLY>

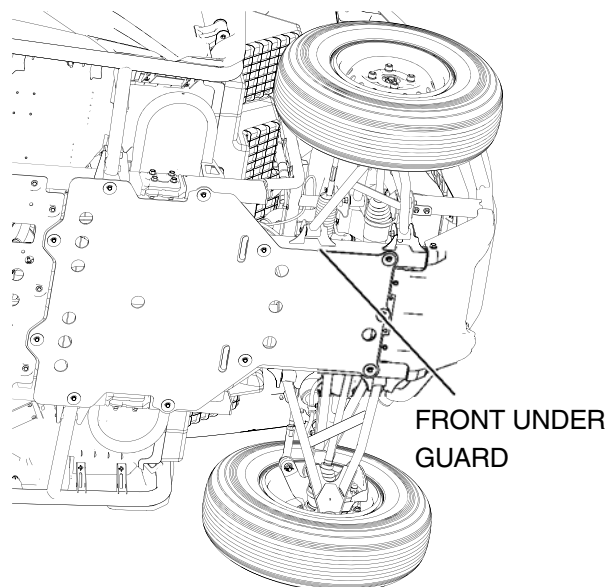

2. 2014 ONLY: Cut out and apply the template from page 5 and apply to the front edge of the front under guard.
3. 2014 ONLY: After the template has been applied, cut along the dotted line using a rotary tool.


<2014 ONLY>

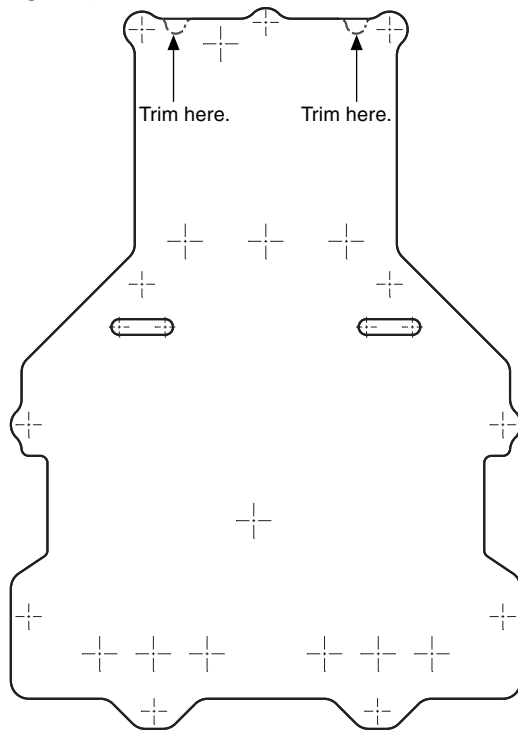


4. 2014 Only: Refer to the Service Manual for the vehicle and install the following:
 - Front under guard

Complete the remaining steps for all vehicles.


5. Remove the lower bolts from both sides of the front bumper.

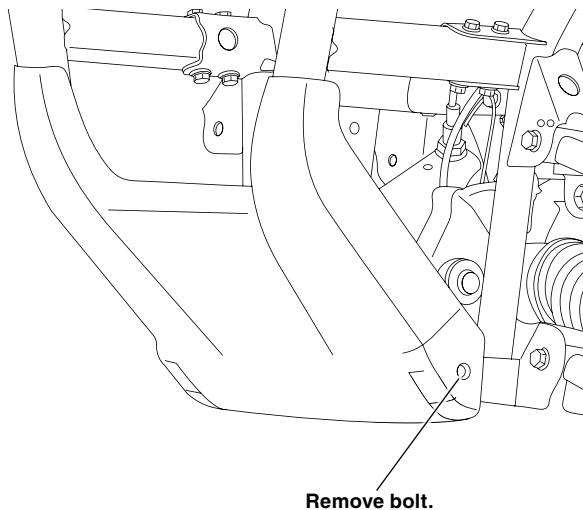


6. Place the plow bracket in the position shown.
7. Loosely install the 10 x 1.25 x 40 mm flange bolts in both sides of the lower bumper to hold the bracket in place.

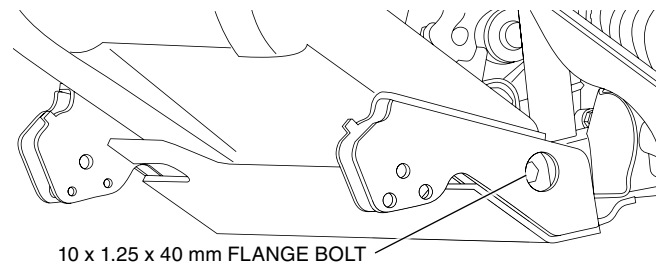


8. Begin placing the four 10 mm pan head bolts through the plow bracket in the four holes on the bottom of the vehicle.
9. Secure the bolts with a 10 x 1.5 mm lock nut on the top of each bolt and tighten them to the specification in the Torque Chart.

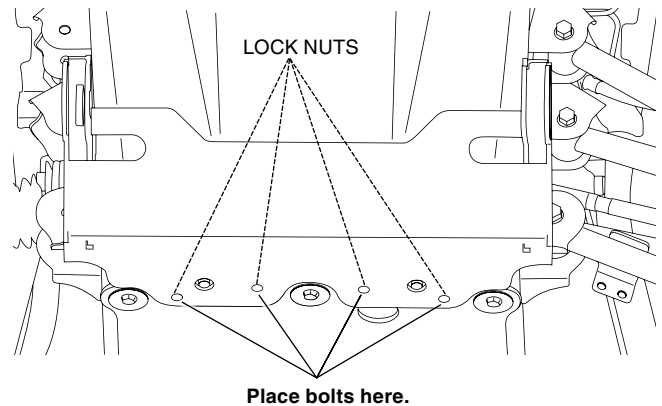


10. Tighten the lower bumper bolts that were loosely installed in Step 3 to the specification in the Torque Chart.
 - If a winch will be installed, install a 10 x 1.25 mm lock nut on the back of each lower bumper bolt.

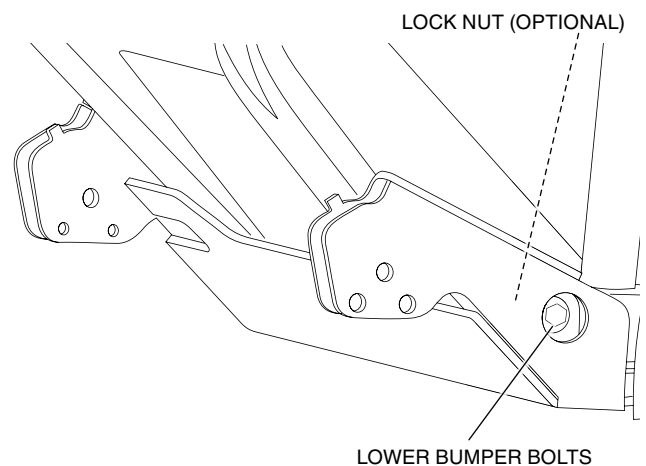

11. Install the four 6 x 10 mm bolts from the outside into the inner sides of the plow mount.

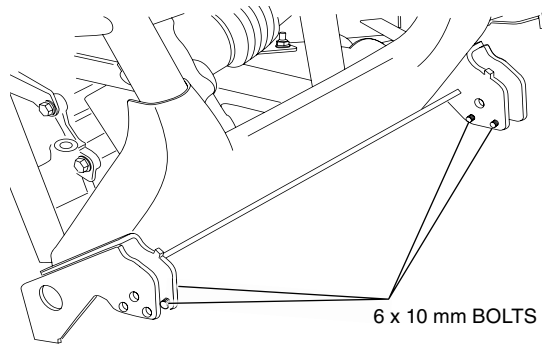

12. Place the flange bracket into place as shown and secure it with the quick clamp pins.

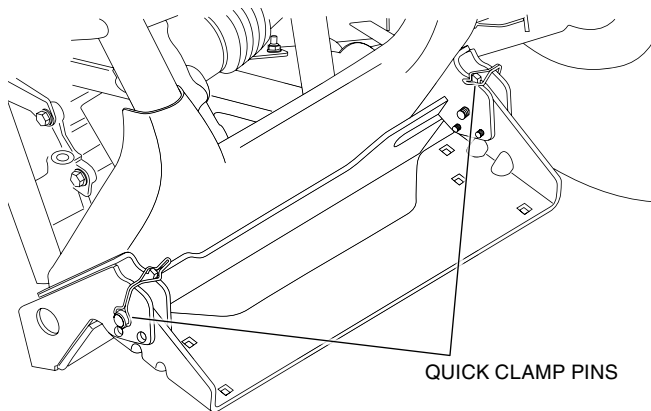

13. Proceed to the Installation Instructions included in the Warn Plow Push Tube package.

THIS PAGE LEFT BLANK
INTENTIONALLY

<TEMPLATE, 2014 ONLY>

