

HONDA


INSTALLATION INSTRUCTIONS

Accessory
PLOW MOUNT
P/N 08L73-HL5-A00

Application
SXS500M2

Publication No.
MII 14948
Issue Date
September 2014

PARTS LIST

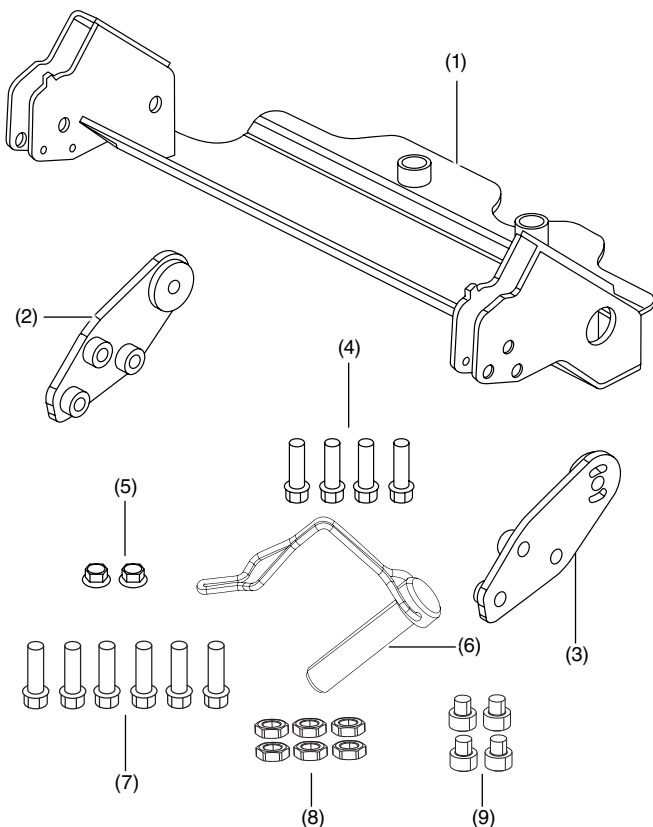

No.	Description	Qty
(1)	Plow bracket	1
(2)	Right plow plate	1
(3)	Left plow plate	1
(4)	Flange bolt, 10 x 35 mm	4
(5)	Flange nut, 10 mm	2
(6)	Quick clamp pin (Retainer)	2
(7)	Bolt, 10 x 35 mm	6
(8)	Nut, 10 mm	6
(9)	Socket bolt, 6 x 6 mm	4

TOOLS REQUIRED

14 mm socket
17 mm wrench
5 mm hex bit socket
Ratchet
Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.


Item	N-m	kgf-m	lbf-ft
10 mm bolt	39	40	28.8
6 mm socket bolt	10	1.0	7.0

USE AND CARE INFORMATION


- Check the accessory mounts frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged or discolored excessively.

INSTALLATION


1. Remove lower flange bolts from both sides of the front bumper.

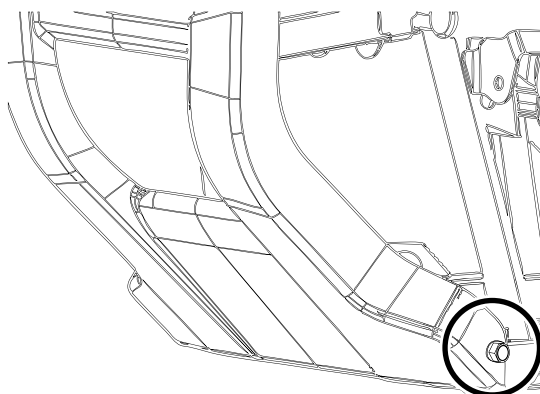


2. Place plow bracket in the position shown.

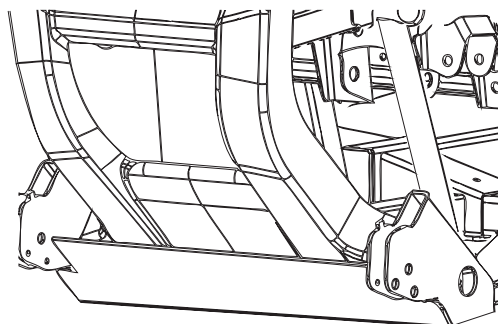


3. Loosely install one 10 x 35 mm flange bolt in each side of the lower bumper to hold the bracket in place.

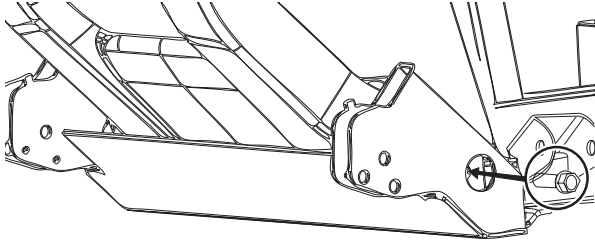



4. Pass two 10 x 35 mm bolts through the plow bracket and into the holes on the bottom of the frame as shown. Secure the bolts with two 10 mm flange nuts on top of the fixed collars of the lower bracket. Tighten the nuts to the specification in the Torque Chart.

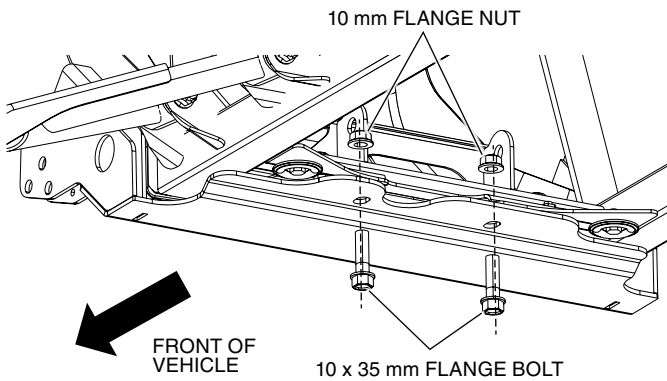


5. Tighten the 10 x 35 mm flange bolts that were loosely installed in Step 3 to the specification in the Torque Chart.

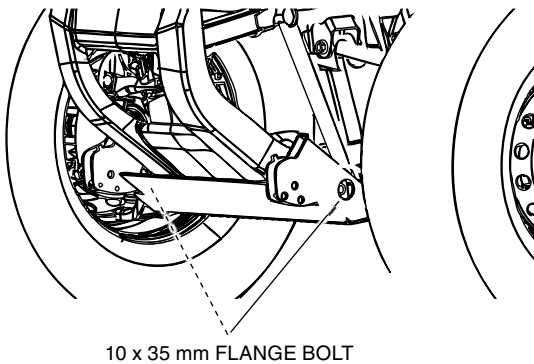


6. Install the left and right plow plates to the plow push tubes (supplied with the push tube kit) with the 10 x 35 mm bolts and 10 mm nuts in the orientation as shown.

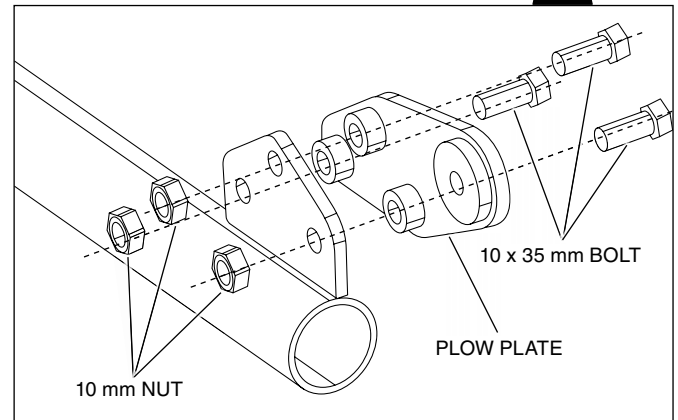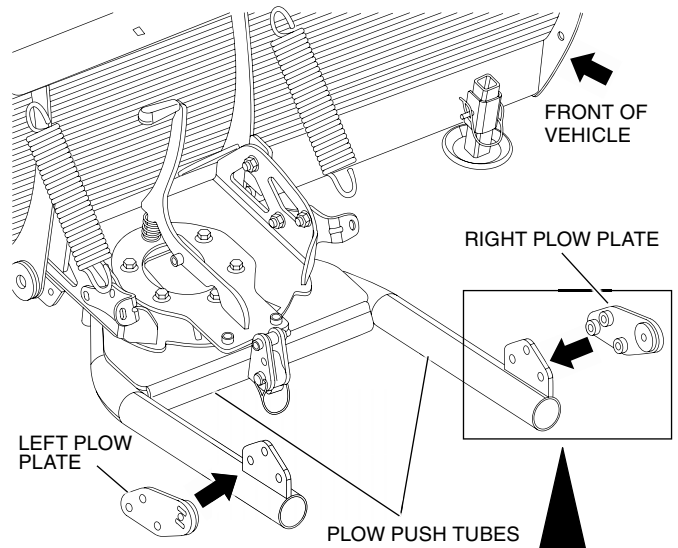

7. Install the four 6 x 6 mm socket bolts by sliding them through the outer flange and then into the inner sides of the plow bracket. Tighten the bolts to the specification in the Torque Chart.

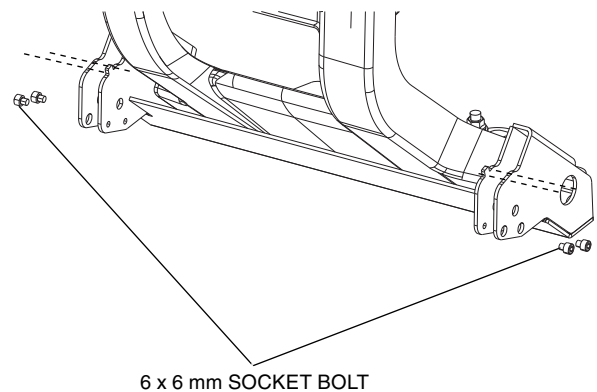

8. Place the assembled plow push tubes with plow plates into place so that the circular face rests on the socket bolts installed in Step 8 as shown.

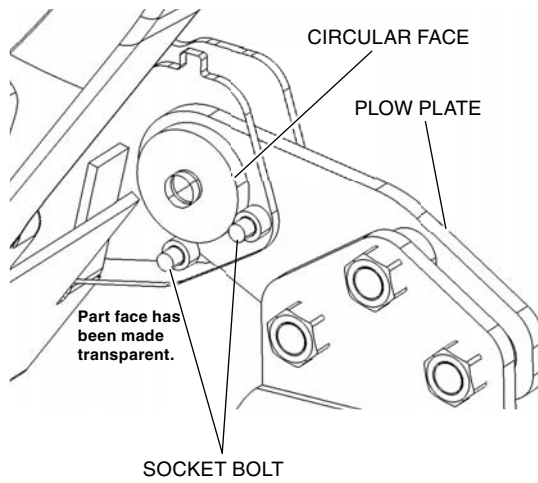

9. Pivot the plow push tube assembly as needed until the holes align and then install the quick clamp pins as shown.
Secure the quick clamp pins by pulling the wire clip over the end of the pin.

