

# HONDA


## INSTALLATION INSTRUCTIONS

Accessory  
**BED EXTENDER**  
P/N 08L74-HL3-A41

Application  
**SXS700M4/M2**

Publication No.  
**MII 15249**  
Issue Date  
**March 2016**

### PARTS LIST

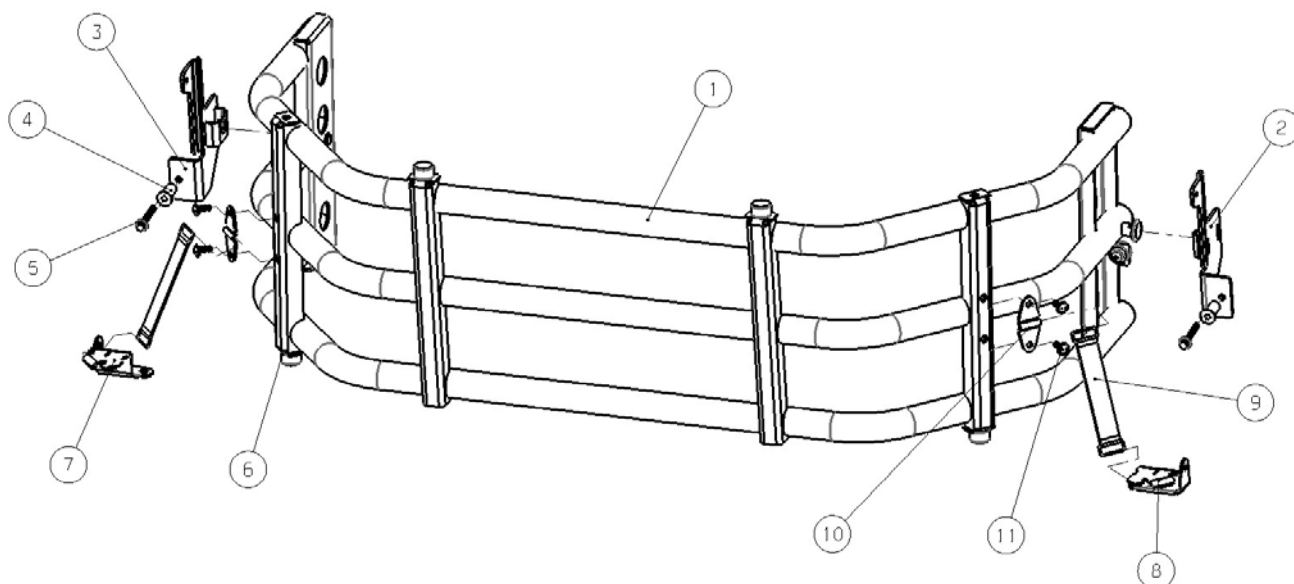

| No.  | Description                 | Qty |
|------|-----------------------------|-----|
| (1)  | Bed extender                | 1   |
| (2)  | Right bracket, bed extender | 1   |
| (3)  | Left bracket, bed extender  | 1   |
| (4)  | Collar                      | 2   |
| (5)  | 6 mm flange bolt            | 2   |
| (6)  | Rubber stop                 | 6   |
| (7)  | Left tailgate bracket       | 1   |
| (8)  | Right tailgate bracket      | 1   |
| (9)  | Strap                       | 2   |
| (10) | Strap bracket               | 2   |
| (11) | 6 x 12 mm socket bolt       | 4   |

### TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

| Item      | N·m | kgf·m | lbf·ft |
|-----------|-----|-------|--------|
| 6 mm bolt | 12  | 1.2   | 8.9    |

### USE AND CARE INFORMATION


- Check the accessory mounts frequently and retighten if necessary.

### TOOLS AND SUPPLIES REQUIRED


Power drill  
Drill bit (7 mm)  
Drill bit (13 mm)  
Hex bit socket (5 mm)  
Hex bit socket (4 mm)  
Socket (10 mm)  
Socket extension  
Torque wrench  
Ratchet  
Marker

## INSTALLATION


1. Remove the upper 6 mm socket bolt from the rear frame and save it for reuse.

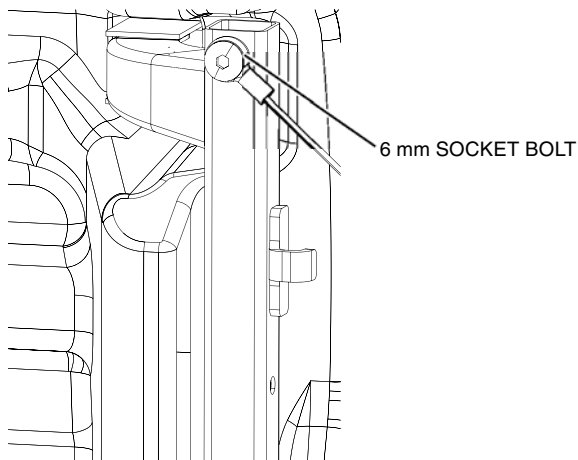


2. **'14 Only:** Refer to the Service Manual for the vehicle, remove the bed side cover (2P only), rear door (4P only) and inside cover (4P only).
3. **'14 Only:** Place the bed extender bracket into the position shown and temporarily install the 6 mm socket bolt. Using the bracket as a template, mark the hole location with a marker.

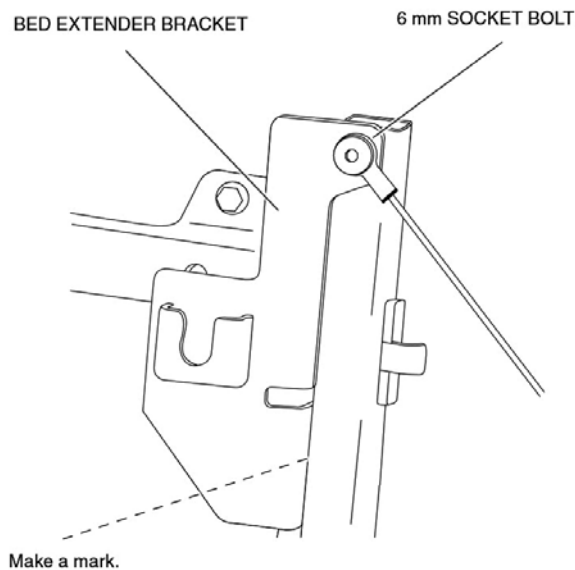


4. **'14 Only:** Remove the 6 mm socket bolt and bed extender bracket. Drill a 7 mm hole in the vertical frame at the marked point.
  - **This hole will go through both sides of the frame.**

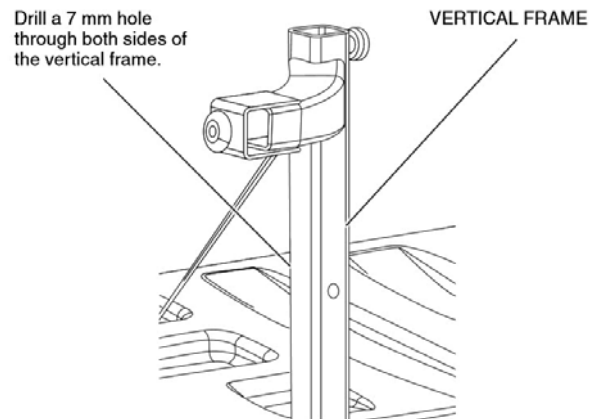


5. **'14 Only:** Reinstall removed parts per the Service Manual.
6. Using the two existing 7 mm through holes as a guide, drill a 7 mm hole in the bed plastic.

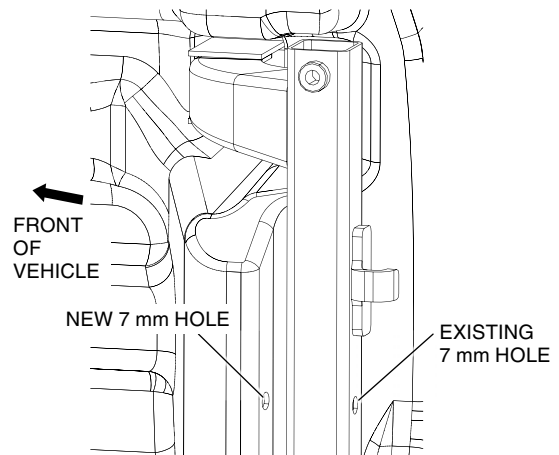


7. Using the existing 7 mm through hole as a pilot hole, enlarge the rear frame hole with a 13 mm drill bit.  
**NOTICE: Drill the rear hole carefully to avoid damaging the front frame 7 mm hole.**

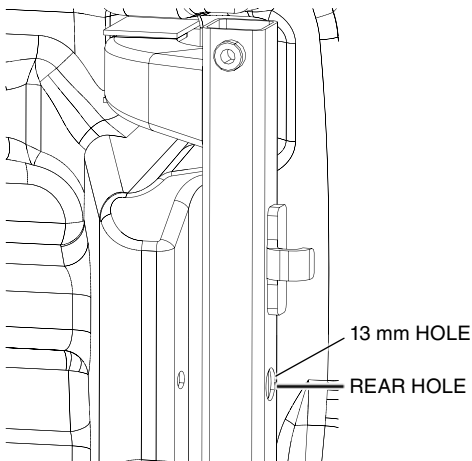


8. Place the bed extender bracket into the position shown and loosely install the 6 mm socket bolt.

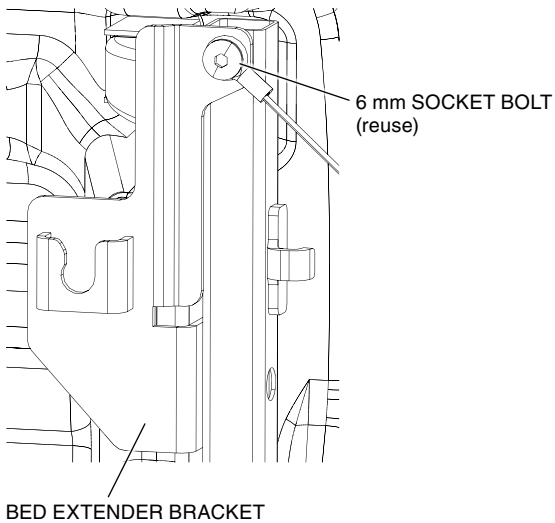


9. Insert the collar into the 13 mm hole.

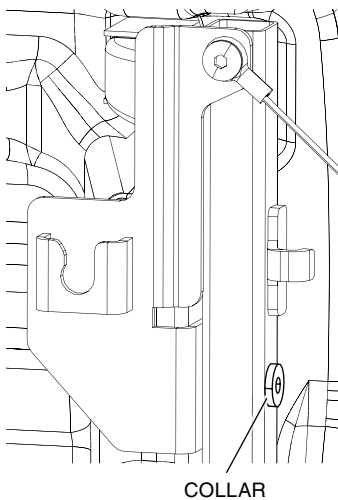

10. Install a 6 mm flange bolt through the collar and tighten it into the weld nut on the bed extender bracket. Tighten the 6 mm flange bolt and 6 mm socket bolt to the specification in the Torque Chart.

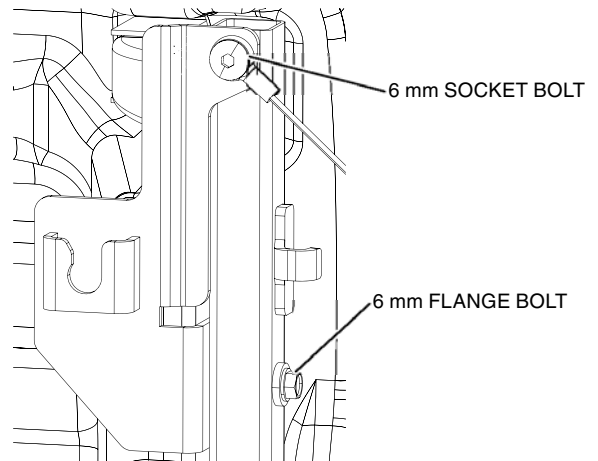


11. Remove the tailgate stay cable and replace the bracket with the accessory tailgate bracket. Reinstall the tailgate stay cable and tighten the 6 mm bolts to the specification in the Torque Chart.

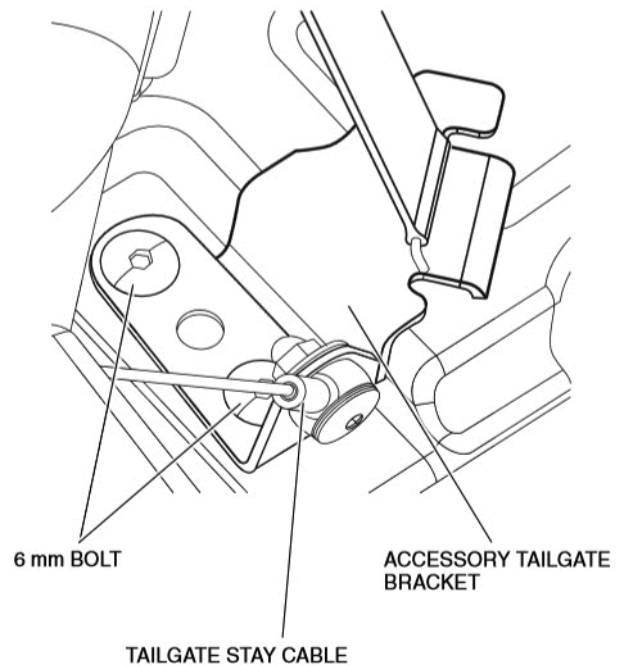


12. Repeat Steps 1 through 11 for the opposite side.

13. Install the rubber stops into the bed extender holes at the areas shown below.

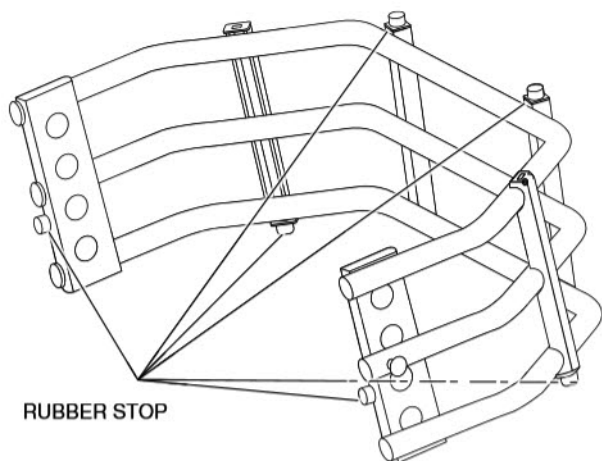

14. Holding the bed extender assembly vertically, gently lower it into the bed extender brackets.

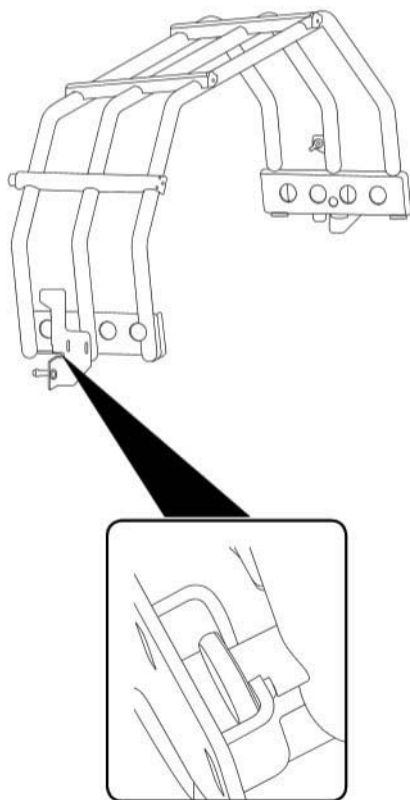

15. Install the strap and the strap bracket to the bed extender using the 6 x 12 mm socket bolts.

