



INSTALLATION INSTRUCTIONS

Accessory
**CARGO BOX
ATTACHMENT BRACKET**
P/N 0SL41-HL6-A01

Application
**SXS1000S2X
SXS1000S2R
SXS1000S2XD
SXS1000S4DX**

Publication No.


MII 16561

Issue Date

December 2021

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

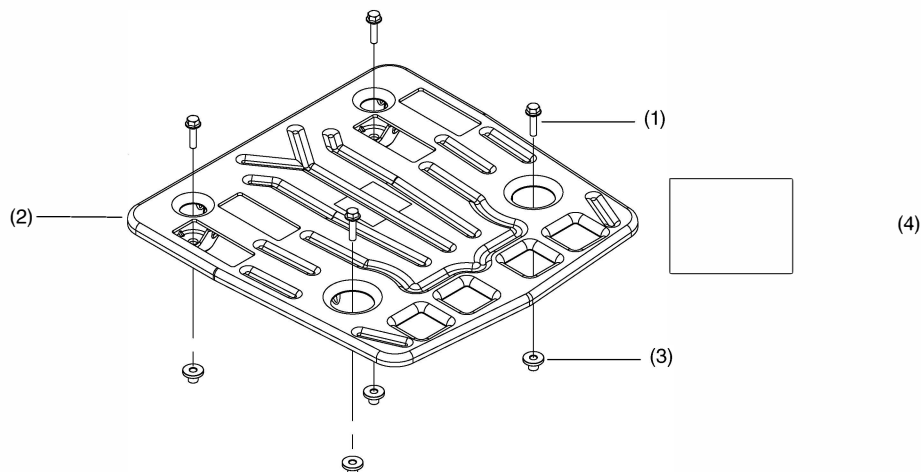

No.	Description	Qty
(1)	10 × 20 mm Hexagonal Flange Bolt	4
(2)	Mount Plate	1
(3)	Bushing	4
(4)	Installation Instructions URL	1

TOOLS REQUIRED

Socket (10 mm) Torque wrench

Allen key (5 mm)

Ratchet

TORQUE CHART


Item	N-m	Kfg.m	lbf.ft
10 × 20 mm Hexagonal Flange Bolt	9.9	1.0	7.3

NOTE:


- **Never exceed the cargo box limit of 50 lb (22 kg) and the maximum of 25 lb (11 kg) per item.**
- **Always make sure the hooks and Honda Pro-Connect® latches are properly engaged before riding.**
- **Make sure all cargo is secured before riding.**
- **Please read and follow all instructions and warnings supplied with the cargo box or cargo box attachment bracket.**

INSTALLATION



1. Select the location (driver or passenger side) for the installation of the cargo box attachment bracket.

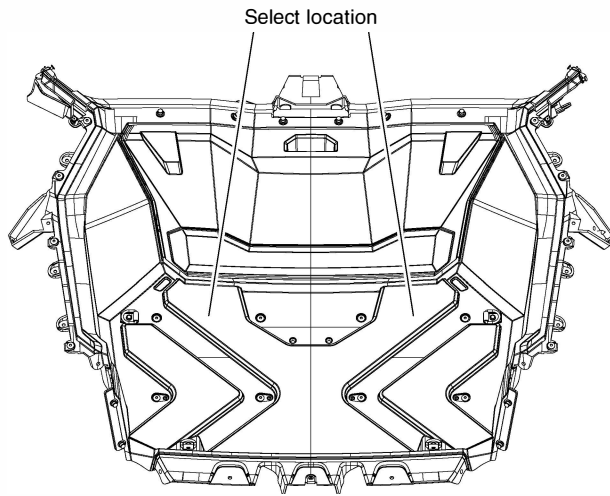

2. Remove original hardware from the bed. (Passenger side installation shown).

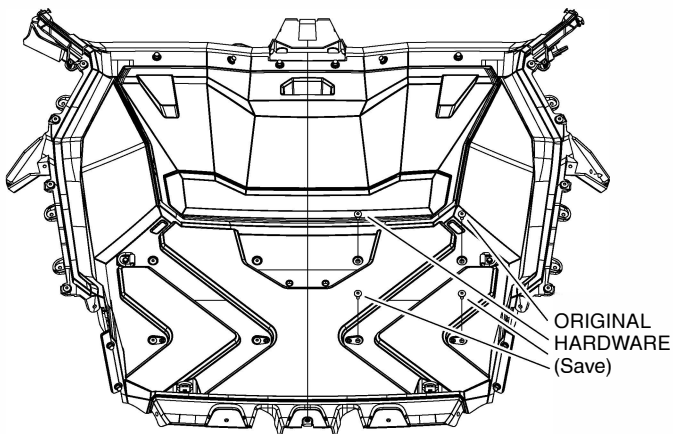

3. Place four bushings in the holes. Then install the mount plate on the bed by installing the four flange bolts (see TORQUE CHART for torque values).

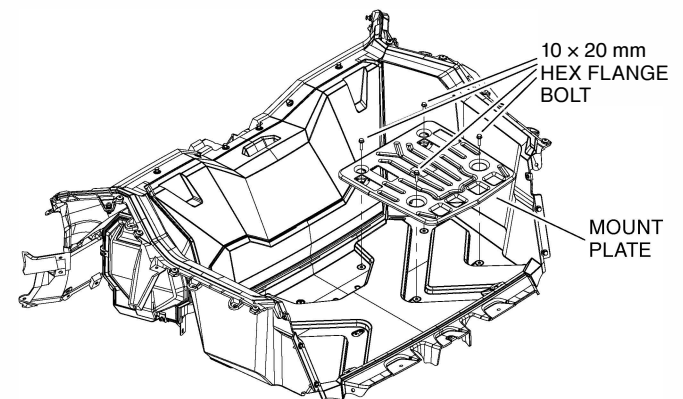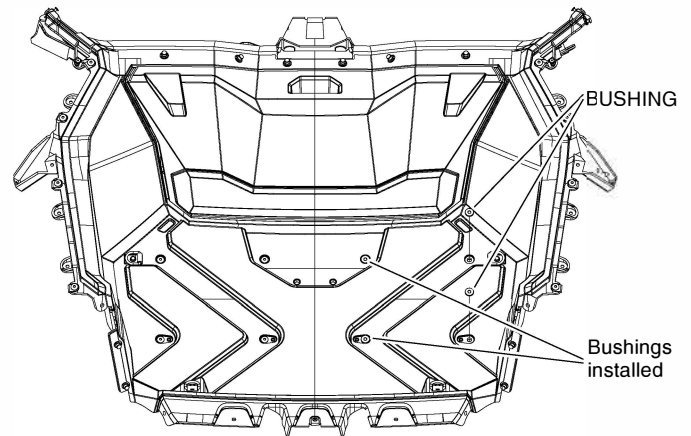

4. To install the cargo box, align the two hooks on the rectangular holes then press the hooks in the rectangular holes and push them to the front. When the hooks are in place, lock the two Honda Pro-Connect latches by pressing down on the two Honda Pro-Connect levers. (See cargo box instructions for hooks and Honda Pro-Connect latch installations).

