



# INSTALLATION INSTRUCTIONS

Accessory

**BED MAT**  
P/N 0SP42-HL3-101 (2P)  
0SP42-HL3-201 (4P)

Application

**SXS700M4/M2**

Publication No.



**MII 14607**

Issue Date

**August 2013**

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

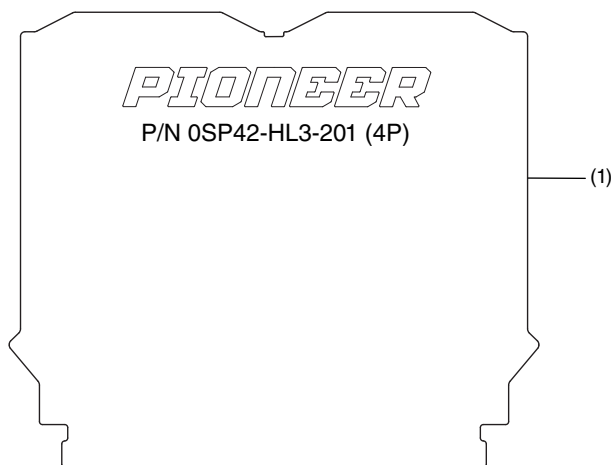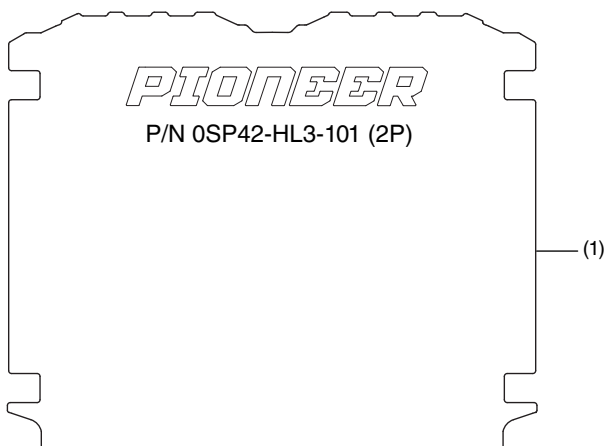

| No. | Description | Qty |
|-----|-------------|-----|
| (1) | Bed mat     | 1   |

## USE AND CARE INFORMATION

- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, then wipe with a clean cloth or sponge.
- Never use petroleum solvents such as gasoline, thinner, or benzene to clean this accessory. Also do not use acid or alkaline cleaners.
- Wipe up spilled brake fluid at once as it may damage the surface.

## INSTALLATION

1. Ensure the cargo box is empty, clean, and dry.
2. Place the bed mat in the cargo box. The mat should fit the contours of the cargo box and sit completely flat.

