



INSTALLATION INSTRUCTIONS

Accessory

POLY BED LINER
P/N 0SP43-HL3-102

Application

SXS700M4/M4D

Publication No.


MII 15753

Issue Date

August 2016

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

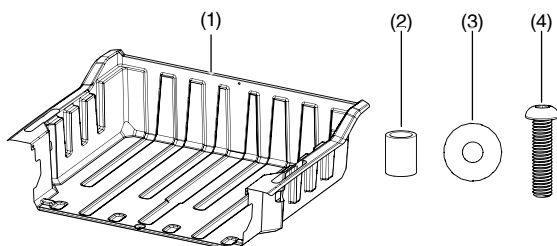

No.	Description	Qty
(1)	Poly bed liner	1
(2)	Collar	4
(3)	Washer	4
(4)	Socket bolt	2
(5)	Installation Instruction URL (not shown)	1

TOOLS AND SUPPLIES REQUIRED


Hex wrench (4 mm)

USE AND CARE INFORMATION


- Check the accessory mounts frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged or discolored excessively.
- Never use petroleum solvents such as gasoline, thinner, and benzene, to clean this accessory. Also do not use acid or alkaline cleaners.

INSTALLATION

1. Clean the vehicle bed before beginning the installation.
2. Remove the four pan screws from the vehicle bed in the locations shown.

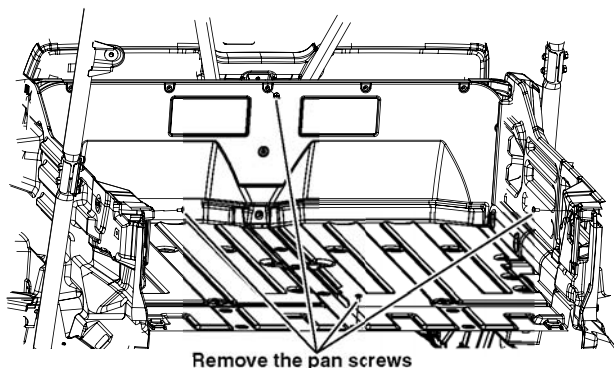

3. Place the bed liner onto the vehicle and align it with the mount holes exposed in Step 2.
4. Install a washer and bolt at the front and rear locations.

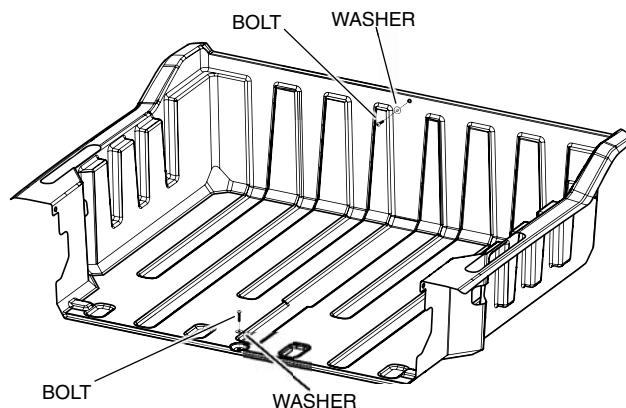

5. Install a collar, washer and bolt at the left and right locations.

