



INSTALLATION INSTRUCTIONS

Accessory

CARPET BED MAT
P/N 0SP44-HL3-A20

Application

Pioneer 700M2

Publication No.


MII 17021

Issue Date

June 2019

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

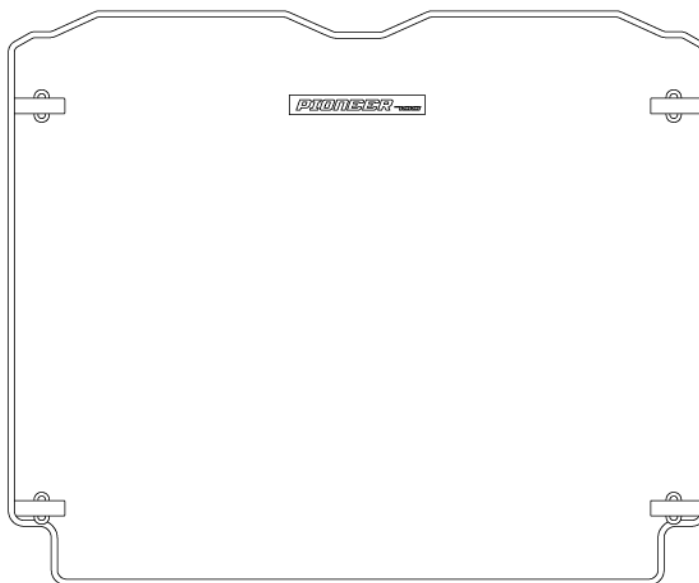

No.	Description	Qty
(1)	Carpet Bed Mat	1

MAINTENANCE AND AFTERCARE

NOTE:


- Periodically remove the Carpet Bed Mat to clean the vehicle bed and Carpet Bed Mat.
- Allow the Carpet Bed Mat and vehicle bed to dry before reinstalling.

INSTALLATION


NOTE:

- Allow the Carpet Bed Mat to lay flat for 30 minutes prior to installation.
- Clean the vehicle bed then allow to dry before installing the Carpet Bed Mat.

1. Place the Carpet Bed Mat in the vehicle bed to verify the mat is the proper shape and size.

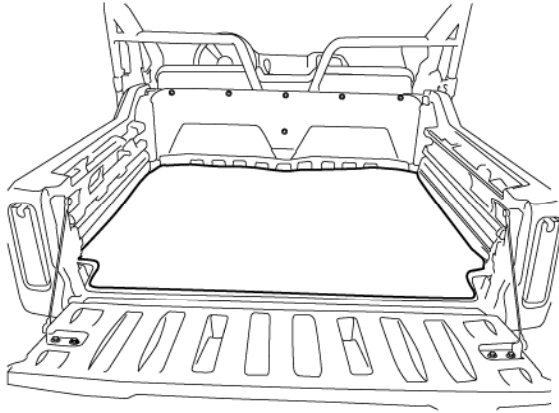

2. Release the attachment strip covering the metal grommet in the Carpet Bed Mat then install the bed hook through the metal grommet.

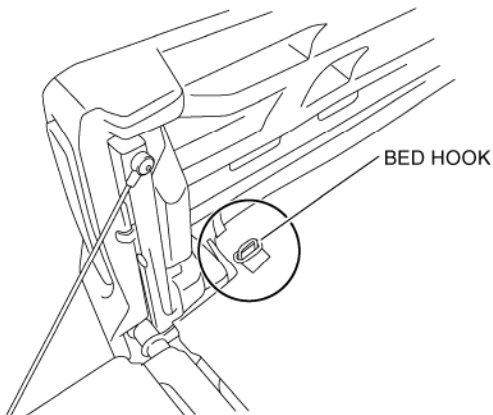

3. Install the attachment strip through the bed hook then re-secure the strip to the Carpet Bed Mat. Repeat steps 2 and 3 for all four locations in vehicle bed.

