



INSTALLATION INSTRUCTIONS

Accessory

FLOOR MAT
P/N 0SP63-HL5-101

Application

SXS500M2

Publication No.


MII 14948

Issue Date

June 2014

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

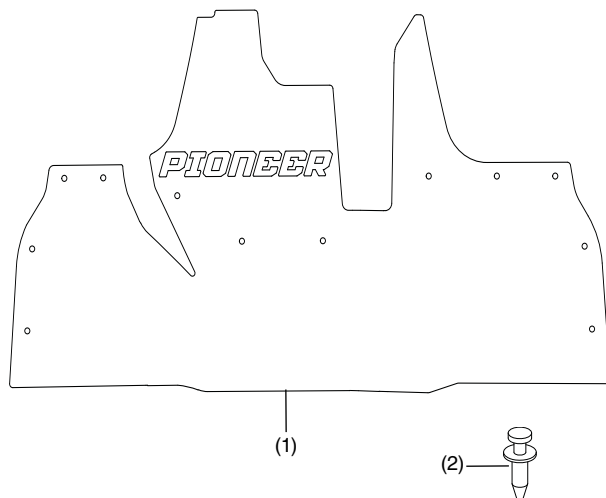

No.	Description	Qty
(1)	Floor mat	1
(2)	Trim clip	12

TOOLS REQUIRED

Power drill

Drill bit, 5/16 inch (8 mm)

Wood plank (2 x 4 x 18 in)


Tape

USE AND CARE INFORMATION


- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, then wipe with a clean cloth or sponge.
- Never clean with, or expose the floor mat to petroleum solvents such as gasoline, thinner, benzene, acid, or alkaline cleaners.
- Wipe up spilled brake fluid at once as it may damage the surface of the floor mat.

INSTALLATION

1. Ensure the footwell is empty, clean, and dry.
2. Remove the seven trim clips from the floor of the vehicle as shown.

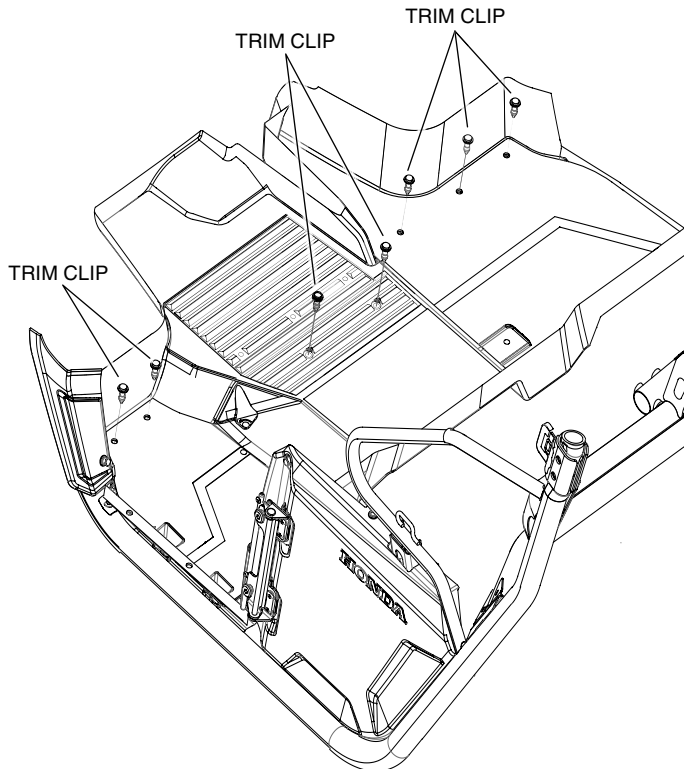


3. Place the rubber floor mat on the floor of the vehicle.
4. Install seven new trim clips into the holes left by the stock trim clips removed in Step 2.

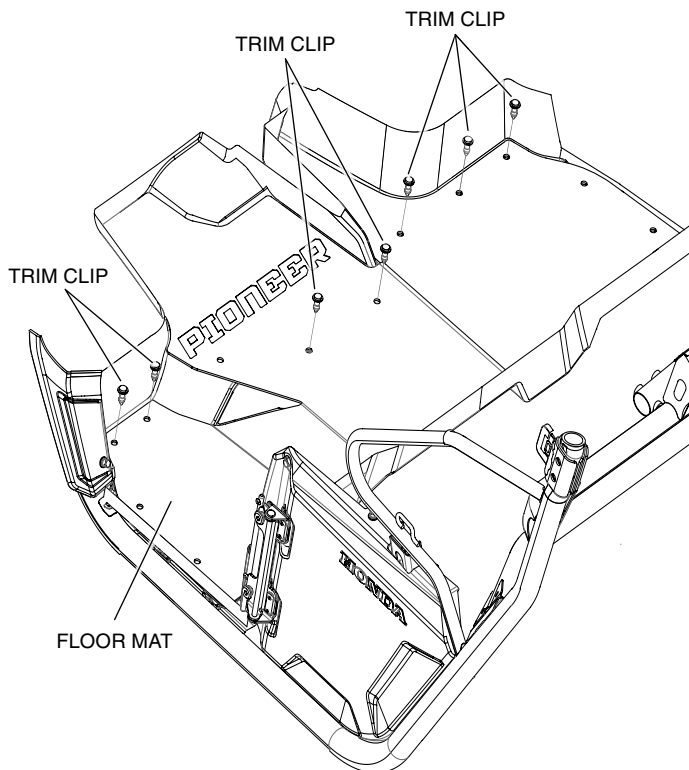


5. Insert a wood plank (2 x 4) between the brake line mounted along the vehicle frame rail and the floor pan from the underside of the vehicle.

<VEHICLE UNDERSIDE>

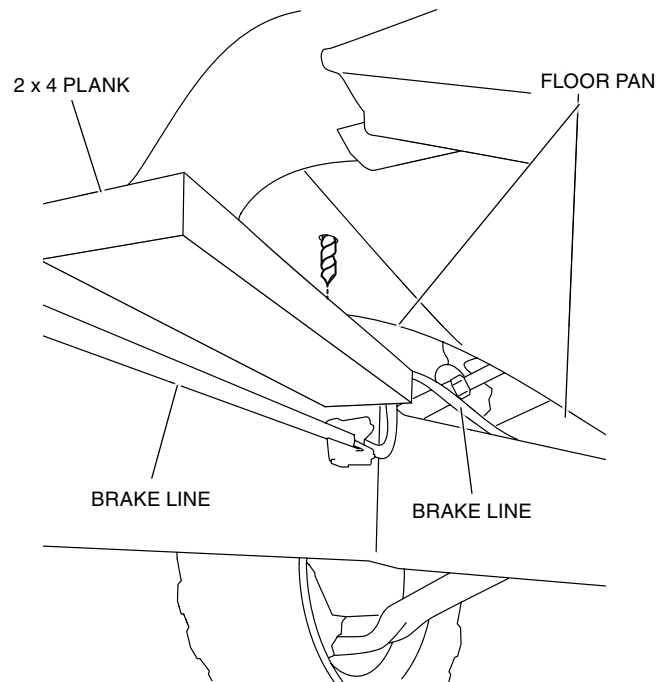

6. Wrap a piece of tape around the drill bit at the dimension shown to serve as a drill stop.

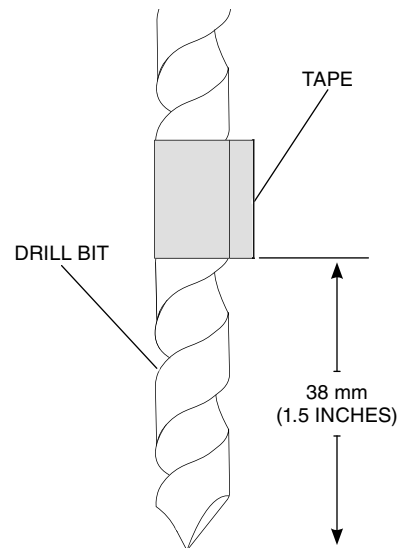

7. Using the floormat as a template, drill holes in the remaining five holes in the floor mat.
 - **Do not drill into the floor panel any deeper than the tape applied in Step 6.**
8. Remove the wood block from between the brake line and floor panel.
9. Install the five remaining new trim clips into the holes drilled in Step 7.

