



INSTALLATION INSTRUCTIONS

Accessory

FLOOR MATS
P/N 0SP63-HL6-A00

Application

SXS1000S2X
SXS1000S2R

Publication No.


MII 16561

Issue Date

February 2019

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

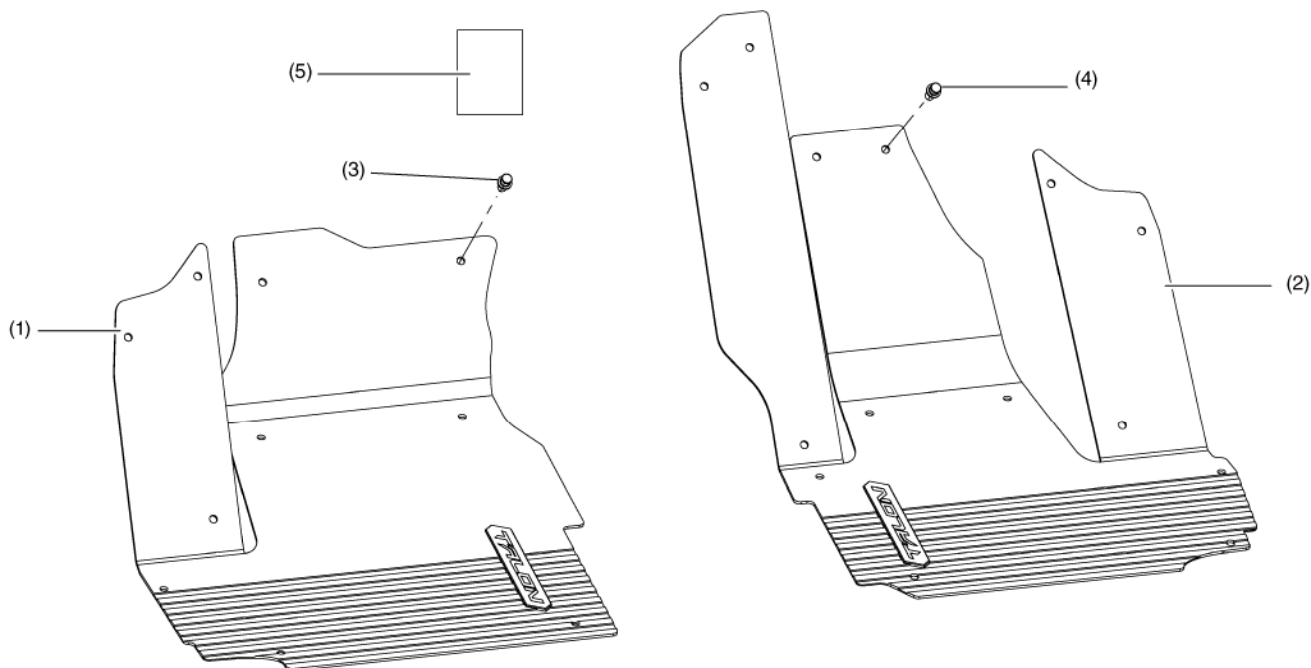

No.	Description	Qty
(1)	Driver Side Floor Mat	1
(2)	Passenger Side Floor mat	1
(3)	Trim Clip 20 mm	22
(4)	Trim Clip 25 mm	2
(5)	Installation Instruction URL	1

TOOLS REQUIRED

Drill bit, 8 mm

Power drill


File

INSTALLATION

⚠ CAUTION


To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

1. Install the driver side floor mat and use it as a template to drill the ten mounting holes using an 8 mm drill bit. Use a file to clean any burrs.

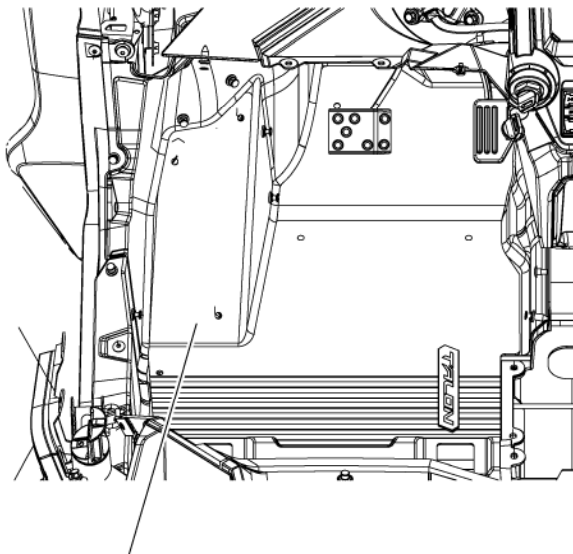


DRIVER SIDE FLOOR MAT

2. Install a 20 mm trim clip in each mounting hole as shown.

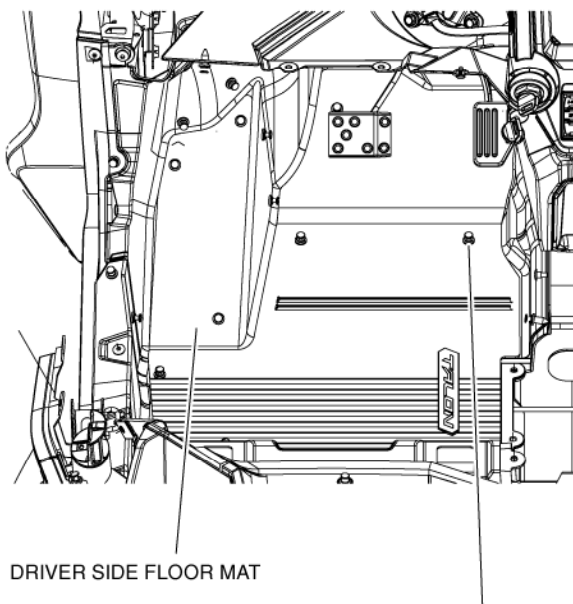


20 mm TRIM CLIP

3. Install the passenger side floor mat and use it as a template to drill the fourteen mounting holes using an 8 mm drill bit.

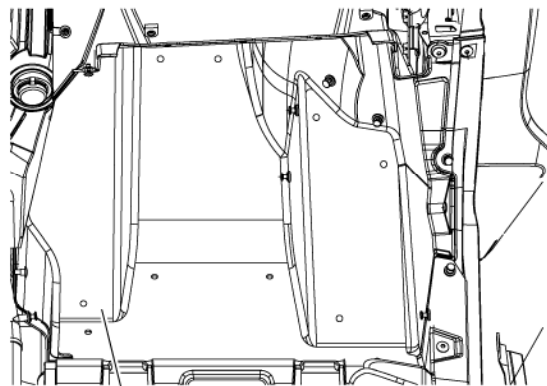

PASSENGER SIDE FLOOR MAT

4. Install the two 25 mm trim clips in the upper holes and the remaining 20 mm trim clips in each hole as shown.

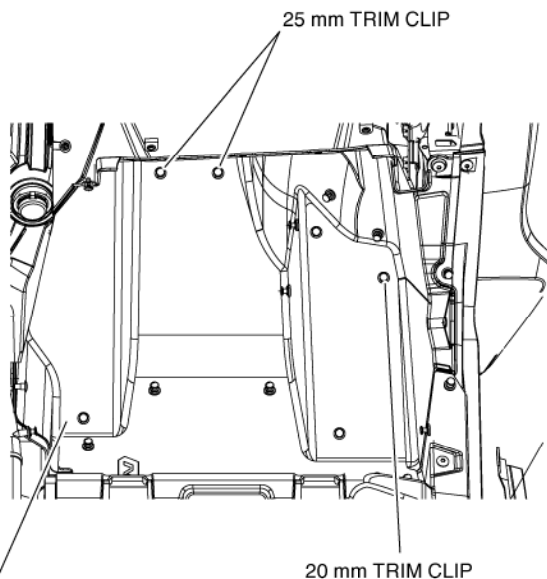

PASSENGER SIDE FLOOR MAT