



INSTALLATION INSTRUCTIONS

Accessory
FABRIC ROOF/REAR PANEL (2P)
P/N 0SR85-HL3-211A (Black)
0SR85-HL3-220A (Camo)

Application

SXS700M2

Publication No.


MII 14607

Issue Date

October 2013

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

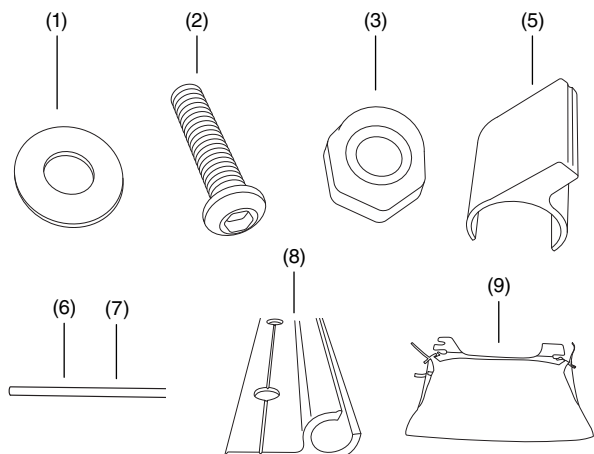

No.	Description	Qty
(1)	Washer, 6 mm flat	4
(2)	Screw, 6 x 30 mm	4
(3)	Locknut, 6 mm	4
(4)	Adhesive Foam tape (not shown)	1
(5)	Bar snap	4
(6)	Fiber rod (27 inch)	2
(7)	Fiber rod (30 inch)	2
(8)	P-Channel	1
(9)	Fabric roof/rear panel	1

POLY WINDSCREEN (2 Piece or Full) Sold Separately


P/N 08R73-HL3-A00 (Full, Hard Coated)

P/N 0SR73-HL3-200 (Full, Optical)

P/N 08R72-HL3-A00 (2 piece, Hard Coated)

P/N 0SR72-HL3-100 (2 piece, Optical)

A Poly Windscreen is required for the installation of this accessory.

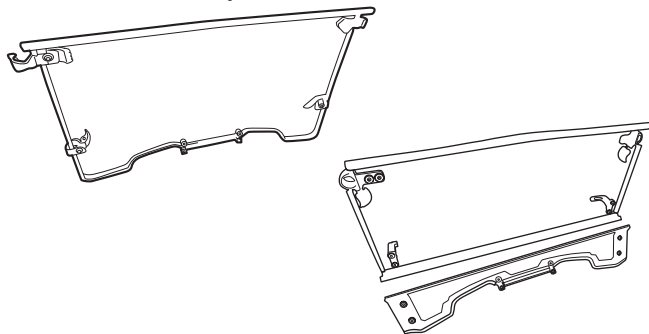

TOOLS REQUIRED

Hex wrench (4 mm)

Socket (10 mm)

Ratchet

Power drill

1/4 inch drill bit

TORQUE VALUES

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

USE AND CARE INFORMATION

- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.

NOTICE

- This accessory will create the need for more frequent air cleaner maintenance. Service the air cleaner daily when operating in dusty conditions.

Poly Windscreen Preparation for Installation of the Fabric Roof/Rear Panel


⚠ CAUTION

- To prevent eye injuries, wear eye protection when using the saw.

NOTE

- Remove the windscreen from the vehicle if it is already installed.
- Prepare a clean work area free of debris that may scratch the windscreen.

- Remove the rubber gasket from the top edge of the windscreen.
- Place a strip of masking tape along the top three inches of the outside surface of the windscreen.
- Use a straight edge and marker to mark a straight line across the windscreen as indicated by the dotted line on the diagram.
- 2 PIECE WINDSCREEN ONLY:** Make two marks, 9-1/4 inches from the centerline and 1/2 inch below the cut line, as indicated by the cross hairs in the diagram.
- Use a fine tooth jig saw or fine tooth hand saw to carefully cut the windscreen along the marked line.
- Use a fine tooth file or sanding block to deburr the edge of the windscreen.
- 2 PIECE WINDSCREEN ONLY:** Drill a 1/4 inch hole through the windscreen at each mark made in Step 3.
- Remove the masking tape. Clean and reinstall the windscreen.
 - 1 PIECE WINDSCREEN ONLY:** Do not reinstall the two upper mounting bolts at this time.

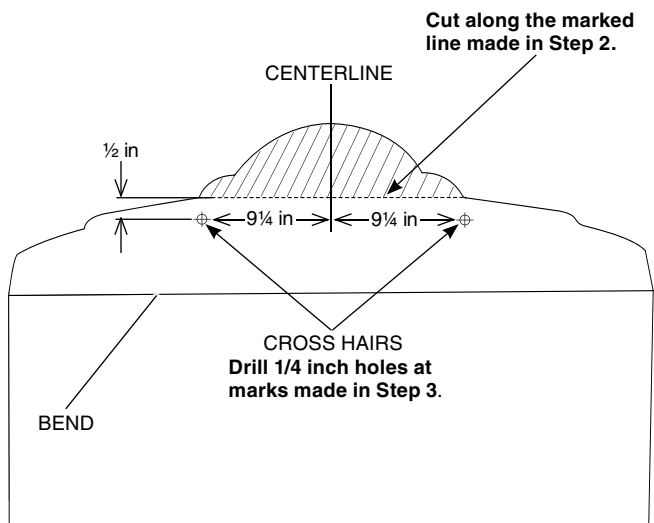


INSTALLATION


⚠ CAUTION

- To prevent injury from splinters, wear protective gloves when handling the fiber rods.


- Apply the adhesive foam tape to the flat side of the P-channel as shown.

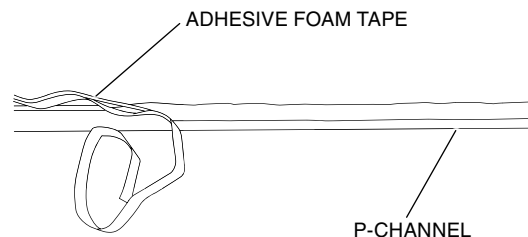


- Install the P-channel on the outside of the windscreen with its flat side against the windscreen and the round portion facing down. Install two of the supplied 6 mm screws through the two center holes and install the washers and locknuts on the inside of the windscreen.

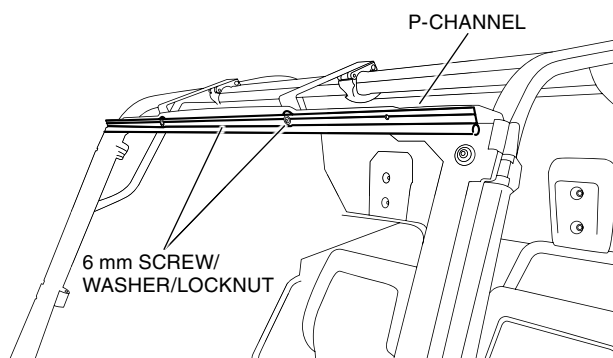


- Using the P-channel as a template, drill a 1/4 inch hole through the windscreen at each of the outermost holes of the P-channel. Install the two remaining 6mm screws, washers, and locknuts through the new holes and tighten all hardware.

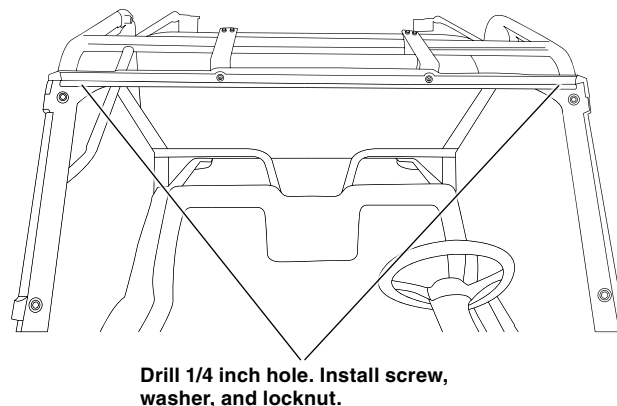


- Reinstall the rubber gasket to the top edge of the windscreen.

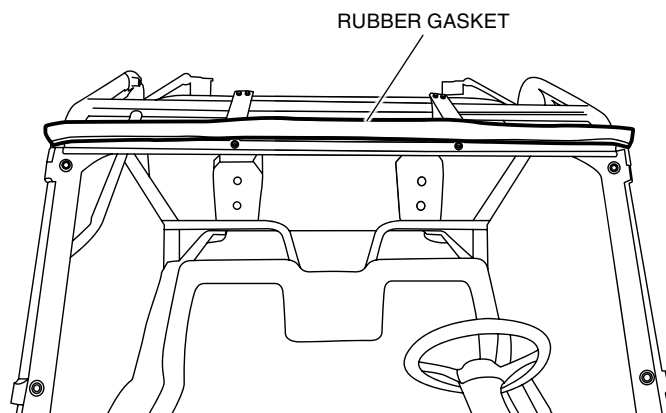

- Fully install the two 27 inch fiber rods into the side pockets on the underside of the fabric roof/rear panel.

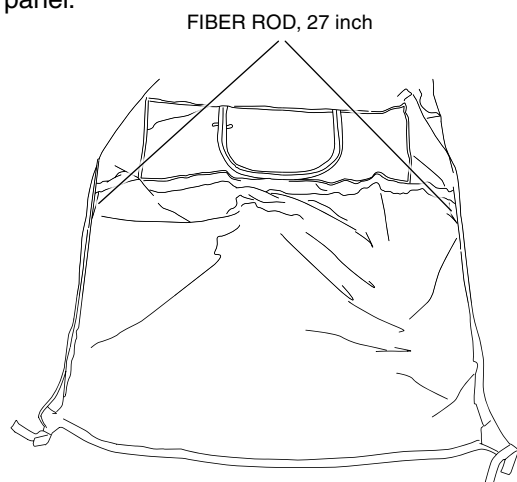


- Install the bar snaps and 30 inch fiber rods to the front and rear cross bars of the cab frame as shown.

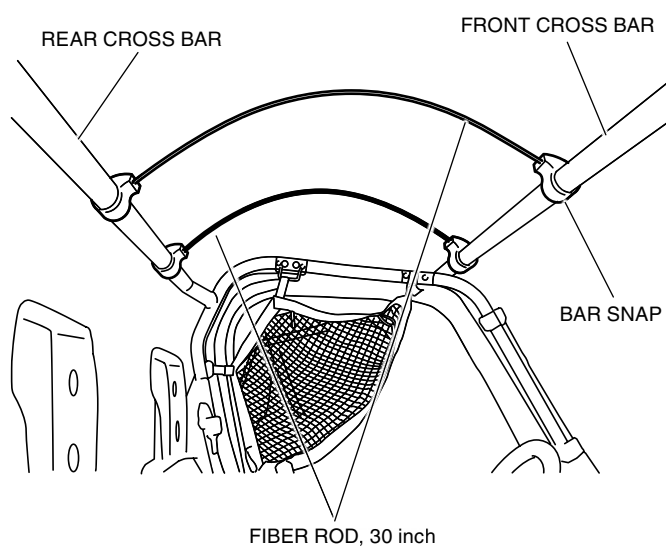


- With the fabric roof upside down, slide the front edge of the fabric roof into the P-channel as shown. Be careful not to snag the fabric on the edge of P-channel.


<Outside View of Windscreen>

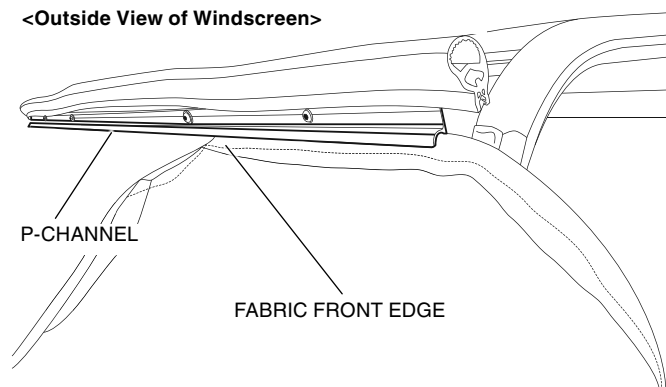


- Once the fabric roof/rear panel is centered in the P-channel, flip it over the cab frame.
- Attach the front strap behind the windscreen, under the windshield mount, and around the A-pillar. Attach to the hook and loop as shown.

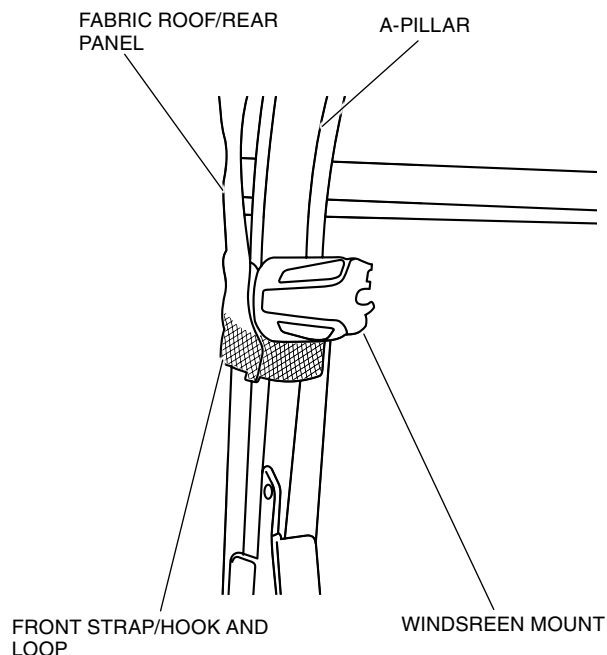

10. Loop the lower straps and position the fabric roof/rear panel as shown. Loop the end of the lower strap up through the ladder loc.

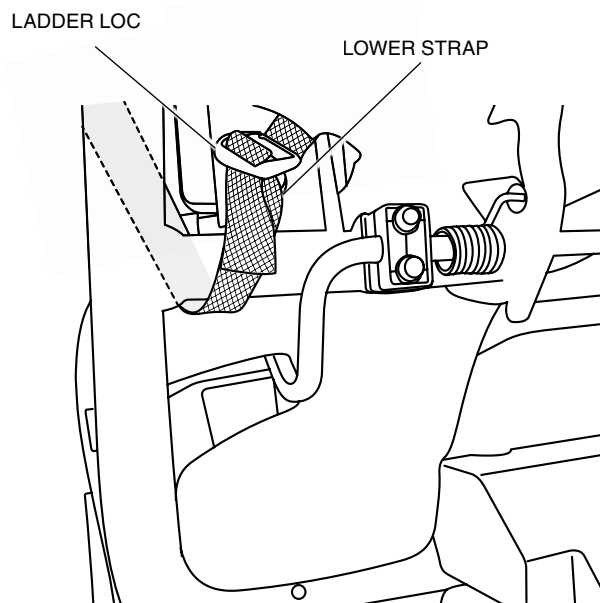

11. Wrap the side strap around the cab frame and attach it to the hook and loop as shown.

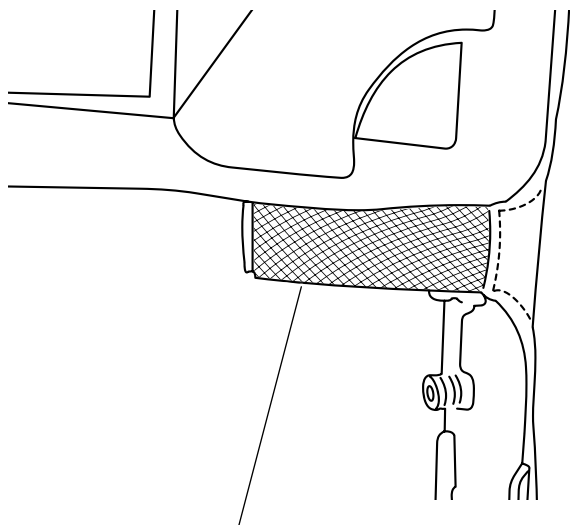

Attach mid strap to hook and loop.

12. Tighten all straps making sure the fabric roof/rear panel is centered.