



INSTALLATION INSTRUCTIONS

Accessory

**BIMINI TOP (4P)
P/N 0SR85-HL3-323A**

Application

SXS700M4

Publication No.


MII 15249

Issue Date

February 2015

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

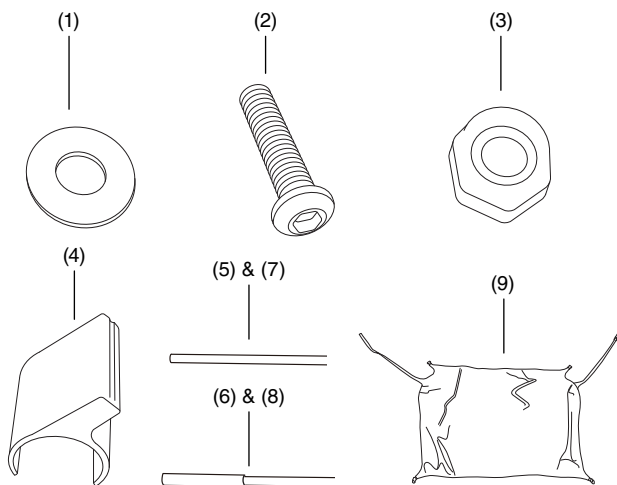

No.	Description	Qty
(1)	6 mm flat washer	2
(2)	6 x 30 mm screw	2
(3)	6 mm locknut	2
(4)	Bar snap	4
(5)	Fiber rod, 34 inch	2
(6)	Fiber rod, 34 inch with ferrule	2
(7)	Fiber rod, 27 inch	1
(8)	Fiber rod, 27 inch with ferrule	1
(9)	Bimini top	1

TOOLS REQUIRED

Hex wrench (4 mm)
Phillips screwdriver (# 2)
Propane torch
Fine tooth hand saw
Sanding block

TORQUE VALUES

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

USE AND CARE INFORMATION


- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.

Bimini Top Preparation for Installation with a Poly Windscreen

⚠ CAUTION

To prevent burns, wear gloves when using the torch or handling hot tools.

1. Place the bimini top upside down on a flat surface with the plastic windscreen insert facing up.
2. Support the bimini top so that it is two inches above the work surface as shown.
3. Using a small propane torch, heat the end of a #2 phillips screwdriver for 15 seconds.
4. Using the plastic windscreen insert as a guide, make two holes through the fabric by pushing the screwdriver tip through the fabric.

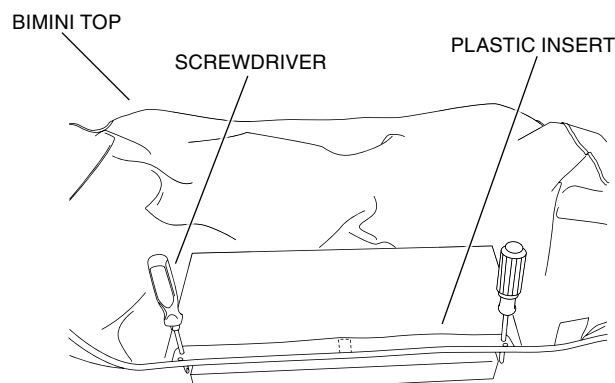

Two-piece Poly Windscreen Preparation for Installation with the Bimini Top


⚠ CAUTION

To prevent eye injuries, wear eye protection when using the saw.

NOTE

- Remove the poly windscreen from the vehicle if it is already installed.
- Prepare a clean work area free of debris that may scratch the windscreen.

1. Place a strip of masking tape along the top three inches of the outside surface of the windscreen.
2. Use a straight edge and marker to mark a straight line across the windscreen as indicated by the dotted line on the diagram.
3. Make two marks, 9-1/4 inches from the centerline and 1/2 inch below the cut line, as indicated by the cross hairs in the diagram.
4. Use a fine tooth jig saw or fine tooth hand saw to carefully cut the windscreen along the marked line.
5. Use a fine tooth file or sanding block to deburr the edge of the windscreen.
6. Drill a 1/4 inch hole through the windscreen at each mark made in Step 3.
7. Remove the masking tape. Clean and reinstall the windscreen.

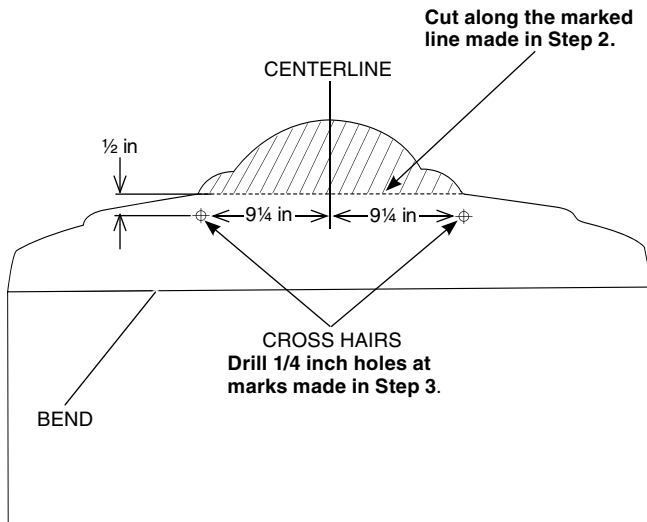


INSTALLATION


⚠ CAUTION

To prevent minor injury from splinters, wear protective gloves when handling the fiber rods.


1. Install the six bar snaps and then the fiber rods to the cab frame in the locations shown.

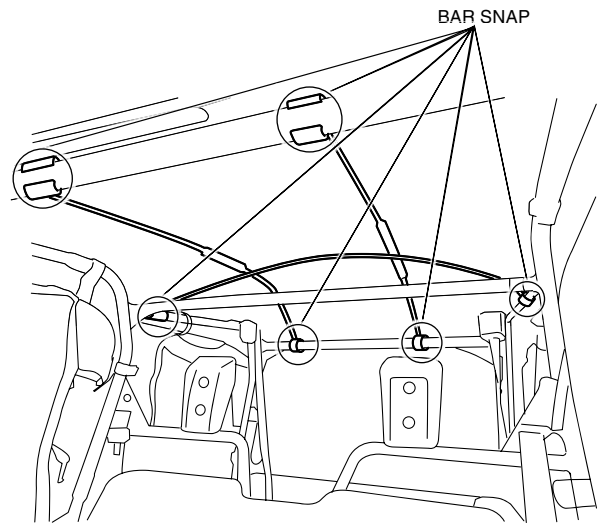

2. Lay the bimini top over the cab frame.
3. If a poly windscreen is used, insert the supplied 6 mm screws through the bimini top, windscreen and windscreen mounting brackets.
4. Install the 6 mm flat washers and 6 mm locknuts onto the screws and tighten.
5. Remove the front straps (if installed) from the bimini top and wrap them around the cab frame A-pillar, below the front junction of the cab frame and through the loop sewn in the end of the strap as shown.

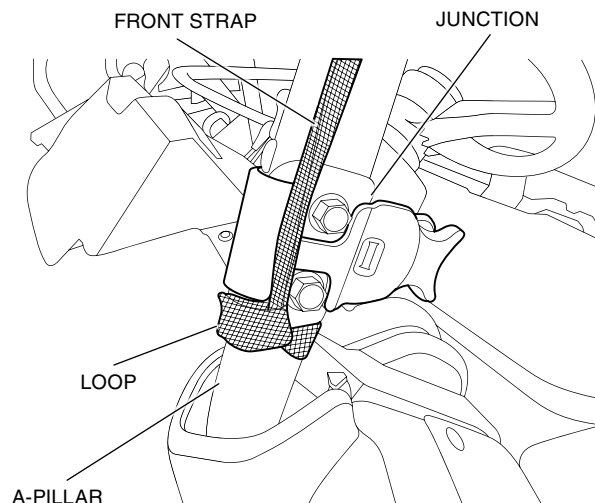


6. Route the front straps through the ladder locs, do not tighten at this time.

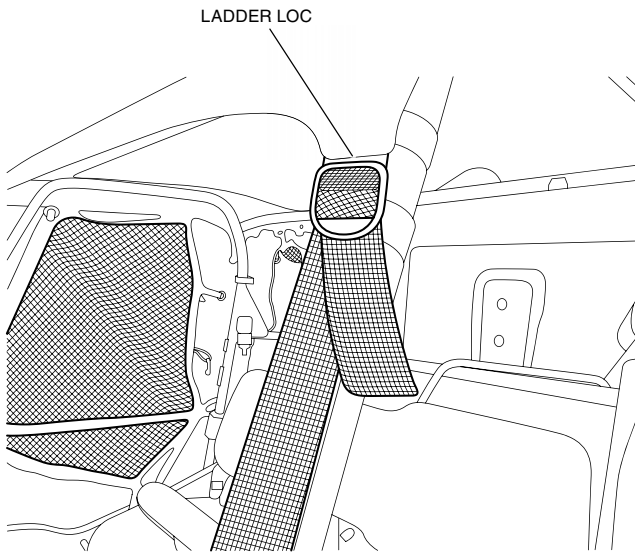


7. Insert the 34 inch fiber rods (No. 5) into the 34 inch fiber rods with ferrules (No. 6) to make two 68 inch fiber rods.
8. Insert the 27 inch fiber rod (No. 7) into the 27 inch fiber rod with ferrule (No. 8) to make one 54 inch fiber rod.



9. Insert the two long fiber rods into the pockets that run front to back on the underside of the bimini top.
10. Insert the short fiber rod into the pocket that runs from side to side on the underside of the bimini top.
11. Insert the fiber rods into the bar snaps with the arch of the fiber rods facing up.
12. Route the center straps as shown.

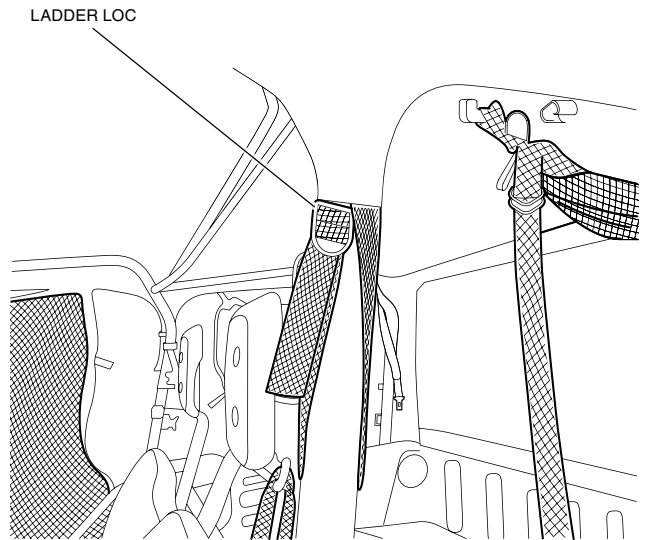

13. Release the buckle on the back of the bimini (if fastened).
14. Route rear bimini top straps as shown and fasten the buckles.

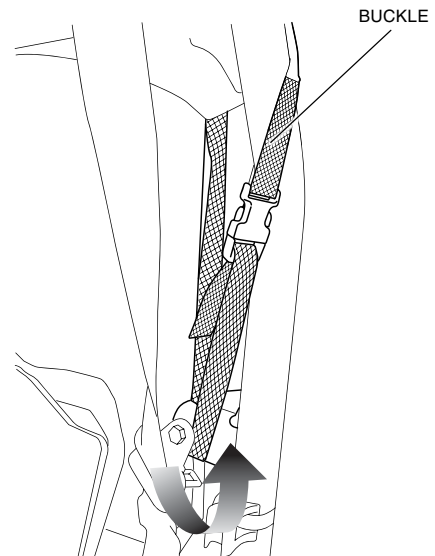

15. Tighten all the straps evenly to secure the bimini top and align its seams on the cab frame.