



INSTALLATION INSTRUCTIONS


Accessory
**FABRIC ROOF/
REAR PANEL (3P)**
P/N 0SR85-HL4-211A (Black)
0SR85-HL4-220A (Camo)

Application
SXS1000M3/M3P

Publication No.
MII 15262
Issue Date
October 2015

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

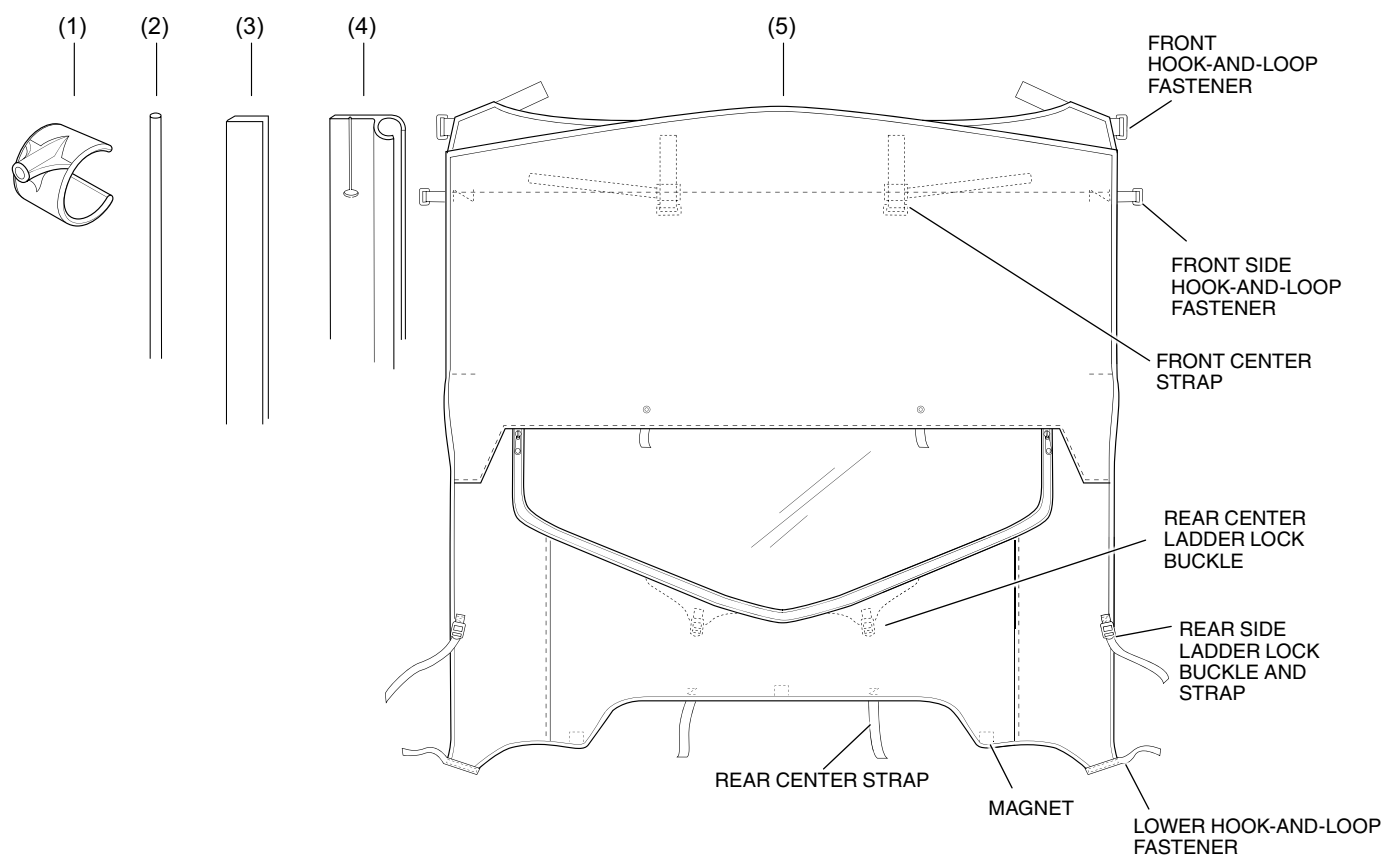

No.	Description	Qty
(1)	Bar snap	4
(2)	Fiber rod	2
(3)	Foam tape	1
(4)	P-channel	1
(5)	Top back	1
(6)	Installation Instruction URL (not shown)	1

TOOLS AND SUPPLIES REQUIRED

Gloves

Safety goggles


Allen wrench (4 mm)

USE AND CARE INFORMATION

- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with a hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.
- The rear window can be rolled up and stowed using the webbing straps and snaps.
- When not in use, the window roll up webbing straps can be fastened to themselves using the snaps.
- Do not force the zipper on the rear window. In case of a jam, unzip and remove any obstructions. If problems persist, the zipper must be cleaned.
- The zipper should be cleaned using a toothbrush with soap and water and rinsed as needed to keep it free of dust and dirt. Once the zipper is cleaned, the teeth should be lubricated using beeswax.

INSTALLATION

1. Attach the foam tape to the back of the P-channel leaving gaps for the installation hardware as shown.

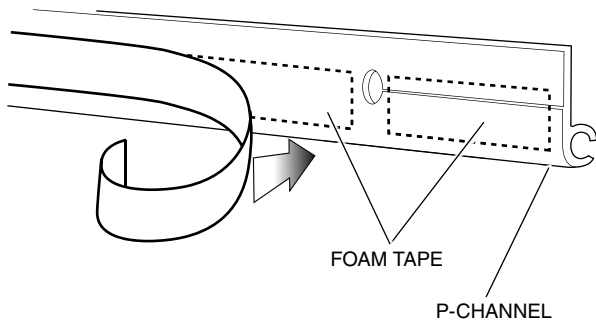



2. Remove the bolts from the clamps along the top edge of the windscreen.
Remove and save the rubber seal from the top edge of the windscreen.

Align the P-channel with the holes for the top clamps.

Reinstall the bolts from the windscreen clamps through the P-channel.

Reinstall the windscreen.


- If using a 2-piece windscreen, secure it in the closed position.

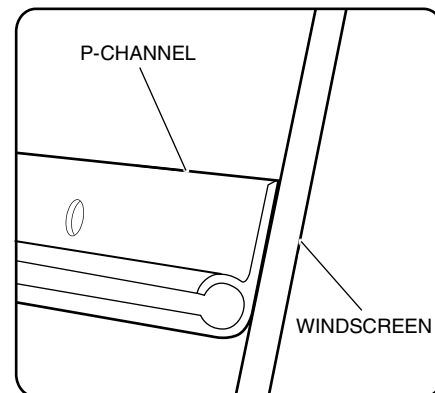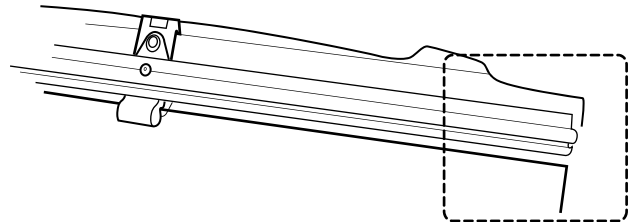


CAUTION

To prevent injuries, wear eye protection and gloves when handling the fiber rods.


3. Install the bar snaps and fiber rods to the cab frame as shown.

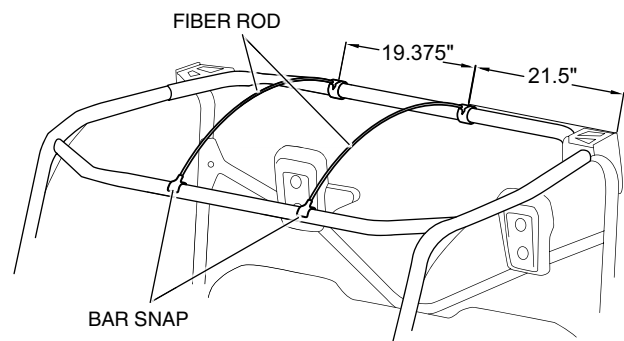


4. Drape the fabric roof/rear panel upside down over the front of the vehicle.
Slide the welting on the front of the panel through the opening in either side of the P-channel as shown.

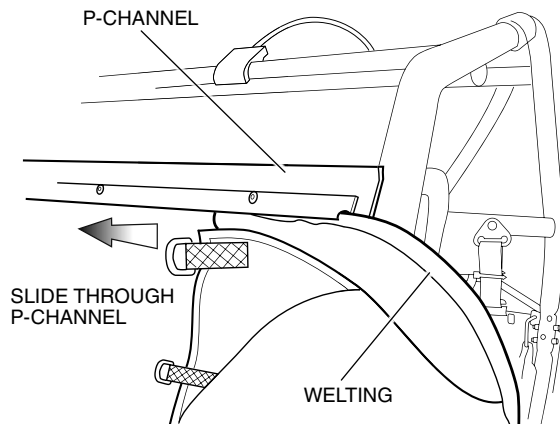


5. Flip the fabric roof/rear panel over the windscreen so it drapes over the cab frame.
Pull the upper rear corners of the panel tight around the rear cab frame as shown.

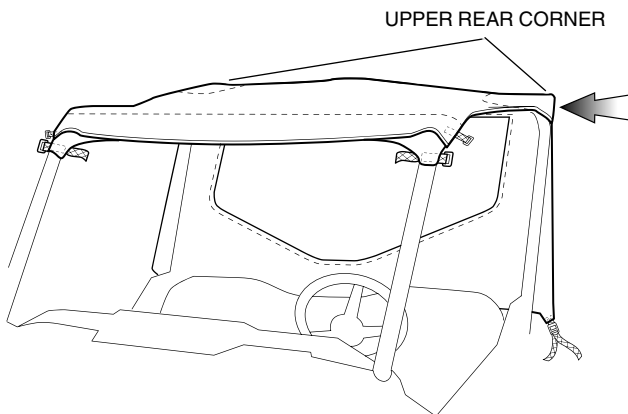


6. Install the two front center wraps around the front horizontal cross bar as shown.

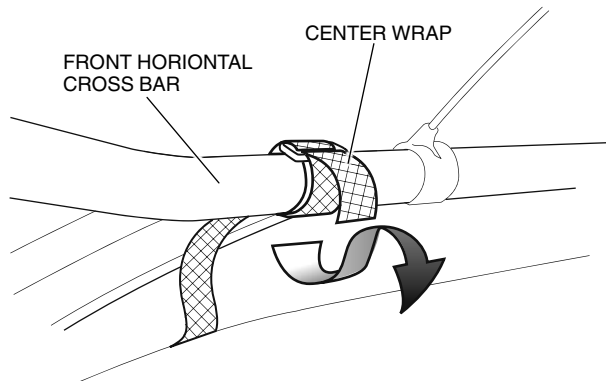


7. Thread the rear side strap behind and around the latch support bar and then back through each ladder lock buckle.
Do this on the other side and then tighten both sides.

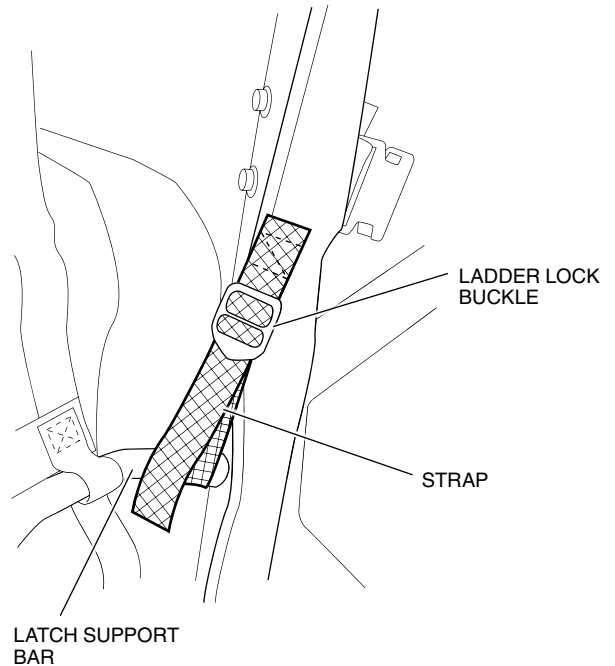


8. Wrap the hook and loop at both lower rear corners of the fabric roof/rear panel around the vertical cab frame.

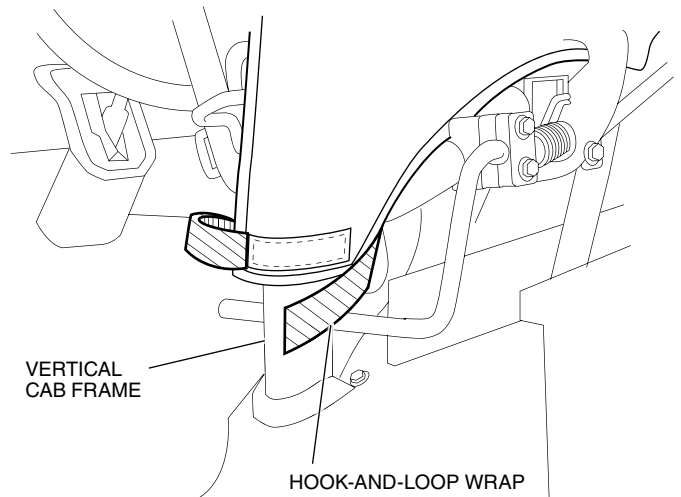



9. Thread the lower rear center straps down and around the upper seat support bar, between the tube and the seat, then back through the ladder lock buckles. Tighten the webbing straps.

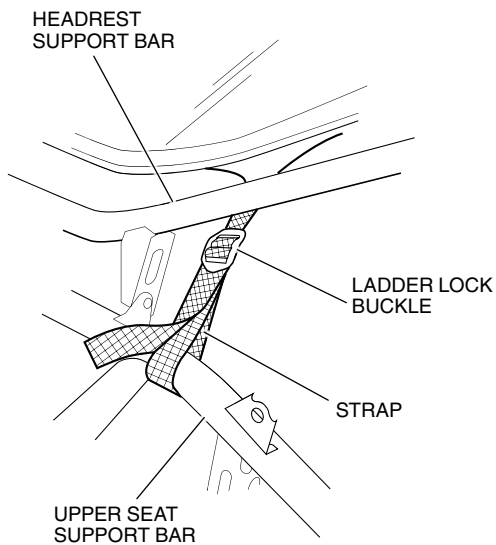

10. Ensure that all three rear magnets are stuck to the upper seat support tube.

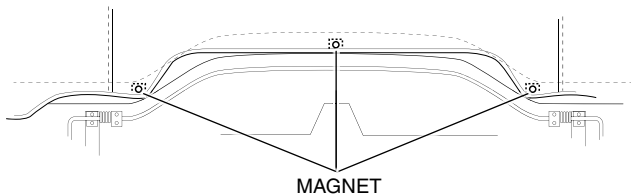

11. Wrap the two front side hook-and-loop straps to the cab frame A-pillars, below the gussets as shown.

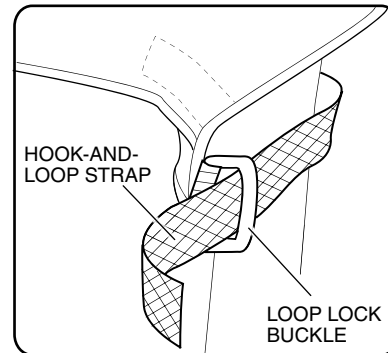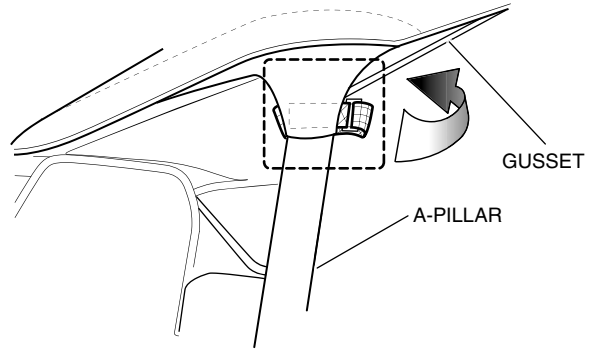

12. Thread the front center straps through the loop lock buckles and fasten them back to themselves.

