



INSTALLATION INSTRUCTIONS


Accessory
**FABRIC ROOF/
REAR PANEL (5P)**
P/N 0SR85-HL4-222A (Black)
0SR85-HL4-221C (Camo)

Application
SXS1000M5P/M5D

Publication No.
MII 15262
Issue Date
October 2015

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

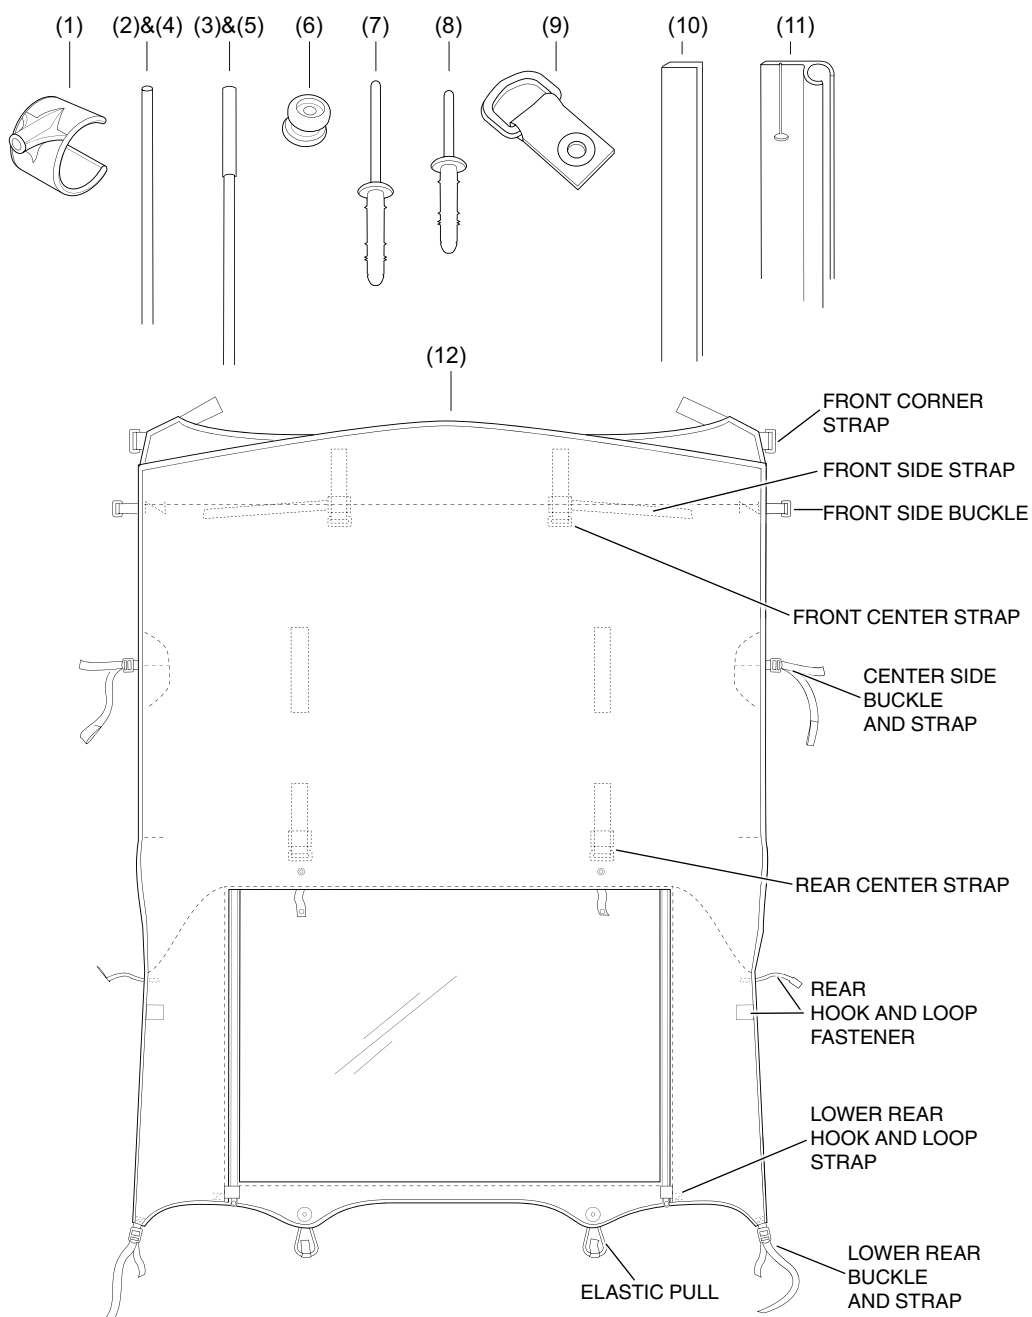

No.	Description	Qty
(1)	Bar snap	8
(2)	Fiber rod - long	2
(3)	Fiber rod - long with ferrule	2
(4)	Fiber rod - short	2
(5)	Fiber rod - short with ferrule	2
(6)	Stay-put knob	2

No.	Description	Qty
(7)	Long rivet (stay put knob)	2
(8)	Short rivet (D-ring strap)	2
(9)	D-ring strap	2
(10)	Foam tape	1
(11)	P-channel	1
(12)	Top back	1
(13)	Installation Instruction URL (not shown)	1

TOOLS AND SUPPLIES REQUIRED


Torx driver (25 mm)
Open-end wrench (12 mm)
Awl
Rivet installation tool
Power drill
Drill bit (4.5 mm)
Gloves
Safety goggles

USE AND CARE INFORMATION


- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with a hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.
- The rear window can be rolled up and stowed using the webbing straps and snaps.
- When not in use, the window roll up straps can be fastened to themselves using the snaps.
- Do not force the zipper on the rear window. In case of a jam, unzip and remove any obstructions. If problems persist, the zipper must be cleaned.
- The zipper should be cleaned using a toothbrush with soap and water and rinsed as needed to keep it free of dust and dirt. Once the zipper is cleaned, the teeth should be lubricated using beeswax.

INSTALLATION

1. Installing the stay-put knobs to the tail gate:
Cut out the "Stay-put Template" from page 9.
Tape the template to the tailgate as shown. Make a mark on the tailgate by pushing an awl through the template drill mark. Remove the template.
Drill a 4.5 mm hole in the marked location.
Install the stay-put knob into the drilled hole using the long rivet.
Repeat for the opposite side.

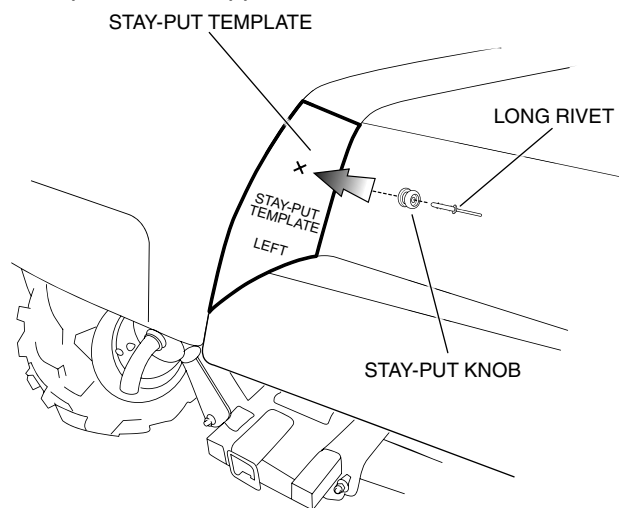

2. Install the D-ring straps to the bed side covers:
If installing on an SXS1000M5P:
Cut out the "Side Templates" from page 7.
Tape the template to the bed side cover as shown. Make a mark on the bed side panel by pushing an awl through the template drill mark. Remove the template.
Drill a 4.5 mm hole in the marked location.
Install the D-ring strap into the drilled hole using a short rivet.
Repeat for the opposite side.

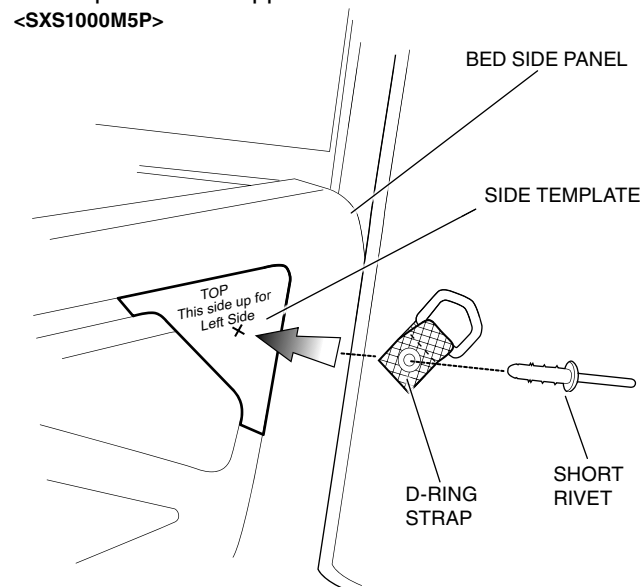


If installing on a SXS1000M5D:

Remove the upper rear bolt from the bed side color panel.


Reinstall the bolt through the D-ring strap as shown.

Repeat for the opposite side.

<SXS1000M5D>

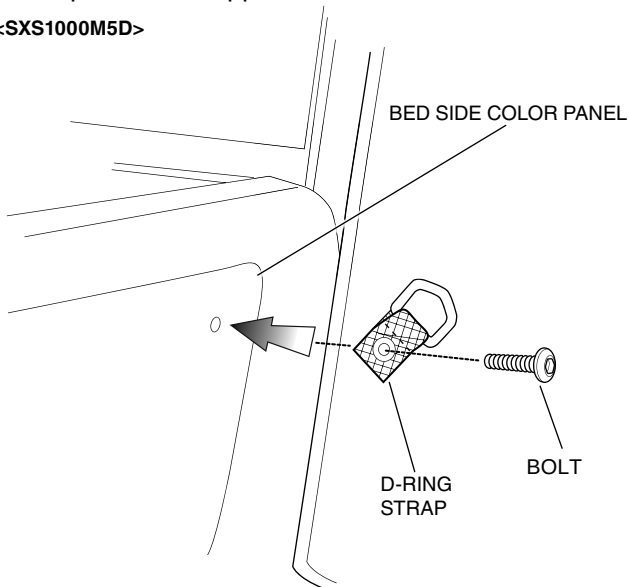

3. Attach the foam tape to the back of the P-channel leaving gaps for the installation hardware as shown.

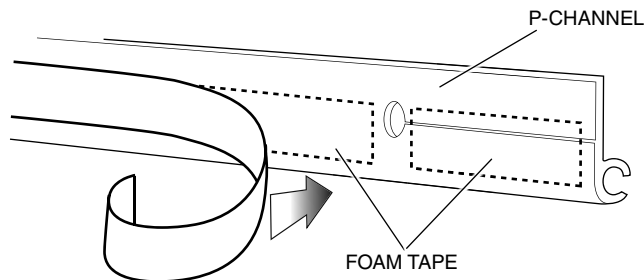

4. Installing the P-channel:

Remove the bolts from the clamps along the top edge of the windscreen.



Remove and save the rubber seal from the top edge of the windscreen.

Align the P-channel with the holes for the top clamps.

Reinstall the bolts from the windscreen clamps through the P-channel.


Reinstall the windscreen.

- If using a 2-piece windscreen, secure it in the closed position.

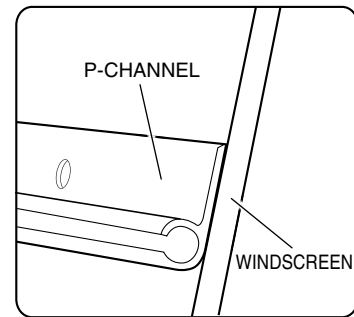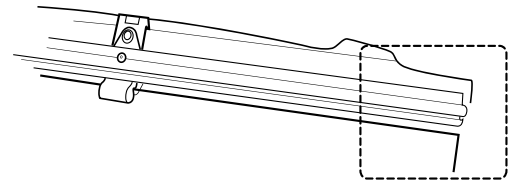


5. Drape the fabric roof/rear panel upside down over the front of the vehicle.

Slide the welting on the front of the fabric roof/rear panel through the opening in either side of the P-channel, as shown.

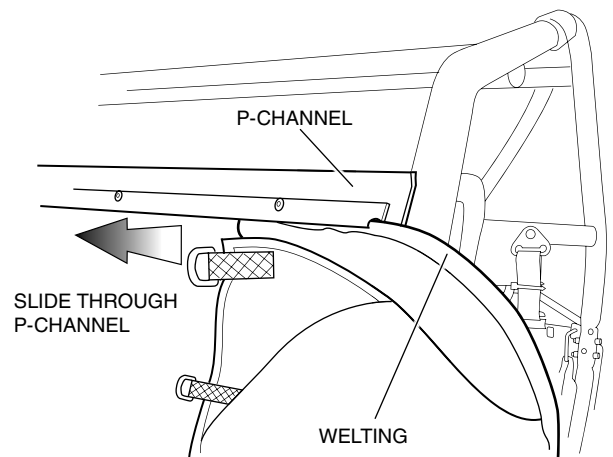

6. Flip the fabric roof/rear panel over the windscreen so it drapes over the cab frame. Pull the upper rear corners of the panel tight around the rear cab frame.

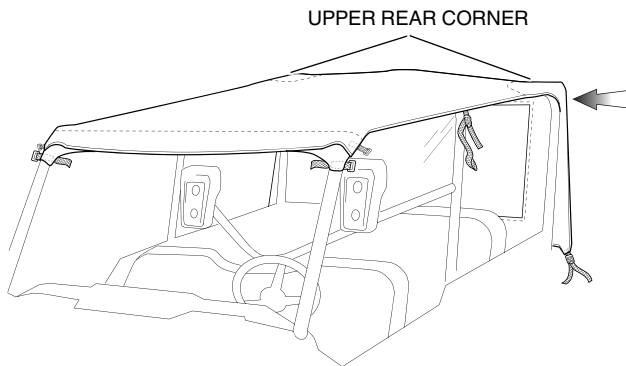


⚠ CAUTION


To prevent injuries, wear eye protection and gloves when handling the fiber rods.

7. Install the fiber rods through the pockets and loops on the fabric roof as shown.
 - Insert the short fiber rods into the loops hanging off of the pockets.


Install a bar snap (not shown) to each fiber rod end and then install them to the cab frame.

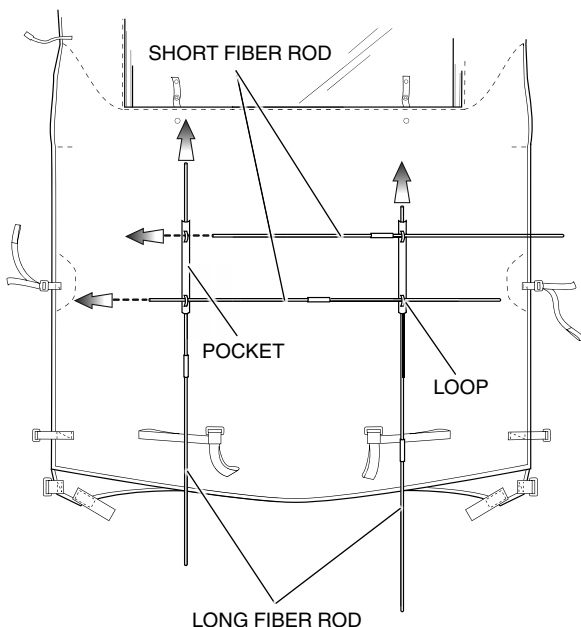

8. Install the front center strap. Wrap the strap around the upper front horizontal cab frame crossbar. Thread the strap through the buckle and back to itself. Repeat for the other side. Repeat for the two rear center straps around the rear horizontal cab frame crossbar.

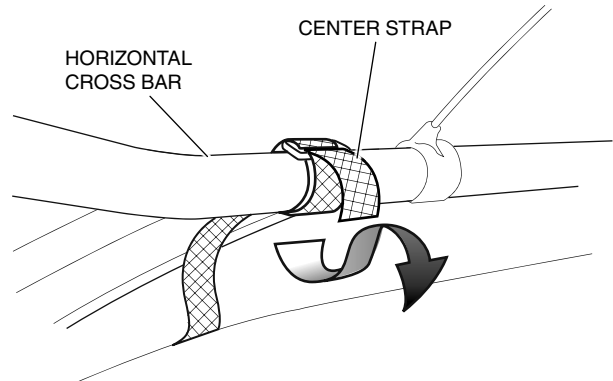


9. Remove the center side strap from the buckle. Thread the strap around the vertical frame tube, below the net bracket, and back through the loop in the end of the strap. Thread the end of the strap back through the buckle and affix the hook and loop fasteners. Repeat for the other side.

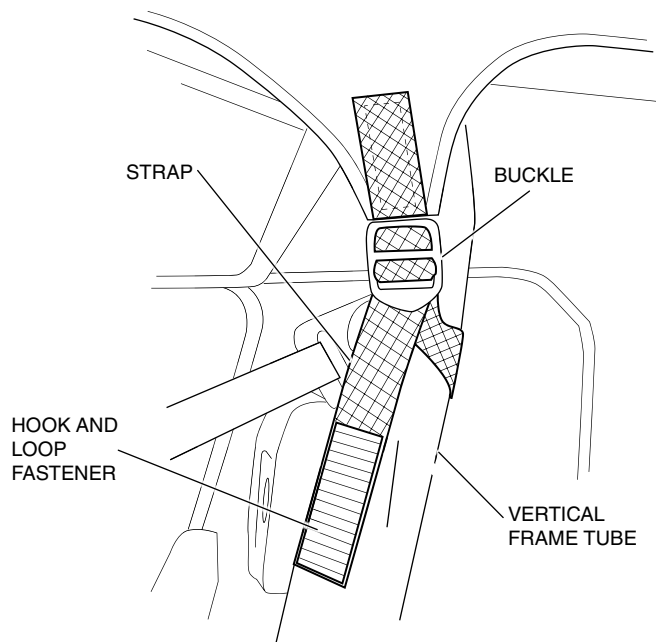

10. Wrap the front corner strap around the cab frame A-pillar, below the gusset. Thread the strap through the plastic buckle and fasten it with the hook and loop fasteners back to itself.

Repeat for the other side.

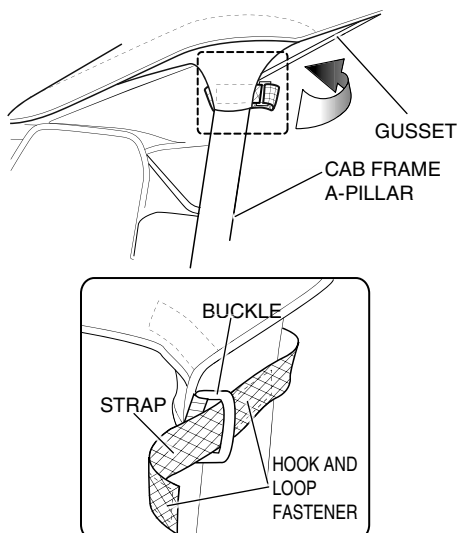


11. Remove the lower rear strap from the buckle at the lower outside corner of the rear panel.

Wrap the strap around the lower frame tube, through the loop at the end of the strap, and thread it back through the buckle.


Do not pull it tight at this time.

Repeat for the other side.

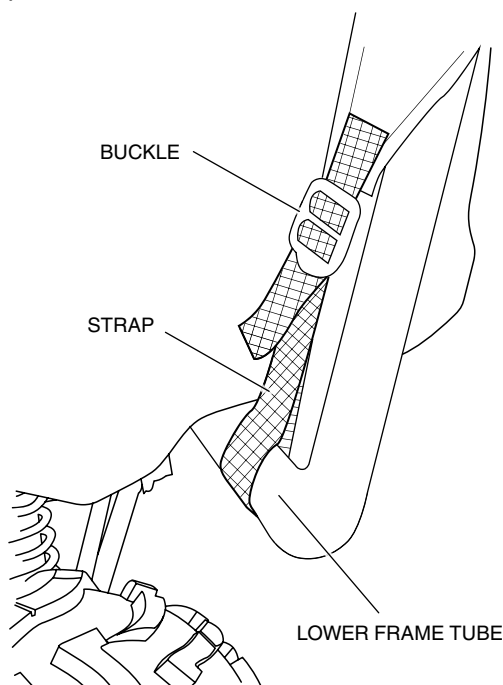


12. Fasten the rear hook and loop fastener at the side of the rear panel around the net attachment bracket and then back to the hook fastener on the rear panel.


Repeat for the other side.

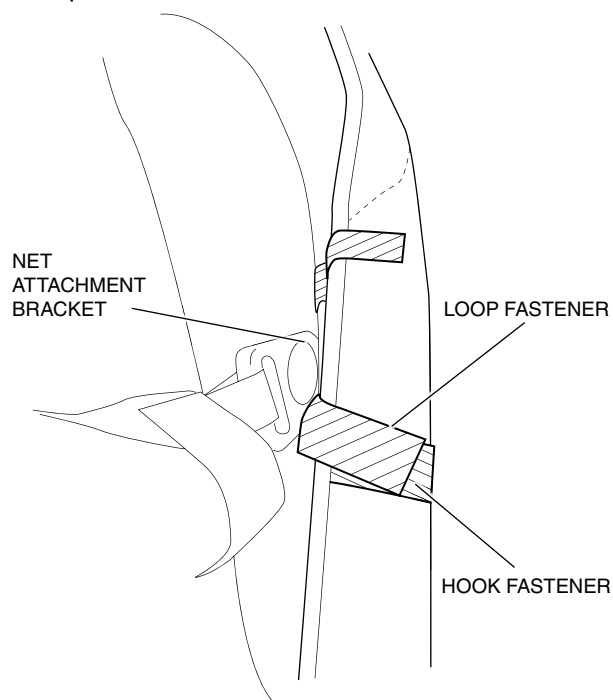


13. Attach the elastic pulls to the stay-put knobs installed in Step 1.

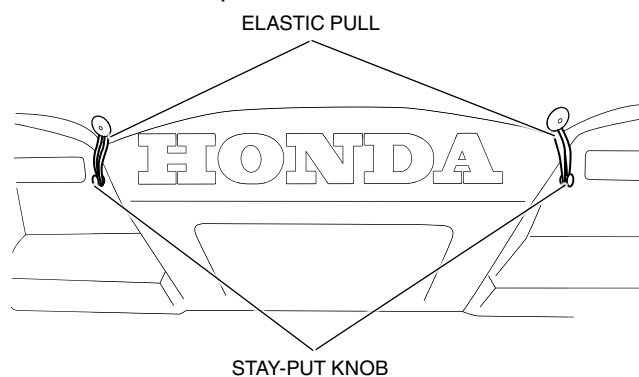





14. Install the front side strap through the front side buckle below the cab frame as shown.
Pull the strap tight and secure the hook and loop fastener on the strap back to itself.
Repeat on the other side.

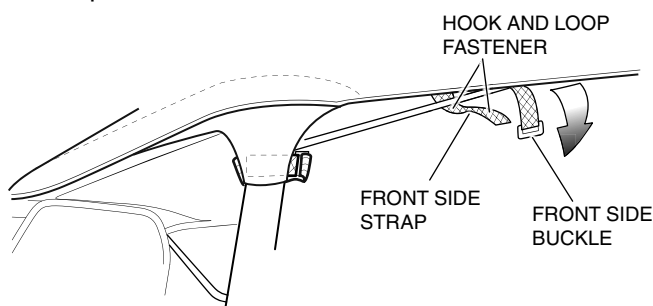

15. Tighten all the straps and ladder lock buckles to tighten the fabric roof/rear panel and remove any wrinkles.
Adjust the side hook-and-loop straps as needed.
Secure the lower hook and loop straps to the D-ring straps installed in Step 2.

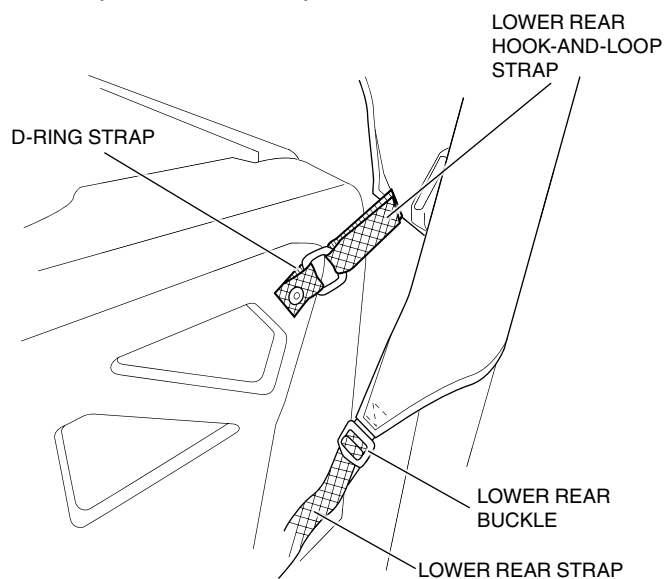

SIDE TEMPLATES

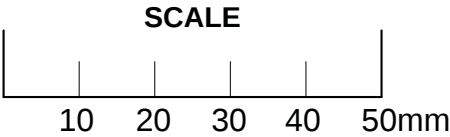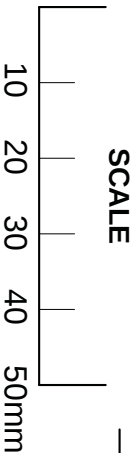
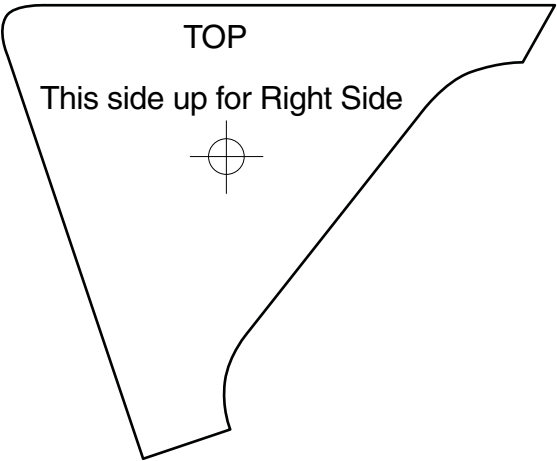
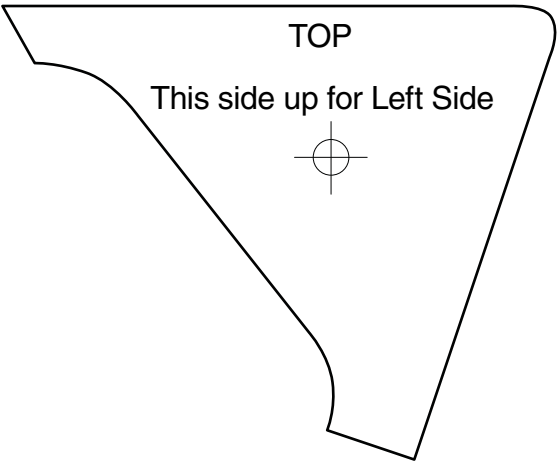


NOTICE

If you print this template from your local computer, make sure the printer settings do not “scale” or “shrink” the page.

**THIS PAGE LEFT BLANK
INTENTIONALLY**

<TEMPLATE>

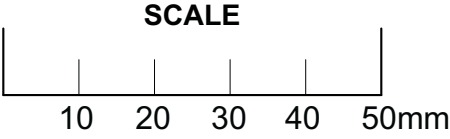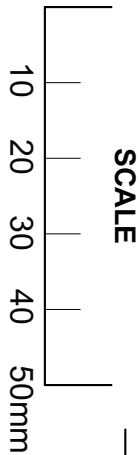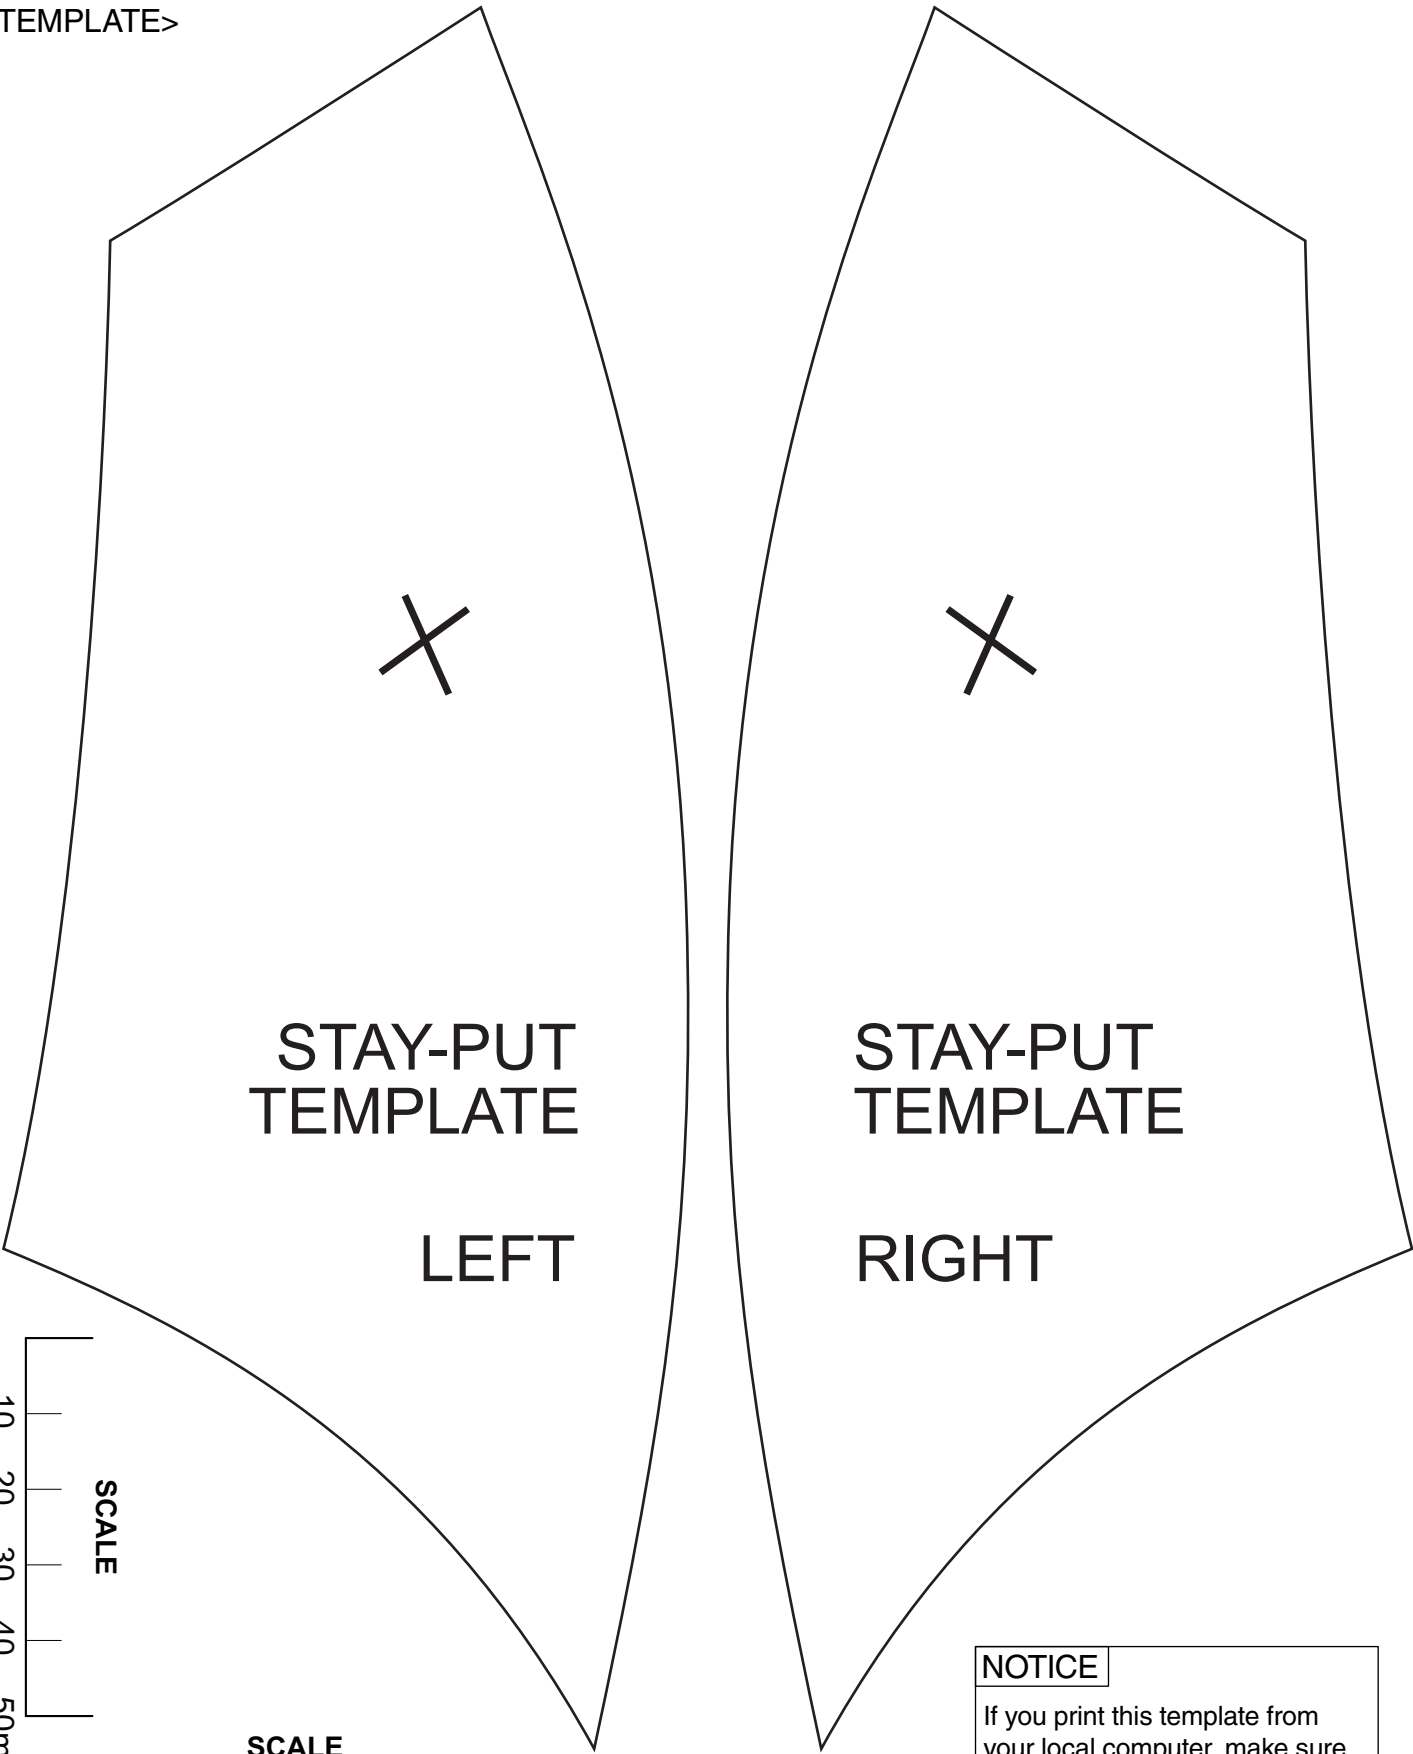

NOTICE
If you print this template from your local computer, make sure the printer settings do not “scale” or “shrink” the page.