



# INSTALLATION INSTRUCTIONS

Accessory

**BIMINI TOP (3P)**  
**P/N 0SR85-HL4-322B**

Application

**SXS1000M3/M3P**

Publication No.


**MII 15262**

Issue Date

**October 2015**

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

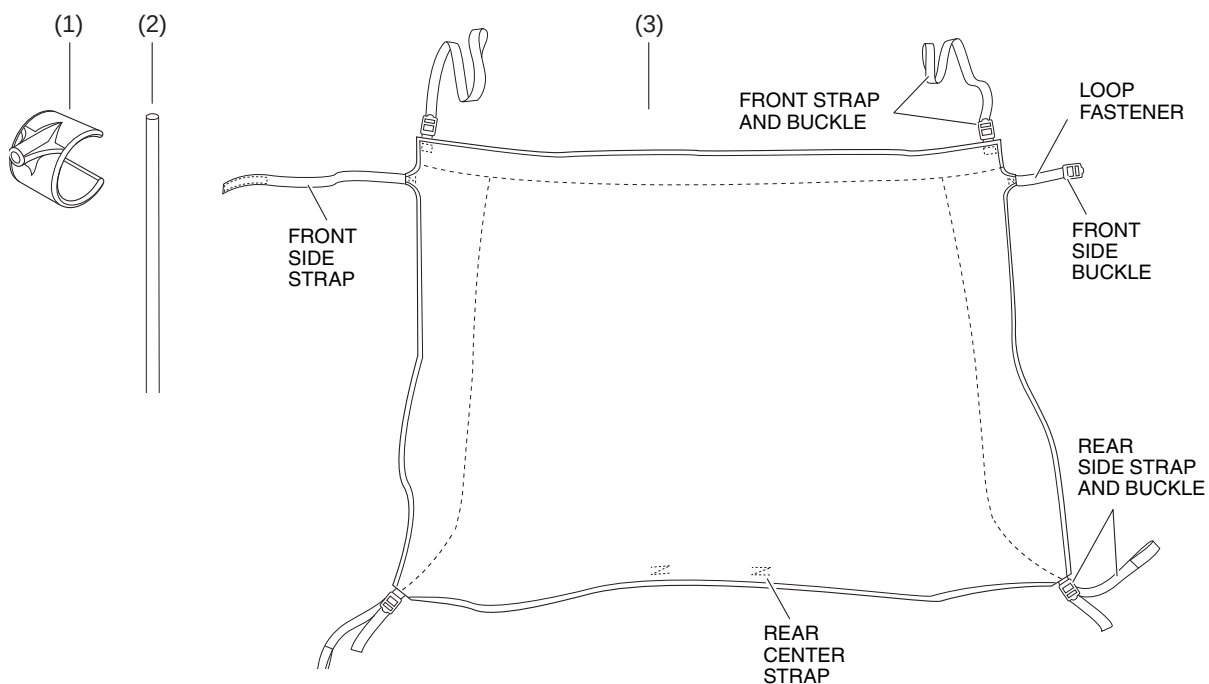

| No. | Description                              | Qty |
|-----|------------------------------------------|-----|
| (1) | Bar snap                                 | 4   |
| (2) | Fiber rod                                | 2   |
| (3) | Bimini top                               | 1   |
| (4) | Installation Instruction URL (not shown) | 1   |

## TOOLS AND SUPPLIES REQUIRED

Gloves  
Safety goggles

## USE AND CARE INFORMATION


- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with a hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.

## INSTALLATION

### ⚠ CAUTION


To prevent injuries, wear eye protection and gloves when handling the fiber rods.

1. Install the bar snaps and fiber rods to the cab frame as shown.
  - The measurements shown are taken from the edge of the cab frame tubes to the centerlines of the fiber rods.

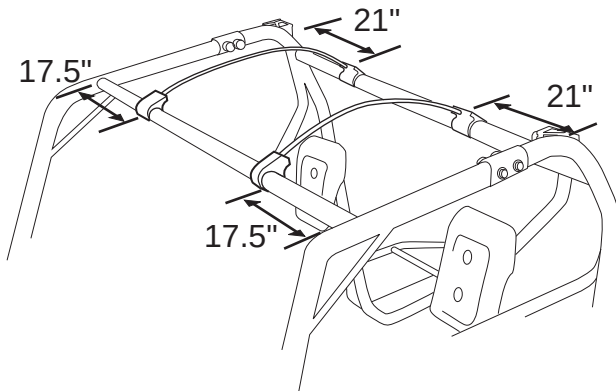


2. Lay the Bimini top over the cab frame as shown.
  - The rear corners should fit snugly over the square rear brackets.


UPPER REAR CORNER

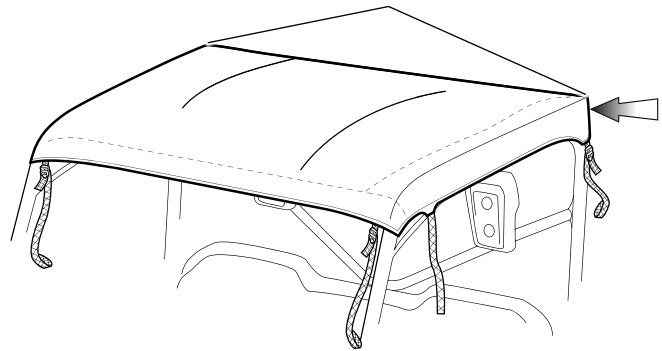


3. Unthread the rear side strap from the buckle. Wrap the strap around the cab frame B-pillar, below the horizontal headrest support bar, and then through the loop sewn in the end of the strap as shown. Thread the strap back through the buckle.
  - Do not tighten at this time.Repeat for the other side.

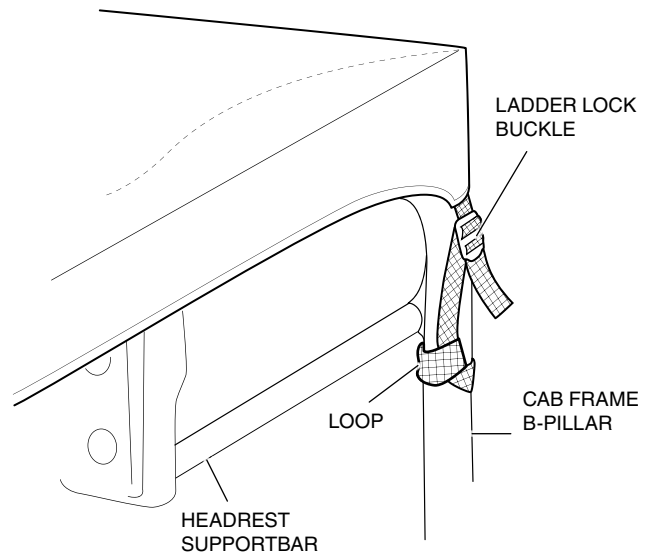

4. Unthread the front strap from the buckle.  
Wrap the strap around the cab frame A-pillar, below the bolted lower joint, and then through the loop sewn in the end of the strap as shown.  
Thread the strap back through the buckle.  
Repeat for the other side.  
Tighten all straps at this time.

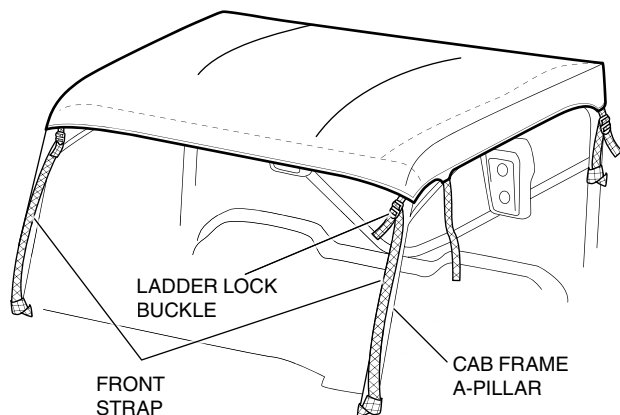

5. Wrap the rear strap around the upper rear horizontal frame bar, through the loop lock buckle and back to itself.  
Repeat on the other side.

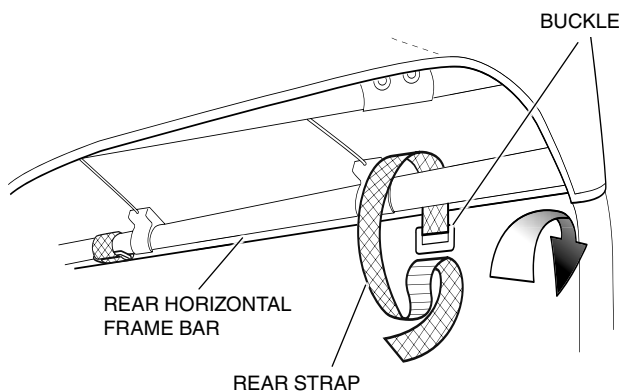

6. Install the front side strap as shown.
- The strap must run on top of the plastic bar snaps, not on the fiber rods.
- Thread the strap through the mating front side buckle and tighten.  
Secure the end of the strap by doubling it back through the end of the buckle and attaching the hook and loop fasteners.  
Repeat for the other side.

