



INSTALLATION INSTRUCTIONS


Accessory
FABRIC ROOF/REAR PANEL
P/N 0SR85-HL5-200
0SR85-HL5-400C

Application
SXS500M2

Publication No.
MII 14948
Issue Date
June 2014

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

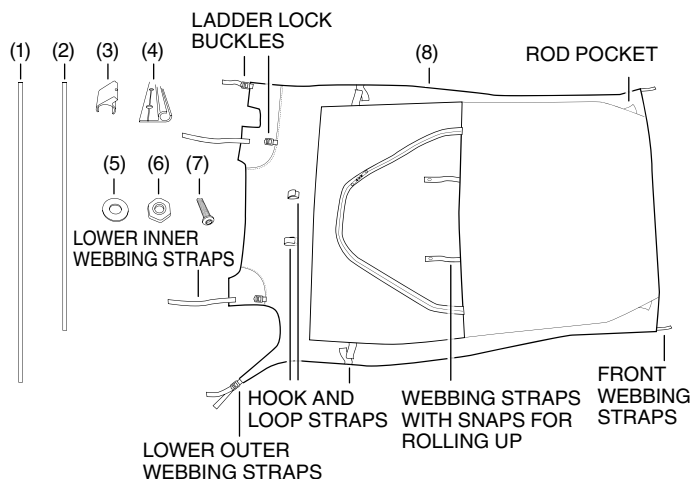

No.	Description	Qty
(1)	Long fiber rod	2
(2)	Short fiber rod	2
(3)	Bar snap	4
(4)	P-channel	1
(5)	6 mm washer	10
(6)	6 mm nut	5
(7)	6 mm bolt	5
(8)	Fabric roof/rear panel	1

NOTE:

A Full Poly Windscreen is required for the installation of this accessory. If the windscreen is already installed, it will need to be removed prior to installation of this accessory.

TOOLS AND SUPPLIES REQUIRED

Gloves

Safety Glasses

Power drill

Drill Bit, 6 mm (1/4 inch)

Socket (10 mm)

Ratchet

Hex Wrench (4 mm)

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N-m	kgf-m	lbf-ft
6 mm bolt/nut	5.6	0.55	4.1

USE AND CARE INFORMATION

- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with a hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.
- The rear window can be rolled up and stowed using the webbing straps and snaps.
- When not in use, the window roll up webbing straps can be fastened to themselves using the snaps.
- Do not force the zipper on the rear window. In case of a jam, unzip and remove any obstructions. If problems persist, the zipper must be cleaned.
- The zipper should be cleaned using a toothbrush with soap and water and rinsed as needed to keep it free of dust and dirt. Once the zipper is cleaned, the teeth should be lubricated using beeswax.

NOTICE

- This accessory will create the need for more frequent air cleaner maintenance. Service the air cleaner daily when operating in dusty conditions.

INSTALLATION


⚠ CAUTION

To prevent eye injuries, wear eye protection when handling the fiber rods. To prevent injury from splinters, wear protective gloves when handling the fiber rods.

1. Refer to the Service Manual for the vehicle, remove the seat back and seat from the vehicle.
Unhook the upper rear net attachment point.


2. Align the P-channel against the top edge of the windscreen with its opening facing down as shown.
Position the top edge of the P-channel 1.125" from the top bend of the windscreen and center it side to side.

Using the holes in the P-channel as a guide, drill five 6 mm holes in the windscreen. Clean and de-burr the holes.

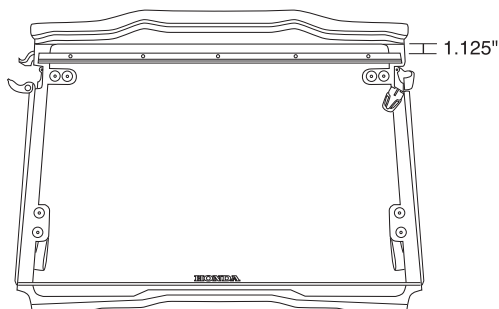


3. Install the P-channel using the 6 mm hardware, with each bolt and one washer inserted from the outside and with another washer and each nut on the inside of the windscreen.


Once the P-channel has been installed, reinstall the windscreen to the vehicle; do not fasten the upper windscreen clamps at this time.

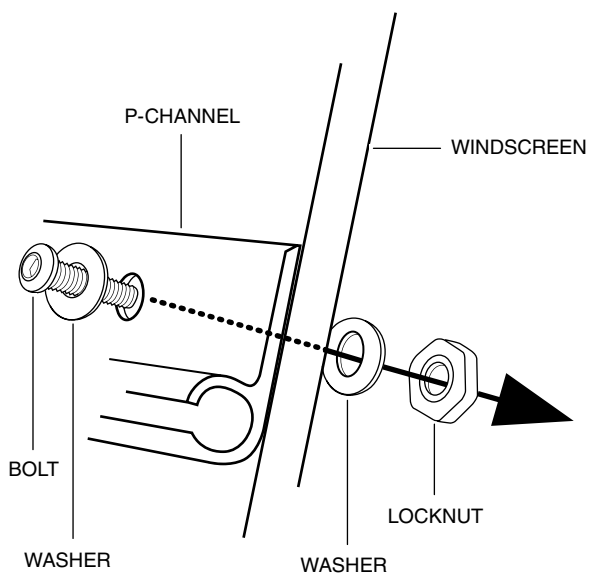


4. Install the long fiber rods into the fabric top/back, as shown.

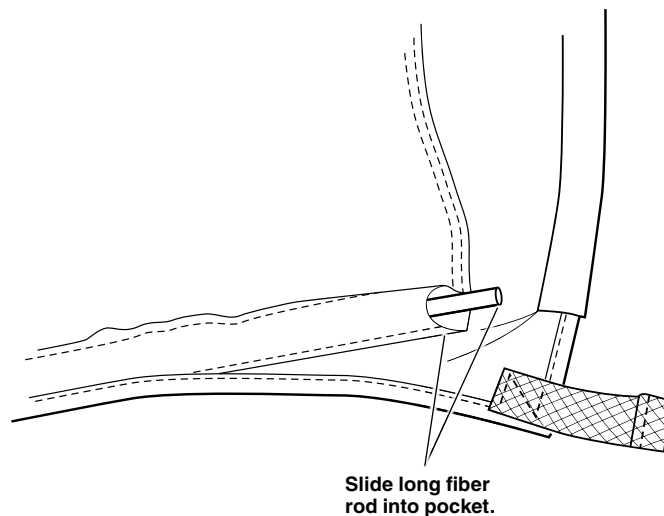

5. Install the bar snaps and short fiber rods to the cab frame as shown.

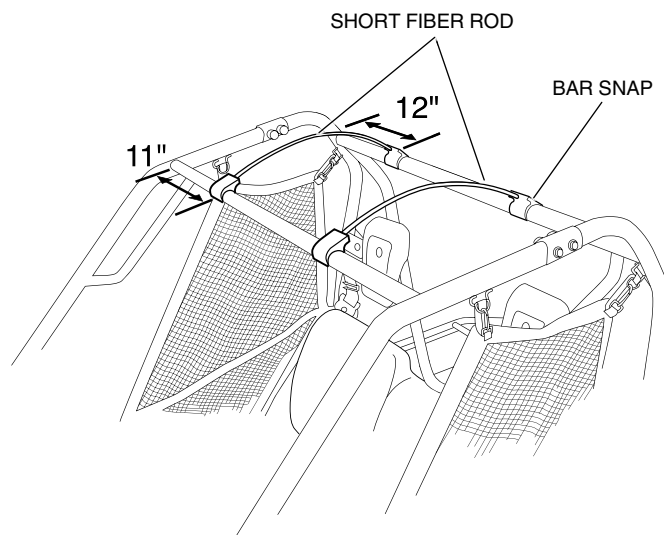


6. Install the fabric top/back to the P-channel by draping it upside-down over the front of the vehicle and sliding the welting on the front through the opening in either end of the P-channel.

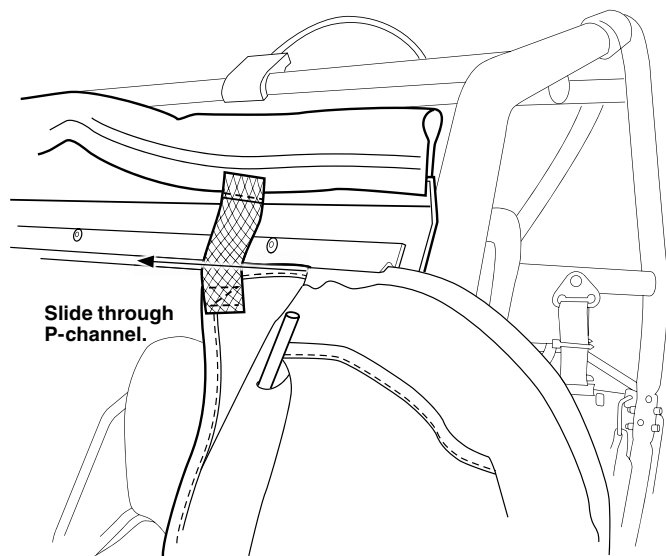

7. Flip the soft top over the windscreen so it drapes over the cab frame.




Pull the front webbing under the upper windscreen clamps, and close the clamps. Make sure that the fabric top/back is seated evenly from side to side.

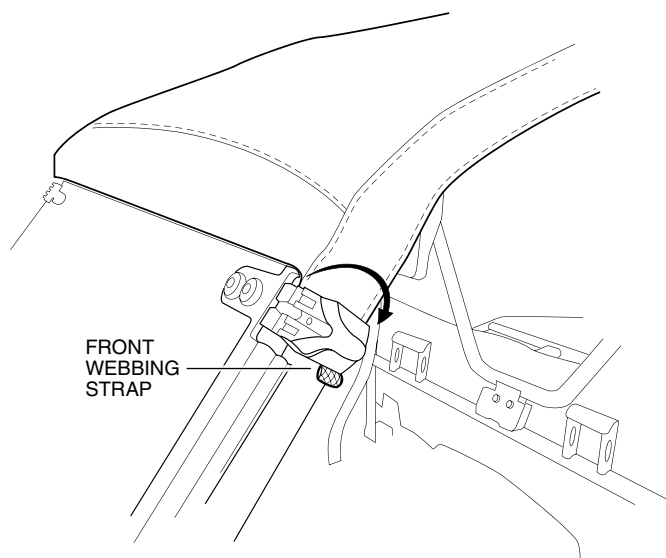



8. Tilt the windscreen up to ease the rest of the installation process and ensure a tight fit.

Remove the lower outer webbing straps from the ladder-lock buckles. Fasten the webbing straps around the lower horizontal cab bars and back through the loops on the end of the webbing straps.


Thread the tail through the ladder lock buckle. Do not fully tighten the straps at this time.

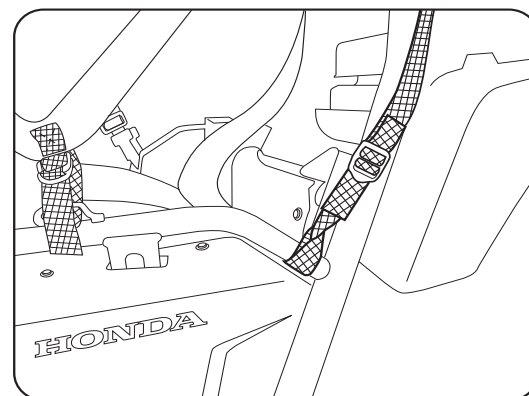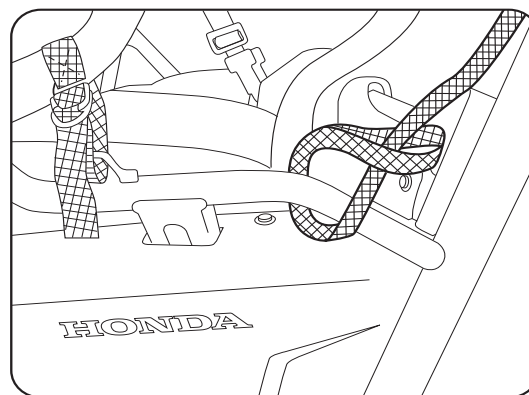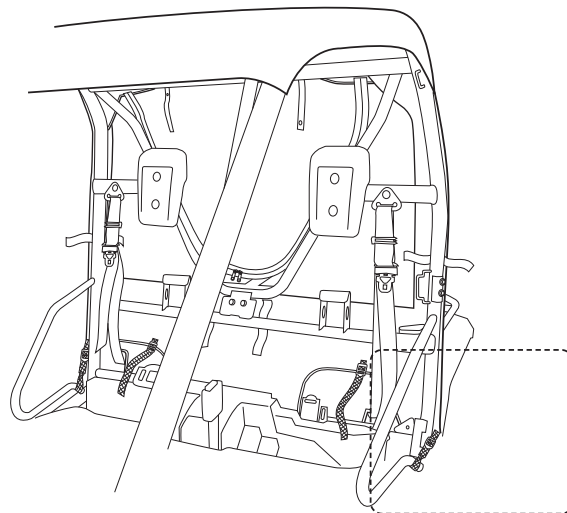

9. From the inside of the vehicle, thread the lower inner webbing straps around the lower horizontal cab frame bar, and then up through the ladder lock buckle as shown.

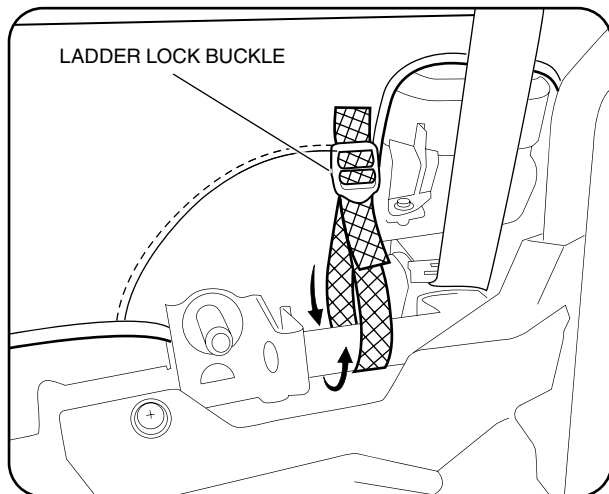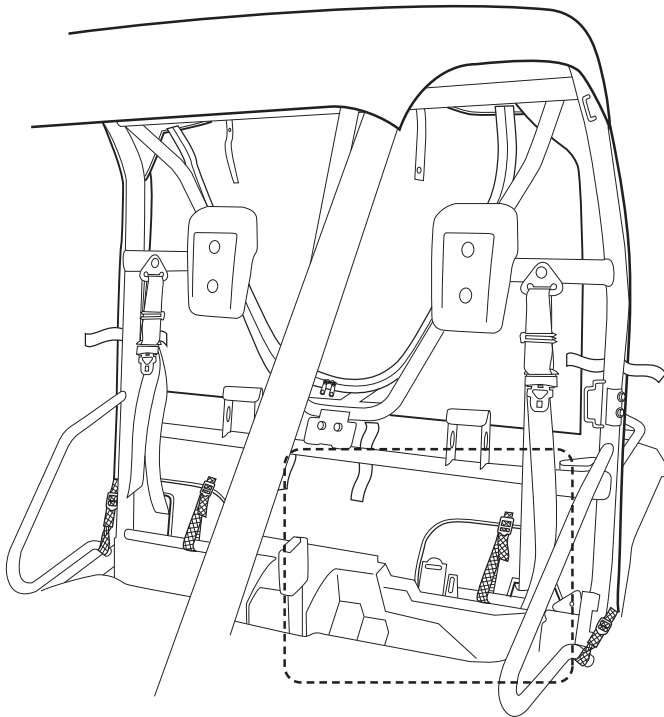

10. Tighten all of the webbing straps evenly. The top of the rear window should be even with the upper horizontal cab frame bar. The bottom of the rear window should be pulled tight.

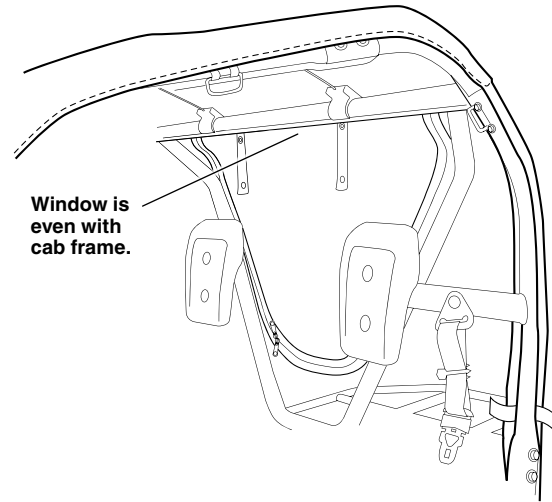

11. From the inside of the vehicle, tightly fasten the hook-and-loop straps around the vertical cab frame bars. Tightly fasten the hook-and-loop straps around the lower horizontal cab frame bar.

