



INSTALLATION INSTRUCTIONS

Accessory

REAR CAB NET
P/N 0SR95-HL3-200B

Application

SXS700M2/M4

Publication No.

MII 14607

Issue Date

August 2013

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

No.	Description	Qty
(1)	Rear cab net	1

USE AND CARE INFORMATION

- Completely read and understand the instructions before installing this accessory.
- To clean, sponge with mild soap and cold water, rinse with cold water and allow to drip-dry.
- Do not use bleach, harsh detergents, or hot water.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.


INSTALLATION

1. Tilt the cargo bed to the dump position.
2. Loop the top webbing over the upper middle cab frame cross bar and then feed them through the D-Rings, leaving about 25 mm (1.0 in) of webbing exposed.

NOTE: The top edge of the rear cab net is straight, and the bottom edge is slightly curved.

UPPER MIDDLE CAB
FRAME CROSS BAR


TOP WEBBING

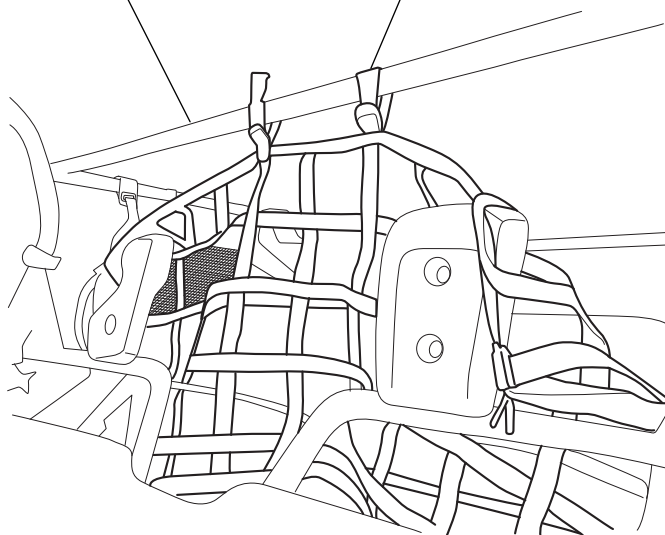

3. Loop the side webbing around the cab frame uprights and then feed them through the D-Rings, leaving about 25 mm (1.0 in) of webbing exposed.

CAB FRAME UPRIGHT

SIDE WEBBING

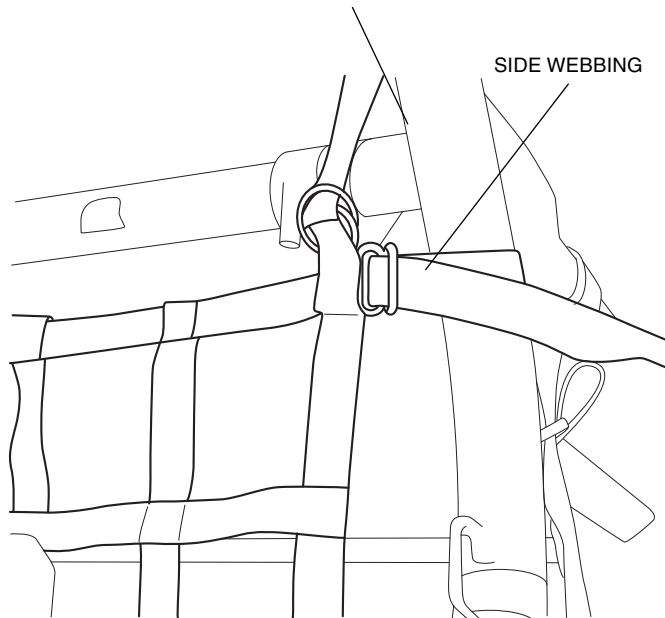

4. Loop the lower straps around the lower cab frame cross bar and then feed them through the D-Rings, leaving about 25 mm (1.0 in) of webbing exposed.
5. Tighten all straps evenly and securely.