



INSTALLATION INSTRUCTIONS

Accessory

FABRIC REAR PANEL (4P)
P/N 0SR95-HL3-211B

Application

SXS700M4

Publication No.


MII 14607

Issue Date

September 2013

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

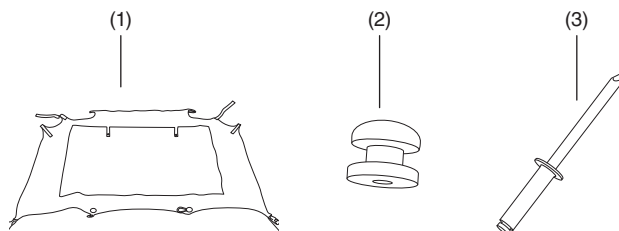

No.	Description	Qty
(1)	Fabric rear panel	1
(2)	Stay-put	2
(3)	Rivet	2

TOOLS REQUIRED

Power drill

3/16 inch drill bit

Rivet tool

Awl

TORQUE VALUES

Not Applicable

USE AND CARE INFORMATION



- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.

NOTICE



- This accessory will create the need for more frequent air cleaner maintenance. Service the air cleaner daily when operating in dusty conditions.

INSTALLATION


1. Install the rear panel over the rear upper cab frame and zip it together around the cab frame cross bar as shown.

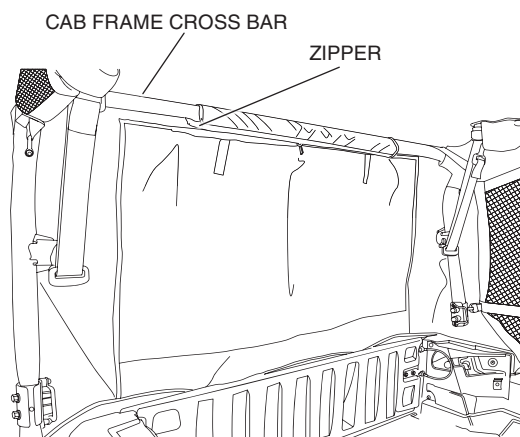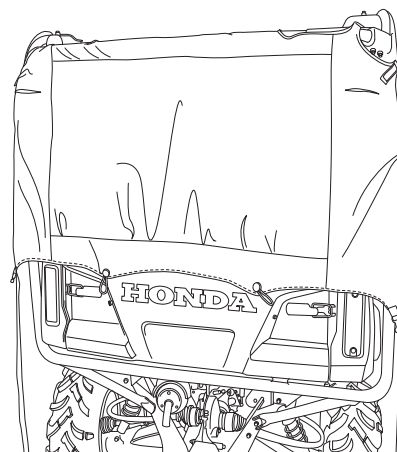


2. Route the top strap around the cab frame and attach it to the hook and loop as shown.

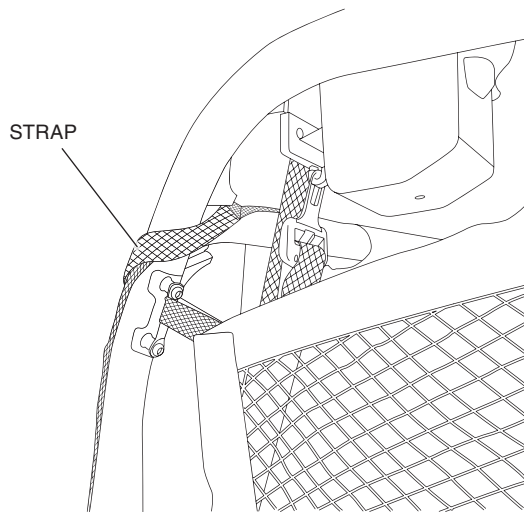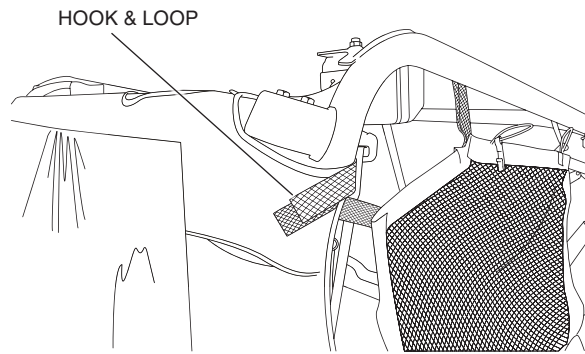

3. Release the SR buckles and loop the straps around the lower frame as shown.

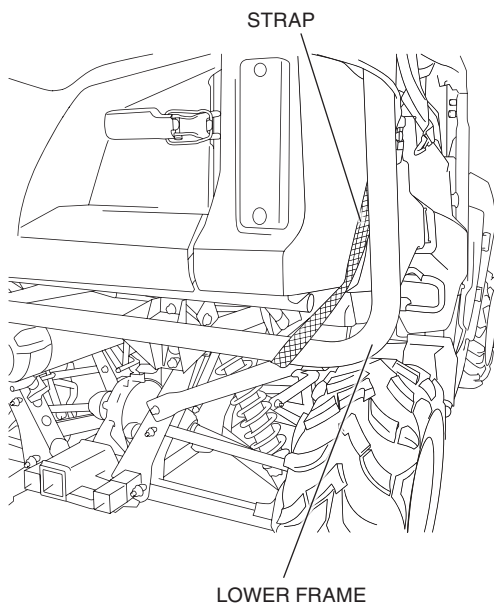


4. Attach SR buckles and tighten both sides equally so that the rear panel is centered on the cab frame.

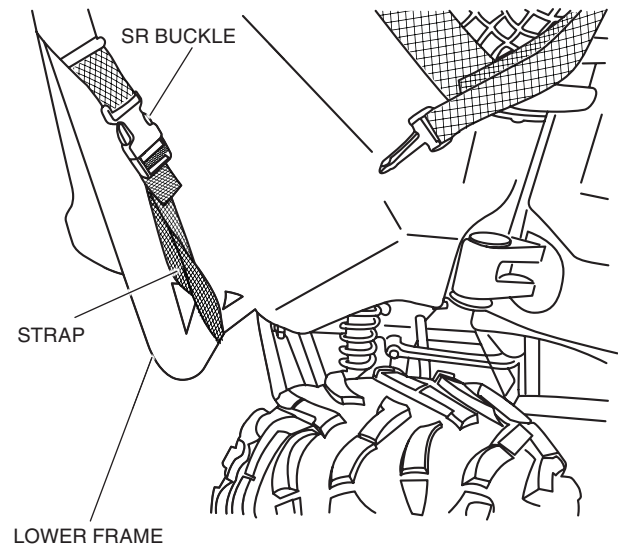


5. Cut out the drilling templates from Page 6 and tape them to the tailgate as shown.


<Right side shown>

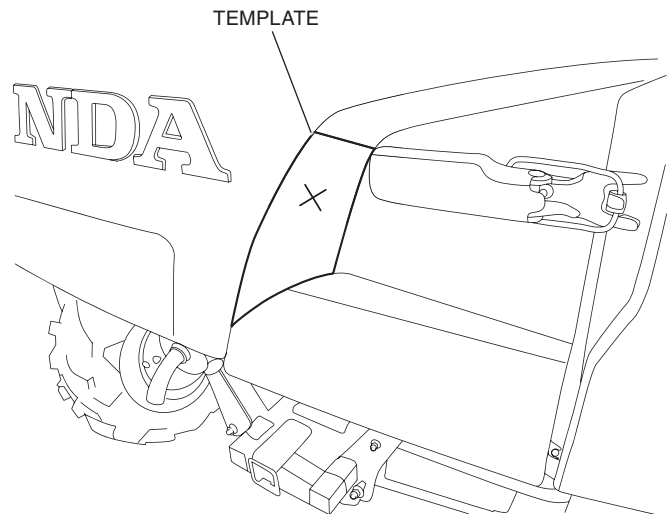


6. Make drill marks on the tailgate by pushing an awl through the "X" mark in the drilling templates. Remove the drilling templates.

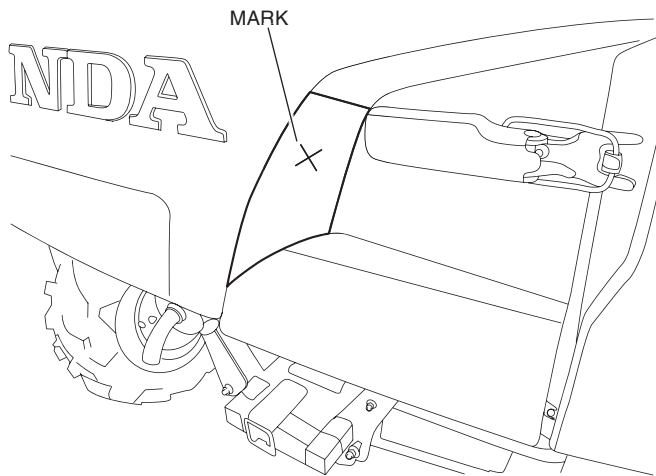

7. Drill holes through the marked points with a 3/16 inch drill bit.
8. Insert a rivet through each stay-put as shown and attach them to the tailgate at the drilled holes with a rivet tool.

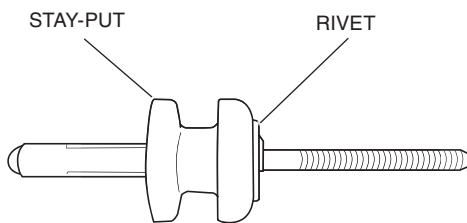

9. Stretch the bungees around the stay-puts as shown.

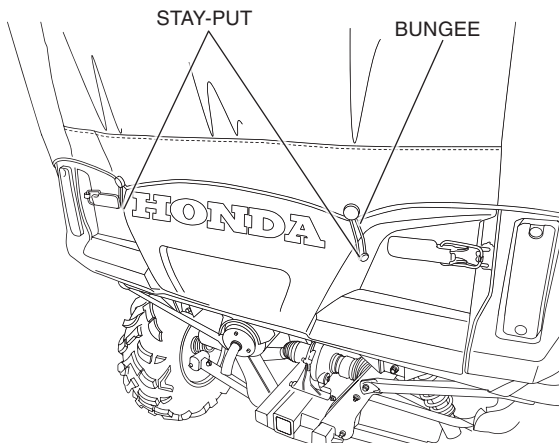

**THIS PAGE LEFT BLANK
INTENTIONALLY**

