



INSTALLATION INSTRUCTIONS

Accessory

FABRIC REAR PANEL
P/N 0SR95-HL5-101

Application

SXS500M2

Publication No.


MII 55186

Issue Date

May 2024

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

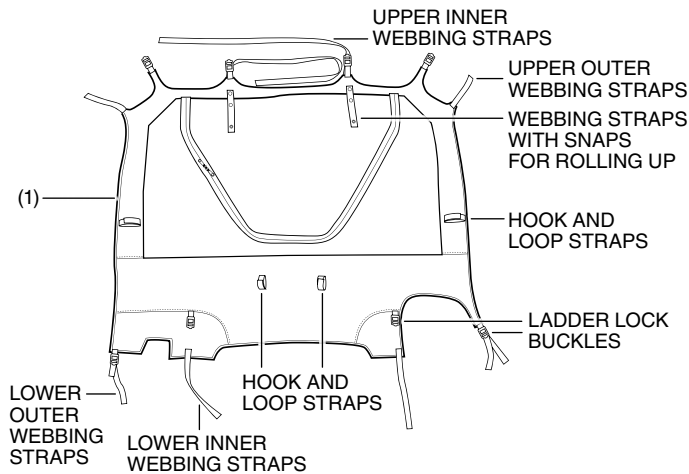

No.	Description	Qty
(1)	Fabric rear panel	1

USE AND CARE INFORMATION



- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with a hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.
- The rear window can be rolled up and stowed using the webbing straps and snaps.
- When not in use, the window roll up webbing straps can be fastened to themselves using the snaps.
- Do not force the zipper on the rear window. In case of a jam, unzip and remove any obstructions. If problems persist, the zipper must be cleaned.
- The zipper should be cleaned using a toothbrush with soap and water and rinsed as needed to keep it free of dust and dirt. Once the zipper is cleaned, the teeth should be lubricated using beeswax.

NOTICE

- This accessory will create the need for more frequent air cleaner maintenance. Service the air cleaner daily when operating in dusty conditions.

INSTALLATION




1. Refer to the Service Manual for the vehicle, remove the seat back and seat.
Unhook the upper rear net attachment point.
2. Drape the rear window over the back cab frame and attach the upper corners by threading the outer upper webbing straps through the ladder lock buckles. Do not fully tighten the straps at this time.

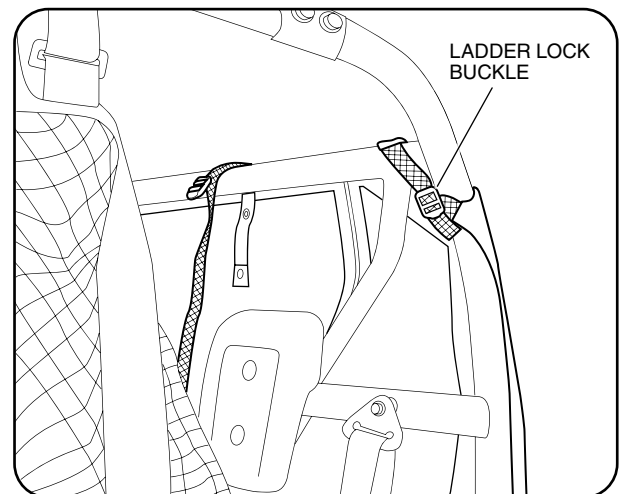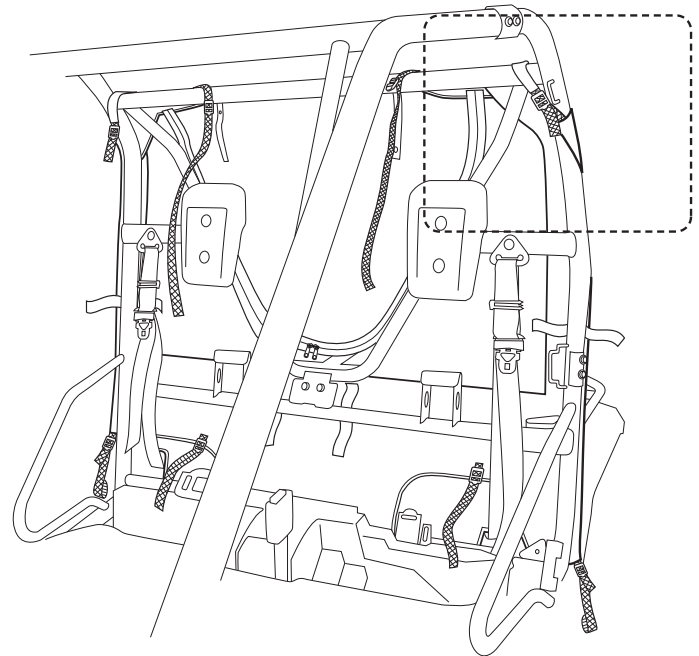



3. Remove the lower outer webbing straps from the ladder lock buckles.

Fasten the webbing straps around the lower horizontal cab bars and back through the loops on the end of the webbing straps.



Thread the tail through the ladder lock buckles. Do not fully tighten the straps at this time.

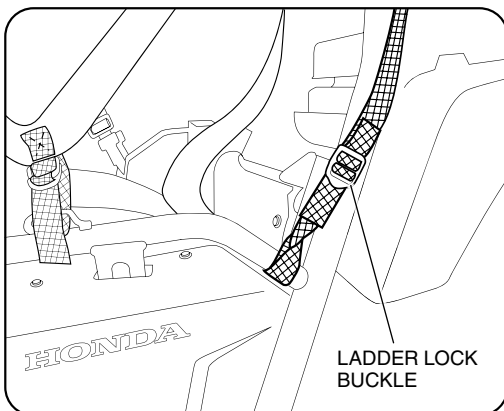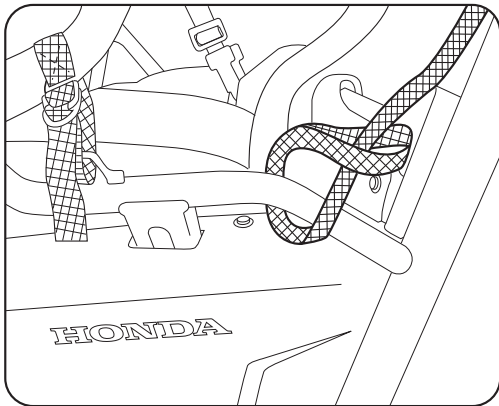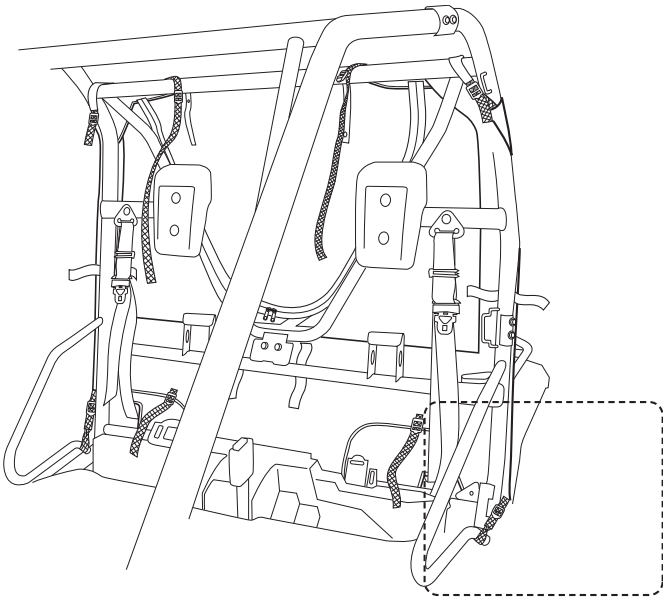


4. Thread the upper center webbing straps around the diagonal cab frame bars, below the head rests, and back up and through the ladder lock buckles. Do not fully tighten the straps at this time.

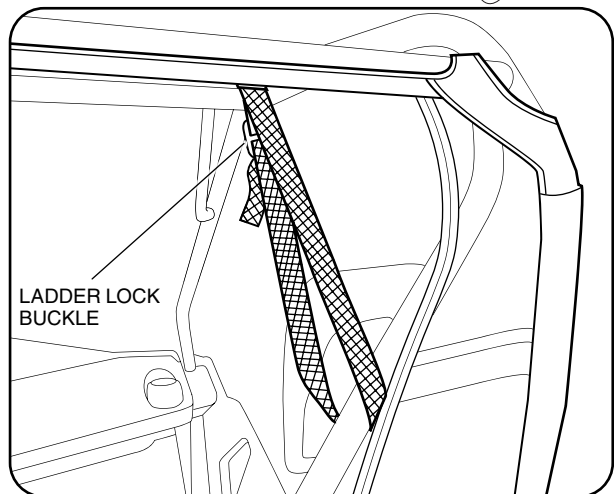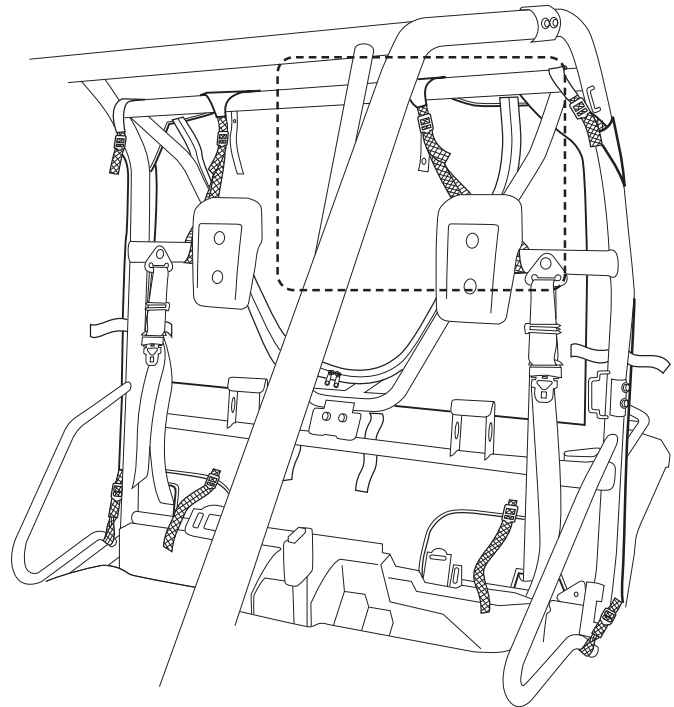

5. From the inside of the vehicle, thread the lower inner webbing straps around the lower horizontal cab frame bar, and then up through the ladder lock buckle.

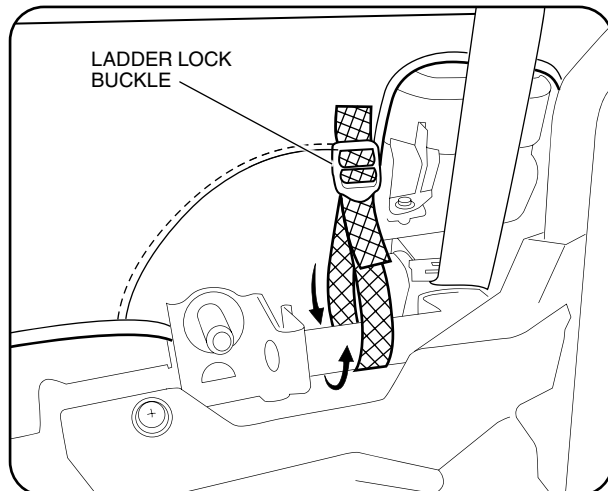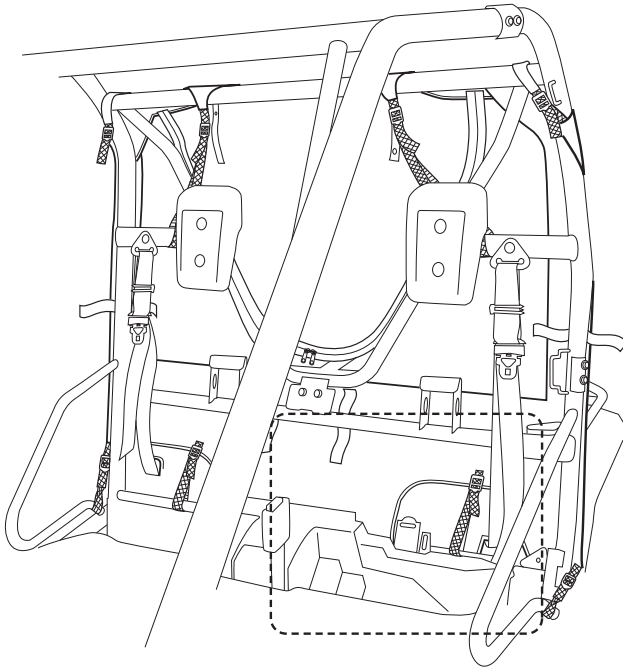

6. Tighten all of the webbing straps evenly. The top of the rear window should be even with the upper horizontal cab frame bar. The bottom of the rear window should be pulled tight.

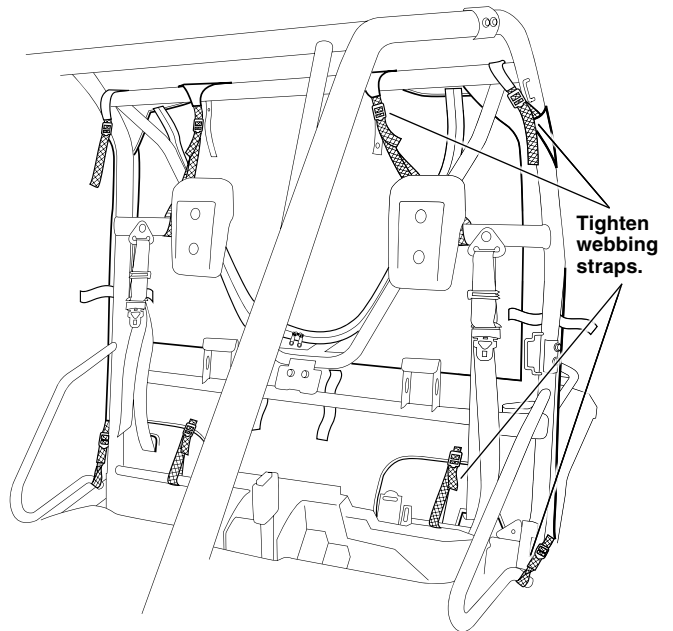

7. From the inside of the vehicle, tightly fasten the hook and loop straps around the vertical cab frame bars. Tightly fasten the hook and loop straps around the lower horizontal cab frame bar.

