



INSTALLATION INSTRUCTIONS

Accessory

REAR CAB NET
P/N 0SR95-HL5-200B

Application

SXS500M2

Publication No.


MII 14948

Issue Date

June 2014

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

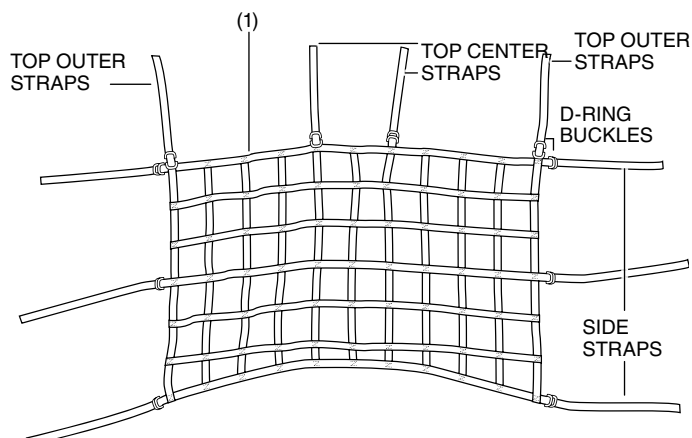

No.	Description	Qty
(1)	Rear cab net	1

USE AND CARE INFORMATION


- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with a hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.

INSTALLATION

NOTE:

The top edge of the rear cab net is straight and the bottom edge is slightly curved.


1. Loop the two top center straps over the upper middle cab frame cross bars and then feed them through the D-Rings, leaving about 25 mm (1.0 in) of strap exposed.

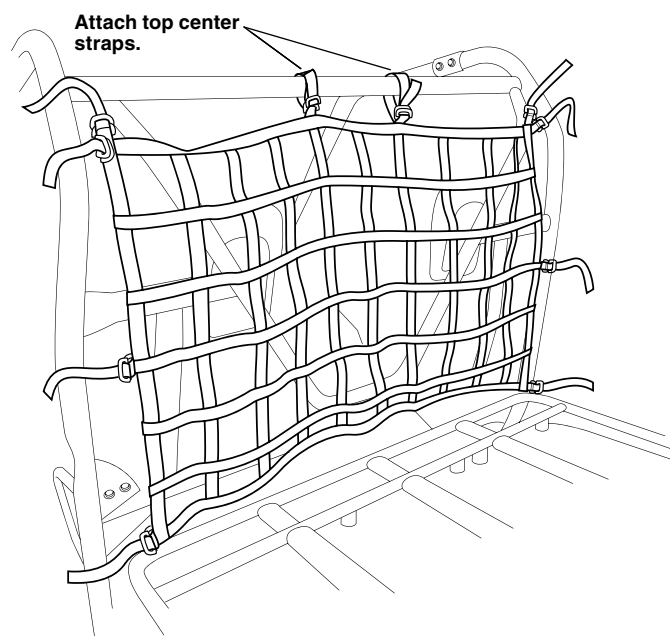

2. Fasten the remaining top outer straps on the upper cab frame cross bar followed by the three webbing straps on each side, working from top to bottom.

The top outer straps should be fastened directly adjacent to the vertical cab frame bar. The lowest side strap should be fastened beneath the lower horizontal frame cross bar bracket.

Feed the straps through the D-Rings, leaving about 25 mm (1.0 in) of strap exposed.

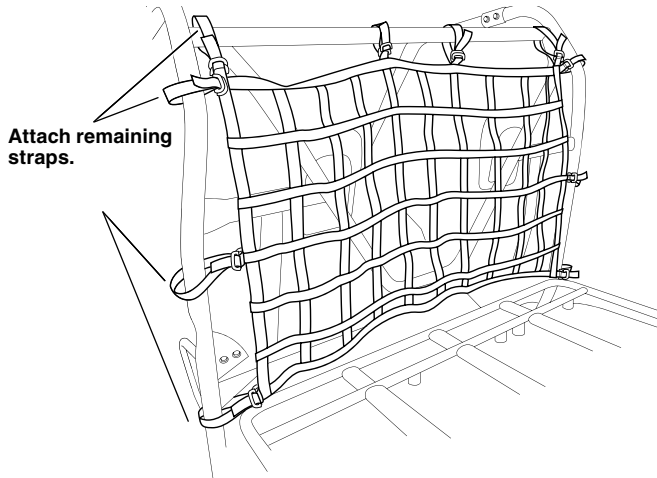

3. Tighten all the straps evenly to secure the cargo net.

