



INSTALLATION INSTRUCTIONS

Accessory

HARD REAR PANEL
P/N 0SU95-HL3-102 (2P)
0SU95-HL3-102B (4P)
0SU95-HL3-104B (4P)

Application

SXS700M4/M2

Publication No.


M11 14607

Issue Date

August 2013

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

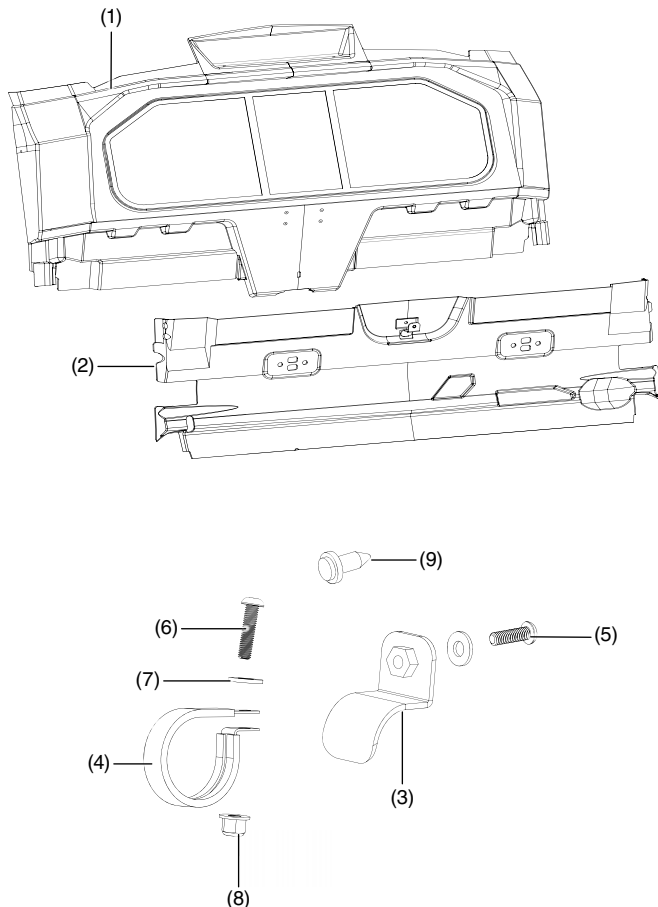

No.	Description	Qty
(1)	Upper panel	1
(2)	Lower panel	1
(3)	Hook	1
(4)	Clamp	4
(5)	Screw, 6 x 20 mm	2
(6)	Screw, 6 x 25 mm	4
(7)	Flat washer	6
(8)	Nut	4
(9)	Trim clip	6

TOOLS AND SUPPLIES REQUIRED

Hex wrench (4 mm)
Wrench (10 mm)
Torque wrench
Drill bit (5/16 inch)
Power drill

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N-m	kgf-m	lbf-ft
Screw	6.8	0.69	5


USE AND CARE INFORMATION

- This accessory will create the need for more frequent air cleaner maintenance. Service the air cleaner daily when operating in dusty conditions.
- Check the accessory mounts frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, first rinse it thoroughly with cool water to remove loose dirt, and then wash it with warm, soapy water and a clean cloth or sponge.
- Do not use a brush to clean this accessory as it may scratch the surface.
- Never use petroleum solvents such as gasoline, thinner and benzene to clean this accessory. Also do not use acid or alkaline cleaners.

INSTALLATION

NOTE


- Install this rear panel before installing the roof or door kits.
1. Release and raise the cargo bed to expose the frame behind the front seats.
 2. Remove the seat back cushions by removing the five screws as shown.

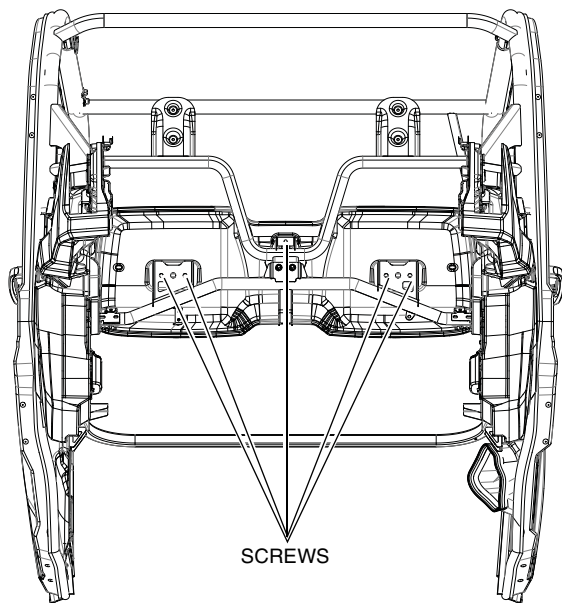


3. Align the lower panel in place (texture side facing rearward) with the inside of the frame, where the seat cushion was removed.

Fit the driver's side of the lower panel in place first, installing the lower panel around the handle and behind the seat belt, as shown.


Flex out the lower panel to slide it behind the passenger seat belt. The lower panel should now be fully in place.

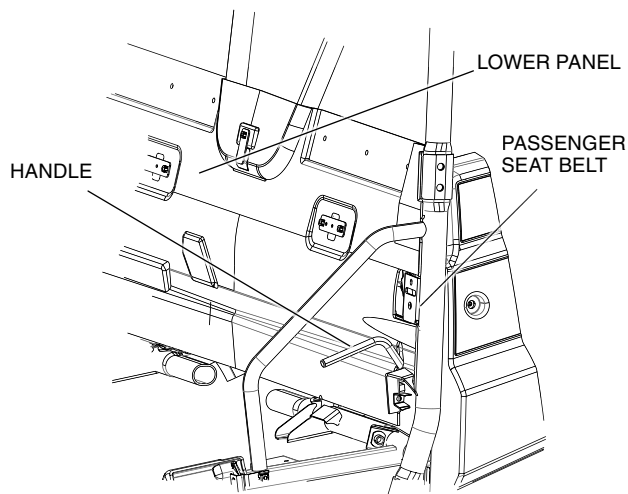



4. Re-install the seat back cushions over the lower panel using four of the screws removed in Step 2 as shown.

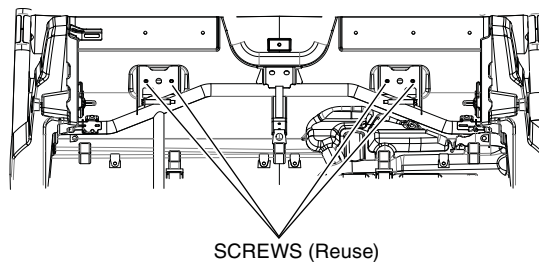


5. Install a 6 x 20 mm screw and flat washer into the middle hole location.

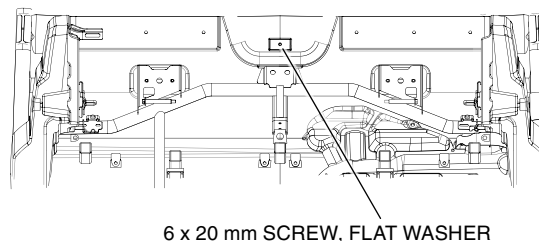


6. Install the hook onto the smooth side of the upper panel using a 6 x 20 mm screw and flat washer.

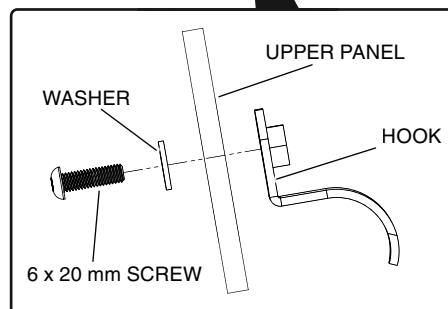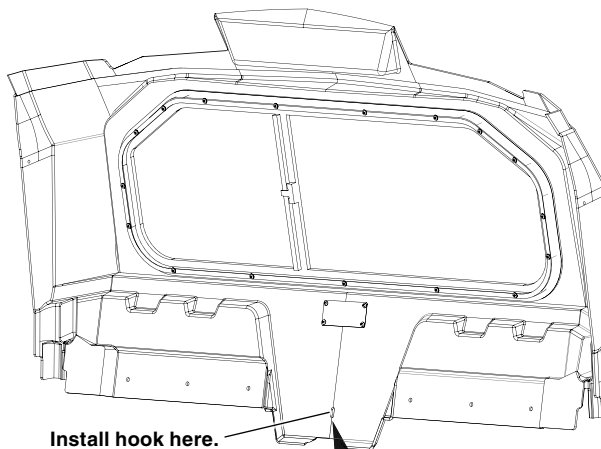



7. Place the upper panel on the outside of the frame. Align the upper panel with the lower panel by sliding the slots from the upper panel over the lower panel. (The cargo bed must be halfway between open and closed.)

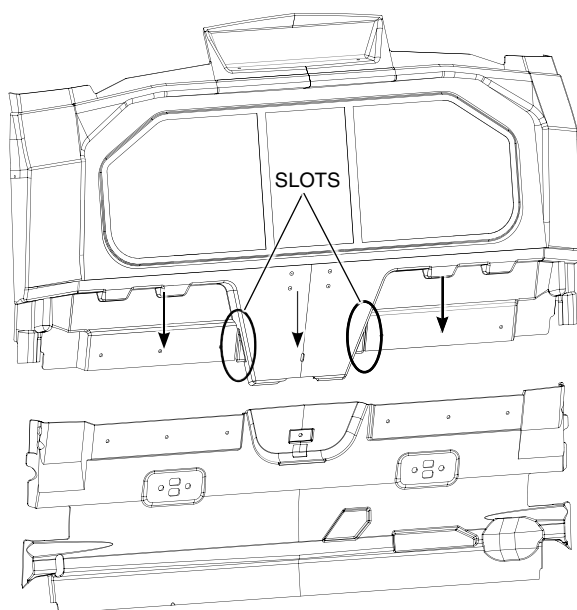

8. Ensure the hook on the upper panel secures onto the frame as shown.

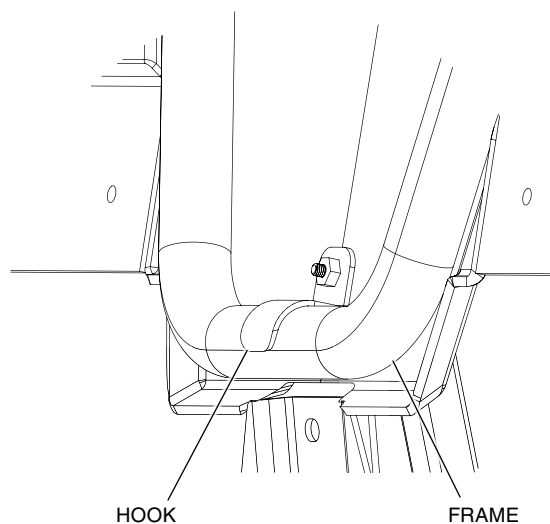


9. Attach four clamps onto the cab frame at the indicated locations. Secure the upper panel to the clamps using four 6 x 25 mm screws, flat washers and nuts.

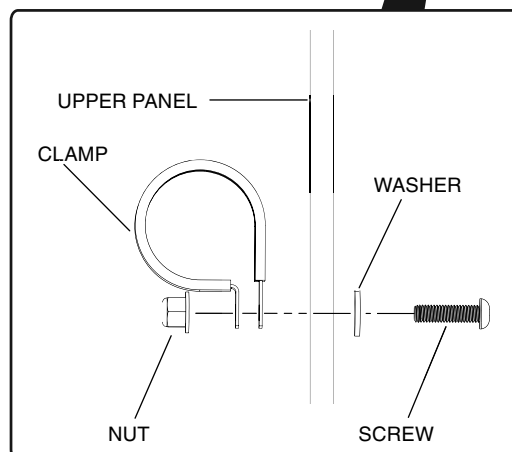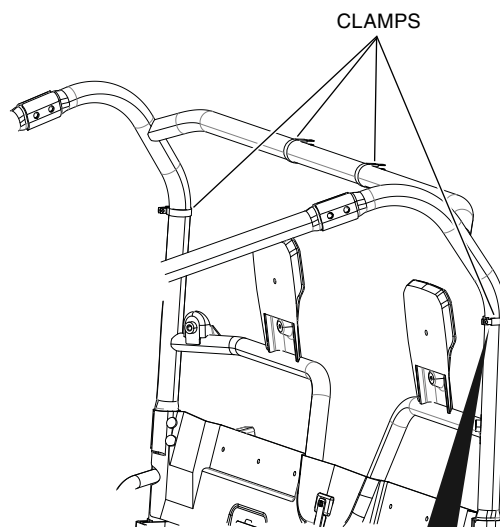

10. Lower the cargo bed. Using the lower panel as a template, drill six holes into the upper panel using a 5/16 inch drill bit.

NOTICE

- Drill shallow, only penetrating through the upper panel so as not to damage the seats.

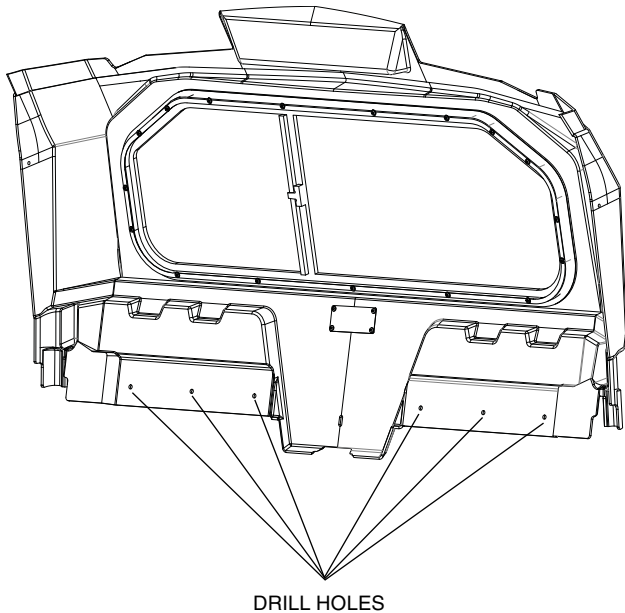

11. Fasten the lower and upper panels together at the locations drilled in Step 10, using six trim clips.

