



INSTALLATION INSTRUCTIONS

Accessory

REARVIEW MIRROR
P/N 0SV05-HL4-201

Application

SXS1000M3/M3P/M5D/M5P

Publication No.


MII 15262

Issue Date

August 2015

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

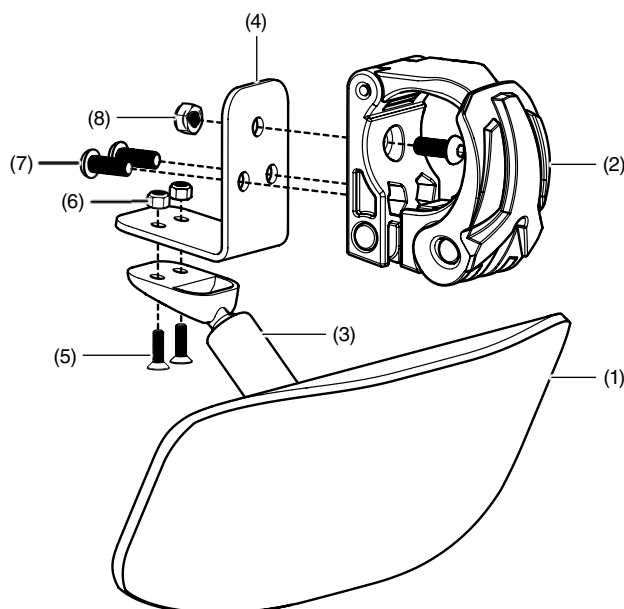

No.	Description	Qty
(1)	Rearview mirror	1
(2)	Cam lock	1
(3)	Mirror stem	1
(4)	Bracket	1
(5)	4 x 14 mm screw	2
(6)	4 mm lock nut	2
(7)	6 x 16 mm socket bolt	3
(8)	6 mm lock nut	1

TOOLS AND SUPPLIES REQUIRED

2.5 mm hex wrench 4 mm hex wrench

7 mm socket 10 mm socket

Ratchet

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
Mirror	2.8	0.29	2.1
6 mm bolt and nut	5	0.5	4
4 mm screw and nut	1	0.1	0.7


USE AND CARE INFORMATION

- Check the accessory mount frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, then wipe with a clean cloth or sponge.
- Do not use a brush to clean this accessory as it may scratch the surface.
- Never clean with, or expose this accessory to petroleum solvents such as gasoline, thinner, benzene, acid, or alkaline cleaners.


INSTALLATION

NOTE:


Remove and discard the rubber shipping band from the cam lock before installation of this accessory.

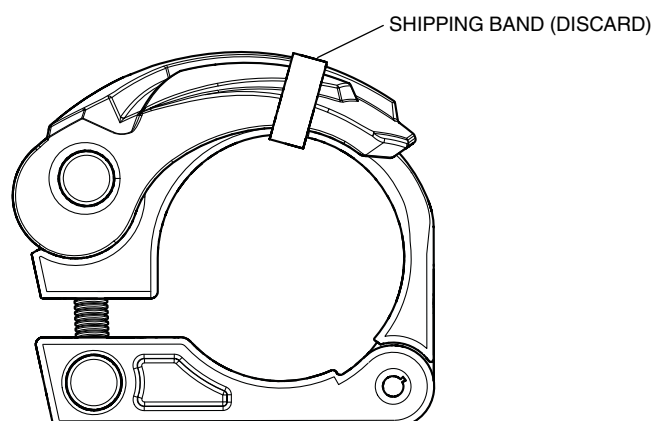


1. Insert two 6 x 16 mm socket bolts through the holes in the bracket and thread them into the base of the cam lock as shown.
2. Install the remaining 6 x 16 mm socket bolt through the hole in the base of the cam lock and pass it through the bracket as shown.
3. Install a 6 mm lock nut and tighten to the value specified in the Torque Chart.

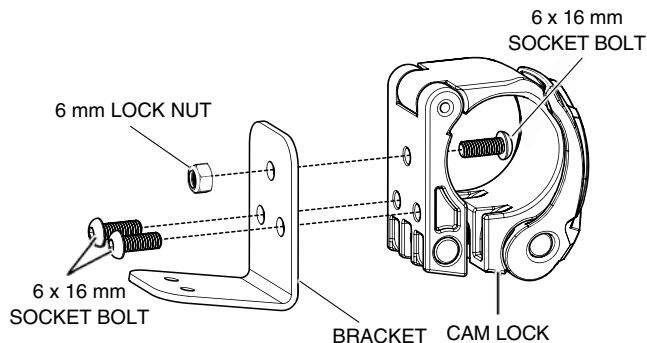


4. Insert two 4 x 14 mm screws through the slots in the base of the mirror stem and pass them through the holes in the bracket as shown.
5. Install two 4 mm lock nuts and tighten them to the value specified in the Torque Chart.

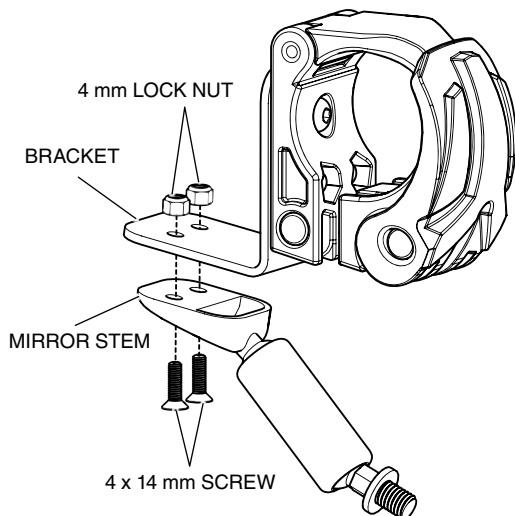

6. Thread the mirror onto the end of the mirror stem and tighten it to the value specified in the Torque Chart. Do not over-tighten the mirror it may break.

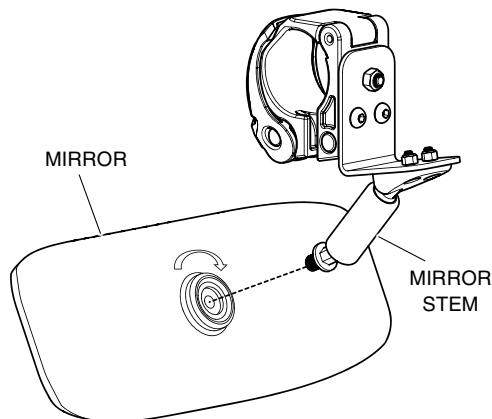

7. Clamp the mirror cam lock onto the center of the forward cab frame cross bar as shown.

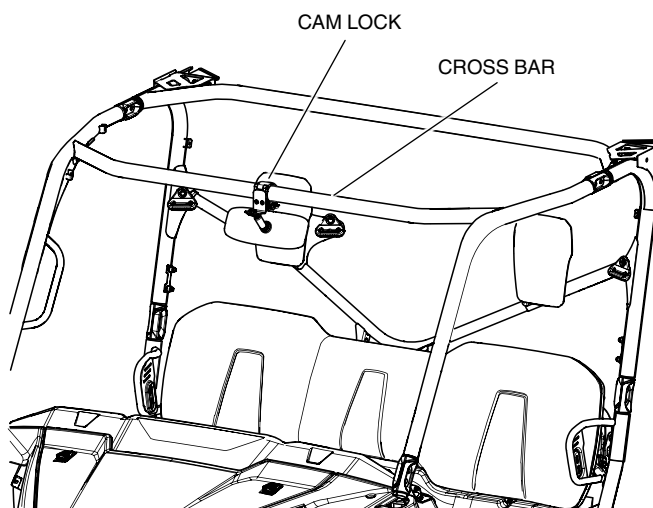

8. Adjust the cam lock tension by rotating the threaded arm clockwise to tighten, counter-clockwise to loosen.

