



INSTALLATION INSTRUCTIONS

Accessory

SIDE MIRRORS
P/N 0SV05-HL5-100

Application

SXS500M2
SXS700M4/M2
MUV700


Publication No.

MII 14948

Issue Date
Revised
November 2016

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

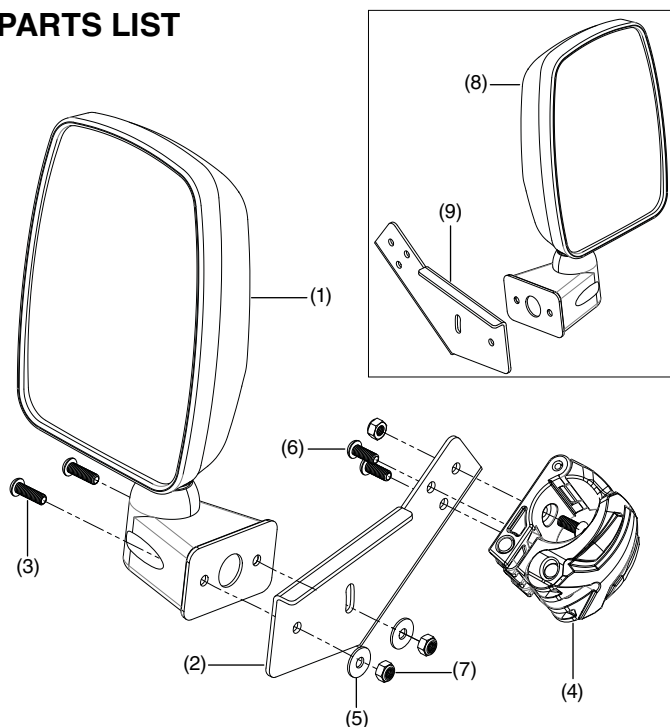

No.	Description	Qty
(1)	Left mirror	1
(2)	Left bracket	1
(3)	6 x 20 mm socket bolt	4
(4)	Cam lock	2
(5)	Washer	4
(6)	6 x 16 mm socket bolt	6
(7)	Lock nut	6
(8)	Right mirror	1
(9)	Right bracket	1

TOOLS REQUIRED

Hex wrench (4 and 6 mm)

Wrench (10 mm)

Torque wrench

Power drill

1/4 inch drill bit

TORQUE VALUES

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.


Item	N·m	kgf·m	lbf·ft
6 x 20 or 25 mm bolt and lock nut	1	0.1	0.8
6 x 16 mm bolt and lock nut	10	1.0	7

USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, and then wash with warm, soapy water and a clean cloth or sponge.
- Do not use a brush to clean this accessory as it may scratch the surface.
- Never use petroleum solvents such as gasoline, thinner, or benzene to clean this accessory. Also do not use acid or alkaline cleaners.
- Side mirrors are not intended for on-road use.


NOTE

- Remove and discard the rubber shipping spacer from the cam lock before installation of this accessory.

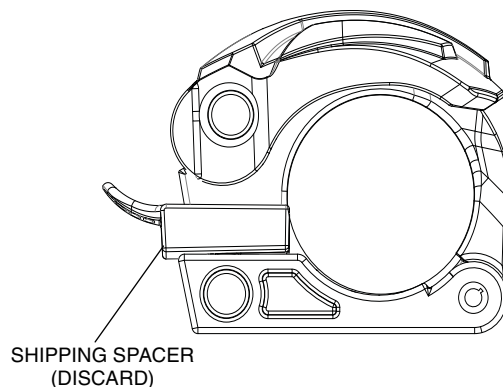


INSTALLATION TO CAB FRAME


1. Insert one 6 x 16 mm bolt into the slot in the base of the cam lock and pass it through the hole in the bracket shown.
2. Install a nut and tighten it to the value specified in the torque chart.
3. Install two 6 x 16 mm hex bolts through the holes in the bracket and into the base of the cam lock as shown.

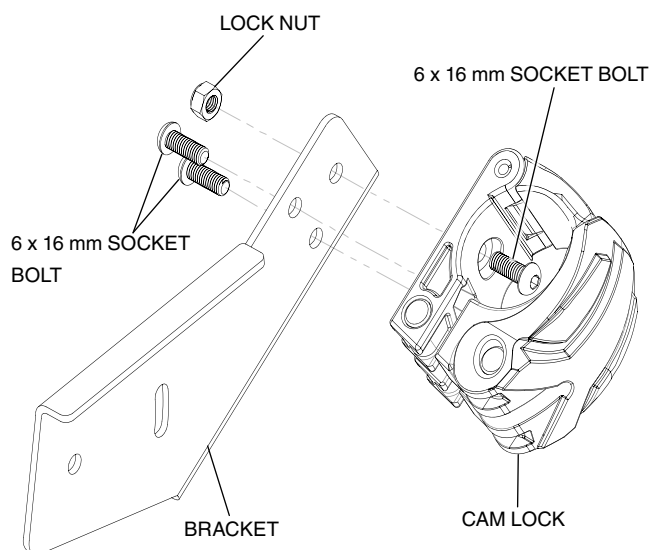

4. Insert two 6 x 20 mm socket bolts through the slots in the base of the mirror and pass them through the holes in the bracket as shown.
5. Install two washers and two nuts and tighten them to the value specified in the torque chart.



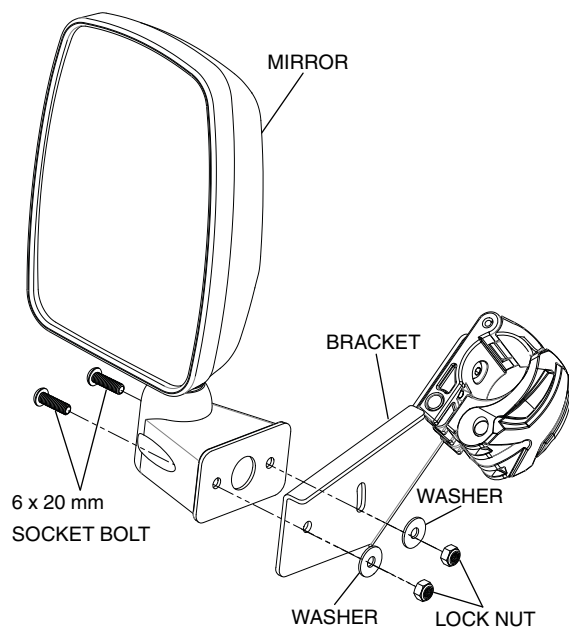


5. Clamp the assembled mirror onto the left A-pillar in the desired location.

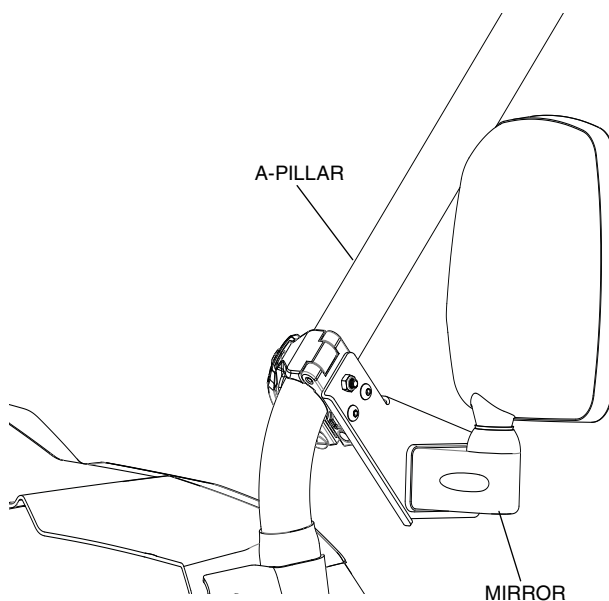

6. Adjust cam lock tension by rotating the threaded arm clockwise to tighten, counter-clockwise to loosen.


THREADED ARM

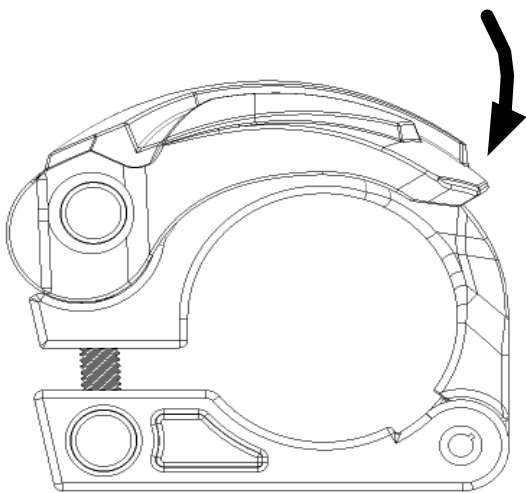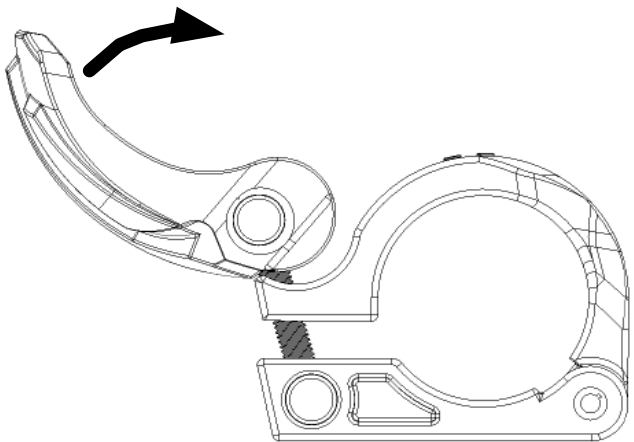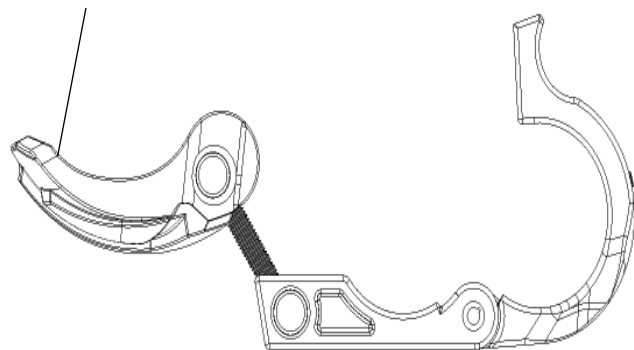

7. Repeat Steps 1 through 6 for the right side mirror.

INSTALLATION TO HARD DOOR

1. Locate the cross hatch marks on the inside of the left door. Drill through the cross hatch marks using a 1/4 inch drill bit.

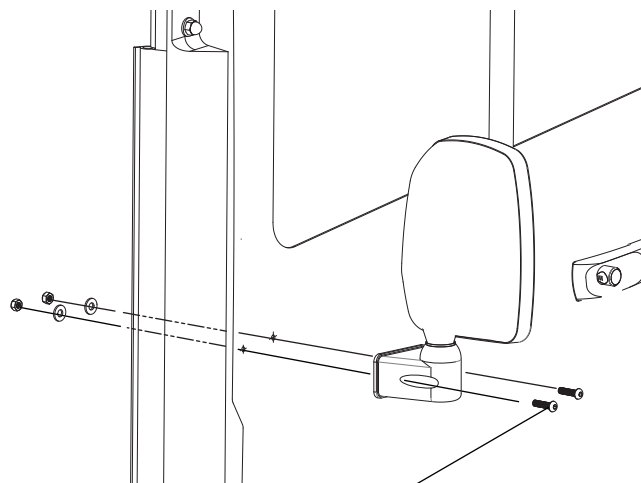

SCREW
TORQUE: 5 lbf-ft (6.8 N-m, 0.69 kgf-m)

2. Align the left mirror with the holes drilled in Step 1. Insert two screws from the outside. Fasten the mirror using two washers and two nuts.
3. Repeat Steps 1 and 2 for the right side mirror.