



INSTALLATION INSTRUCTIONS

Accessory

REAR VIEW MIRROR
P/N 0SV06-HL6-A00

Application

SXS1000S2R
SXS1000S2X
SXS1000S4
SXS1000S4D

Publication No.


MII 16561

Issue Date

August 2019

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

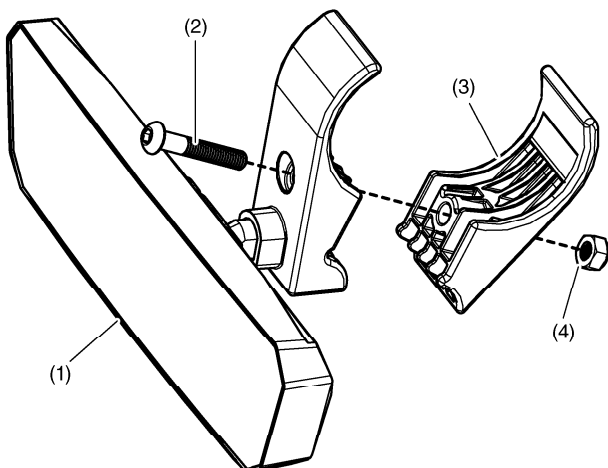

No.	Description	Qty
(1)	Rearview mirror	1
(2)	35 mm button head bolt	1
(3)	Clamp	1
(4)	Lock nut	1

TOOLS REQUIRED

Torque wrench
4 mm hex wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values.


Item	N·m	kgf·m	lbf·ft
Bolt	5	0.5	4

USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt and then wash with a clean cloth or sponge.
- Do not use a brush to clean this accessory as it may scratch the surface.
- Never use petroleum solvents such as gasoline, thinner, benzene, acid, or alkaline cleaners.

INSTALLATION

1. Position the base of the mirror around the OPS crossbar just to the right of the roof's center mounting location.

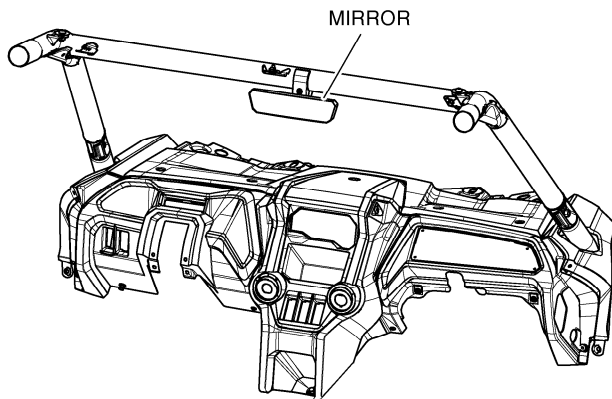

2. Insert the lock nut into the recessed area on the back side of the clamp, then insert the 35 mm button head bolt through the hole in the base of the mirror and thread it into the clamp as shown. Tighten the hardware to the torque value on page 1.

